

Operating and installation instructions



Oven H 5360 BP, H 5460 BP

To avoid the risk of accidents or damage to the appliance it is **essential** to read these instructions before it is installed and used for the first time.

en - GB

M.-Nr. 07 644 430

Contents

Warning and Safety instructions	5
Caring for the environment	10
Guide to the appliance	11
H 5360 BP, H 5460 BP	11
Features	12
Oven controls	12
Safety features	12
System lock	12
Safety switch-off	12
Cooling system	12
Vented oven door	12
Energy saving features	13
User instructions	13
PerfectClean treated surfaces	14
Pyrolytic cleaning	14
Energy efficiency rating according to EN 50304	14
Accessories	14
Baking tray, universal tray and rack with non-tip notches	14
Anti-splash insert (depending on model)	15
Handle (depending on model)	15
Food probe	15
Descaling tablets, plastic tube with clip	15
Controls	16
Function selector	16
Temperature selector	17
Sensors	17
Keypad tone	17
Display	18
Functions	20
Before using for the first time	22
Automatic programmes	24
Manual operation	25
More about manual operation	26
To select a function	26
Selecting a temperature	26
Recommended temperatures	26

Contents

To change the temperature	26
Heating-up phase	27
Pre-heating the oven	27
Entering the Duration, a Start time or Finish time	28
To enter the time	28
To use Automatic switch-off	29
Delaying the start with Automatic switch-off	29
Sequence of the cooking programme when using Automatic switch-off	30
Changing or deleting an entered cooking time	30
Activating moisture reduction	31
Minute minder	32
Settings	33
Language 	33
Time	34
Display	34
Clock format	34
To set the time of day	34
Lighting	35
Catalyser	35
Cooling fan run-on	35
Pyrolytic	36
Heating phase	36
Recommended temperatures	36
Display	36
Contrast	36
Brightness	36
Volume	36
Buzzer tones	36
Keypad tone	37
Frequency	37
Safety	37
System lock 	37
To switch off the safety lock for one cooking programme	37
Temperature format	38
Showroom programme	38
To switch the demo programme off	38
Factory default	38

Contents

Cleaning and care	39
Appliance front	39
Accessories	40
Baking tray, universal tray, anti-splash insert (if applicable)	40
Rack, runners	40
Food probe	40
PerfectClean	41
Oven interior	43
Manual cleaning of the oven interior	43
Pyrolytic cleaning of the oven interior	44
To remove the oven door	47
To dismantle the oven door	48
To refit the door	51
To remove the runners	52
To lower the top heat/grill element	53
Problem solving guide	54
After sales service	57
Optional accessories	58
Electrical connection	60
Building-in diagrams	61
Appliance and niche dimensions	61
Front dimensions	62
Installing the oven	63

Warning and Safety instructions

This appliance conforms to current safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the appliance, please read these instructions carefully before using it for the first time. They contain important notes on installation, safety, use and maintenance.

Keep these instructions in a safe place and ensure that new users are familiar with the contents. Pass them on to any future owner.

► This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised whilst using it, or have been shown how to use it correctly by a person responsible for their safety.

Safety with children

► This appliance is not a toy! To prevent the risk of injury or damage do not let children play with the appliance or its controls.

► Older children may only use the oven when its operation has been clearly explained to them and they are able to use it safely, recognising the dangers of misuse.

► Great care should be taken to ensure that children do not touch the appliance when it is being used. Children's skin is far more sensitive to high temperatures than that of adults. External parts of the oven such as the door glass, control panel and the vent become quite hot.

► The oven door gets much hotter during pyrolytic operation than during normal use.

Make sure children cannot touch the oven whilst a pyrolytic programme is running. Danger of burning.

Correct application

► The appliance is intended for domestic use to cook food, and in particular to bake, roast, grill, cook, defrost and dry fruit. Any other usage is at the owner's risk and could be dangerous. The manufacturer cannot be held liable for damage resulting from incorrect or improper use or operation.

Warning and Safety instructions

Technical safety

► Installation, maintenance and repairs may only be carried out by a suitably qualified and competent person in strict accordance with current national and local safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

► Before installation, check the appliance for visible signs of damage. Do not install and use a damaged appliance. A damaged appliance could be dangerous.

► The electrical safety of this appliance can only be guaranteed when continuity is complete between it and an effective earthing system. It is most important that this basic safety requirement is present and tested regularly, and where there is any doubt the household wiring system should be inspected by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).

- Before connecting the appliance, make sure that the connection data on the data plate (voltage and connected load) match the mains electricity supply. This data must correspond in order to avoid the risk of damage to the appliance. Consult a competent person if in doubt.
- Do not connect the appliance to the mains electricity supply by a multi-socket unit or an extension lead. These do not guarantee the required safety of the appliance (e.g. danger of overheating).
- For safety reasons, this appliance may only be used when it has been built in.
- Never open the housing of the appliance. Tampering with electrical connections or components and mechanical parts is highly dangerous to the user and can cause operational faults.
- While the appliance is under guarantee, repairs should only be undertaken by a service technician authorised by the manufacturer. Otherwise the guarantee will be invalidated.

Warning and Safety instructions

► During installation, maintenance and repair work, the appliance must be disconnected from the mains electricity supply. It is only completely isolated from the electricity supply when:

- the mains fuse is disconnected,
- the screw-out fuse is removed (in countries where this is applicable),
- it is switched off at the isolator.

Ensure that current is not supplied to the appliance until after maintenance or repair work has been carried out.

► Faulty components must only be replaced by genuine Miele original spare parts. The manufacturer can only guarantee the safety of the appliance when Miele replacement parts are used.

► If the supply cord is damaged, it must be replaced by a Miele approved service technician to avoid a hazard.

► This appliance may only be used in mobile installations such as ships, caravans, aircraft etc. if a risk assessment of the installation has been carried out by a suitably qualified engineer.

► In countries where there are areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the guarantee.

Correct use

Caution. Danger of burning.
High temperatures are produced by the oven.

► Use oven gloves when placing food in the oven, turning or removing it and when adjusting oven shelves etc. in a hot oven. Be very careful that you do not burn yourself on the top heating/grill element.

► Never leave the appliance unattended when cooking with oil or fats, as these are a fire hazard if allowed to overheat.

► Do not exceed the recommended grilling times when using the Full grill  Economy grill  and Fan grill  functions. Excessively long grilling times can lead to food drying out and burning, or could even cause it to catch fire.

► Do not use the Full grill , Economy grill  or Fan grill  to finish baking par-cooked rolls or bread or to dry flowers or herbs. Fire hazard. Use Fan plus  or Conventional heat  instead.

Warning and Safety instructions

► If using alcohol in your recipes, high temperatures can cause the alcohol to vaporise and even to ignite on the hot heating elements.

Alcohol should be burnt off before the dish is placed in the oven to avoid this danger.

► Cover any food which is left in the oven to be kept hot. Any moisture in the food could lead to corrosion damage in the oven. This also prevents the food from drying out.

► If you wish to complete a cooking process using the residual heat in the oven, leave the oven at the function selected and select the lowest temperature for that function. Do not switch the appliance off until the food has been removed. Increased moisture in the oven could cause condensation to form which could lead to

- corrosion inside the oven.
- damage to the control panel, worktop and surrounding kitchen furniture.

► Do not line the floor of the oven with aluminium foil when using Conventional heat /Bottom heat /Intensive bake .

This would cause a build-up of heat which could cause damage to the floor of the oven.

For this reason do not place a dish, tin or baking tray directly on the oven floor.

If using a tray made by a different manufacturer, make sure that there is a gap of at least 6 cm between the bottom of the tray and the floor of the oven.

► Never add cold water to food on a hot universal tray, baking tray or directly onto food in a hot oven. The steam created could cause serious burns or scalding and the sudden change in temperature can damage the enamel.

► Always ensure that food is suitably cooked or reheated.

Some foods may contain micro-organisms which are only destroyed by thorough cooking at temperatures over 70°C for a minimum of 10 minutes. Therefore when cooking or reheating foods, e.g. poultry, it is particularly important that food is fully cooked through. If in doubt select a longer cooking or reheating time.

It is important that the heat is allowed to spread evenly throughout the food being cooked. This can be achieved by stirring and/or turning the food during cooking.

► If using plastic containers for cooking, they must be declared by the manufacturer as being suitable for use in an oven. Other types of plastic containers melt at high temperatures, and could damage the oven.

Warning and Safety instructions

- Do not heat up unopened tins or jars of food in the oven. Pressure can build up and they may explode, resulting in injury or damage.
- Do not push pots and pans around on the oven floor, as this could damage the surface.
- Do not lean or sit on an open oven door, or place heavy items on it. Make sure that nothing gets trapped between the door and the oven compartment. This could damage the oven.
The oven door can support a maximum load of 15 kg.
- Do not use the appliance to heat up the room. Due to the high temperatures radiated, objects near the appliance could catch fire.
- Only use the Miele food probe supplied with this oven. If a replacement is necessary it can be obtained from the Miele Spare Parts Department or your Miele Dealer.
- When not in use do not leave the food probe in the oven, especially when grilling.
The high temperatures used for grilling could cause plastic components on the food probe to melt.

The manufacturer cannot be held liable for damage caused by non-compliance with these Warning and safety instructions.

Accessories

- Only use genuine Miele spare parts and accessories with this appliance. If spare parts or accessories from other manufacturers are used, this will invalidate the guarantee, and Miele cannot accept liability.

Caring for the environment

Disposal of the packing material


The transport and protective packing has been selected from materials which are environmentally friendly for disposal, and can normally be recycled.

Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation.

Rather than just throwing these materials away, please ensure they are offered for recycling.

Disposal of your old appliance


Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of it with your household waste.

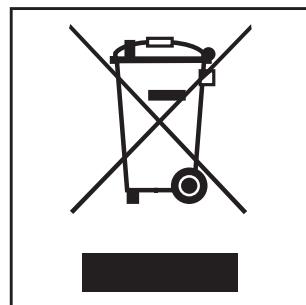

Please dispose of it at your local community waste collection / recycling centre or contact your dealer for advice. Ensure that it presents no danger to children while being stored for disposal.

It should be unplugged or disconnected from the mains electricity supply by a competent person.

H 5360 BP, H 5460 BP

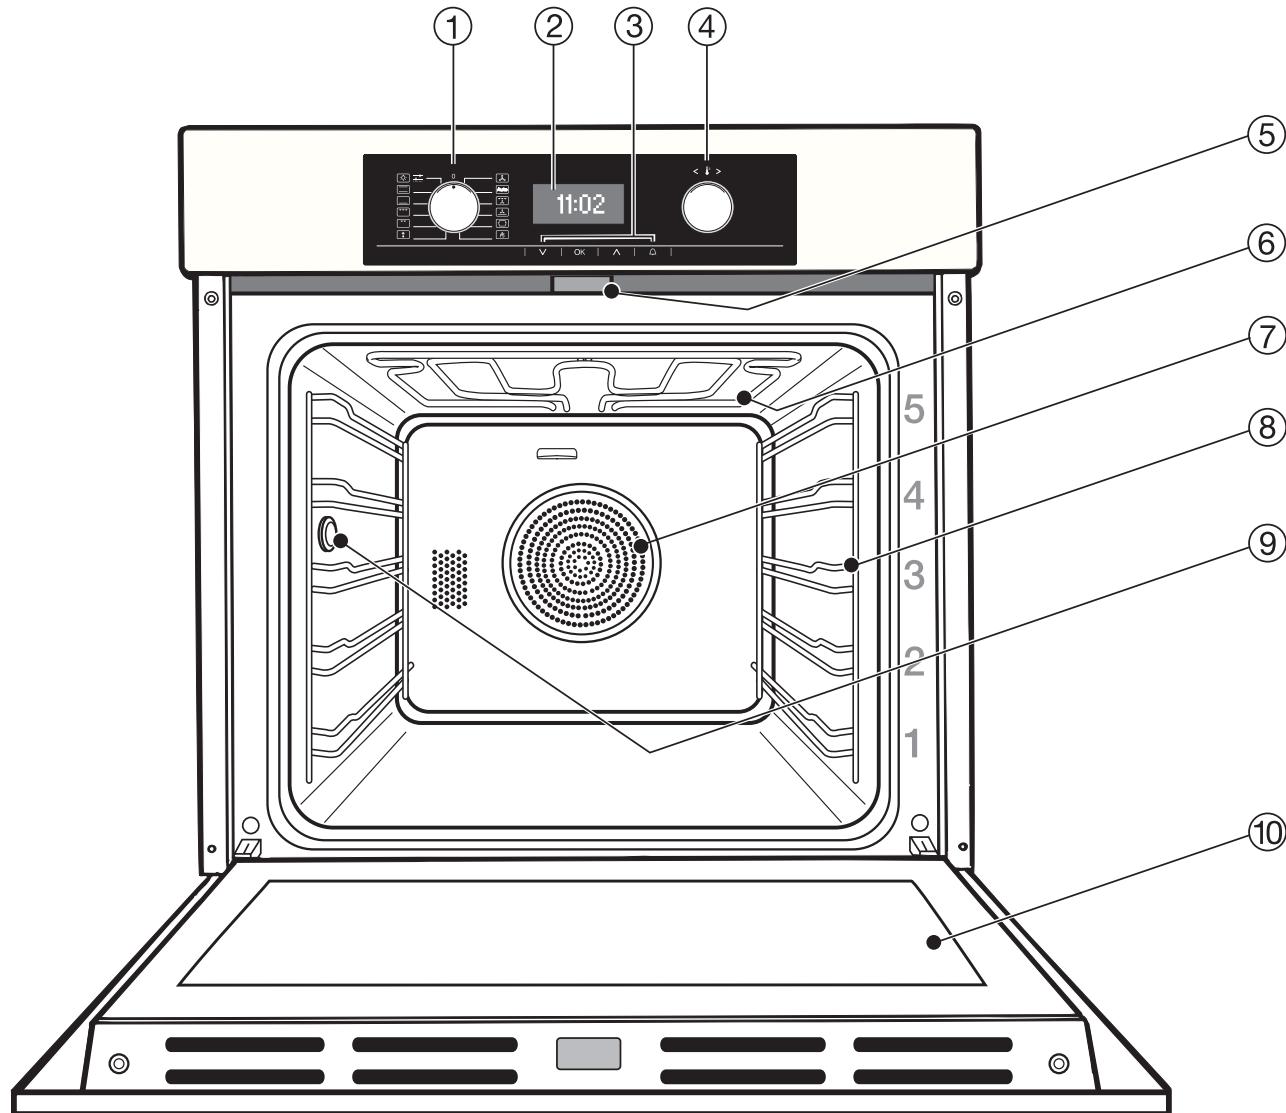

- ① Function selector, retractable when it is at "0"
- ② Display
- ③ Sensors ∇ , OK, \wedge , Δ
- ④ Temperature selector, retractable
- ⑤ Door lock for pyrolytic operation
- ⑥ Top heat/grill element
- ⑦ Back panel with air inlet for the fan
- ⑧ Side runners with five shelf levels
- ⑨ Connection socket for the food probe
- ⑩ Door

Features

Oven controls

In addition to operating the various cooking programmes to bake, roast and grill, the controls also offer the following:

- a time of day display,
- a minute minder,
- a timer for programming cooking durations,
- automatic programmes,
- settings that can be customised.

Safety features

System lock

The system lock  prevents the oven from being used unintentionally by children, for example. See "Settings - Safety".

Safety switch-off

Safety switch-off is triggered automatically if the oven is operated for an unusually long period of time. The period of time will depend on the oven function selected.

Cooling system

A cooling fan will come on automatically when a cooking programme is started. The cooling fan mixes hot air from the oven cavity with cool room air before venting it out into the kitchen through vents located between the appliance door and the control panel.

The cooling fan will continue to run for a while after the oven has been switched off to prevent any humidity building up in the oven, on the control panel or on the oven housing unit.

Vented oven door

The oven door is an open system and some of the door panes have a heat-reflecting coating. During operation, cool air is passed through the oven door to keep the outer pane cool.

If necessary, the oven door can be dismantled for cleaning.

Energy saving features

Time of day display

The time of day display will go out after 60 seconds (default setting). When the oven is switched off, the display will not light up. The time of day will, however, continue to run unseen in the background (see "Settings - Time of day - Display"). It will only appear in the display when the oven is next used.

Energy save mode

The brightness of the display will dim after a certain time to save energy.

This occurs when the oven is switched off, and at the end of an automatic programme or a programme with automatic switch-off providing the oven is not used again.

Lighting

The oven lighting is set to switch off 15 seconds after the start of a cooking programme (default setting). See "Settings - Lighting".

Door contact switch

If the oven door is opened during operation, the door contact switch automatically switches off the heating elements and the fan, if a "Fan" setting is being used. This helps reduce the amount of heat lost from the oven interior, e.g. when basting roast meat. At the same time, the oven lighting is switched on.

Using residual heat

The oven heating switches off automatically shortly before the end of a cooking programme where the cooking duration has been programmed or the food probe is being used. The residual heat in the oven is sufficient to complete the cooking process.

"Energy save" will appear in the display.

The cooling fan continues to run, as does the hot air fan if a "Fan" setting has been chosen.

User instructions

The User instructions supplied with your appliance in addition to these Operating and installation instructions contains detailed information about the following:

- Automatic programmes
- Food probe
- Baking
- Roasting
- Slow cooking
- Grilling
- Defrosting
- Bottling
- Cooking ready meals
- Automatic programme recipes

Features

PerfectClean treated surfaces

The following surfaces are all treated with a special PerfectClean finish:

- Side runners,
- Baking tray,
- Universal tray,
- Anti-splash insert,
- Rack

PerfectClean surfaces have very good anti-stick properties and are much easier to keep clean than conventional enamel, if cleaned regularly.

See "Cleaning and care" for more information.

Pyrolytic cleaning

The oven interior can be kept clean by using the Pyrolytic function.

During the pyrolytic process the oven is heated to over 400 °C. Any residual soiling is broken down and reduced to ash by the high temperatures.

See "Cleaning and care" for more information.

Energy efficiency rating according to EN 50304

This appliance is rated energy efficiency class **A** in accordance with EN 50304.

Tests were carried out using "Fan plus ".


The catalyser should be switched off during testing, see "Settings - Catalyser - Off next programme only".

Accessories

The following accessories are supplied with this oven.

These and other accessories are also available to order from the Miele Spare Parts Department, your Dealer or via the internet at www.miele-shop.com.

Baking tray, universal tray and rack with non-tip notches

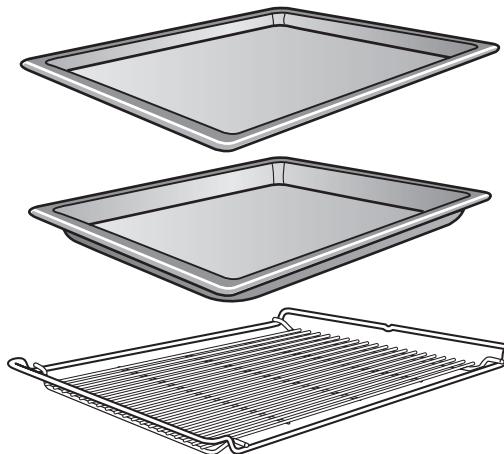


The baking tray, universal tray and rack are inserted into the oven between the two rails of a shelf runner.

The trays and rack have non-tip safety notches in the middle which prevent them being pulled right out when they only need to be partially pulled out. The trays and rack can then only be taken out of the oven by raising them upwards and then pulling them out.



If you are using a tray with the rack on top, insert the tray between the rails of a shelf runner and the rack will sit on top of it.


Anti-splash insert (depending on model)

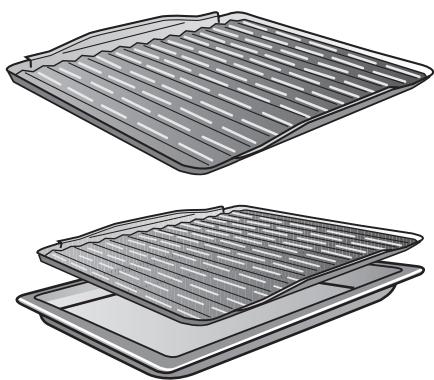

The anti-splash insert should be placed in the universal tray when grilling or roasting.


The juices from the food being cooked collect under the anti-splash insert. This prevents them from spitting and making the oven dirty. The juices can then be used for making gravy and sauces.

Handle (depending on model)

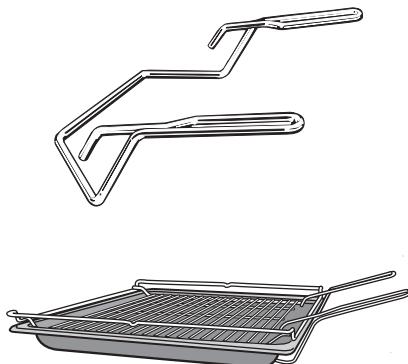

The handle makes it easier to take the universal tray, baking tray and rack out of the oven, or to put them into it. The two prongs at the top go inside the tray or above the rack, and the U-shaped supports underneath.

Food probe

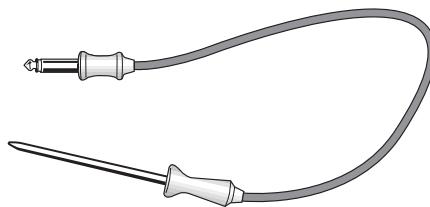

Using the food probe enables the roasting process to be monitored simply and reliably.

Shelf level 2 cannot be used in conjunction with the food probe, as this would cover the connection socket for the food probe.


Please refer to the separate "User instructions" booklet supplied with the oven for information on how to use the food probe.

Descaling tablets, plastic tube with clip



These are required for descaling the appliance.

Controls

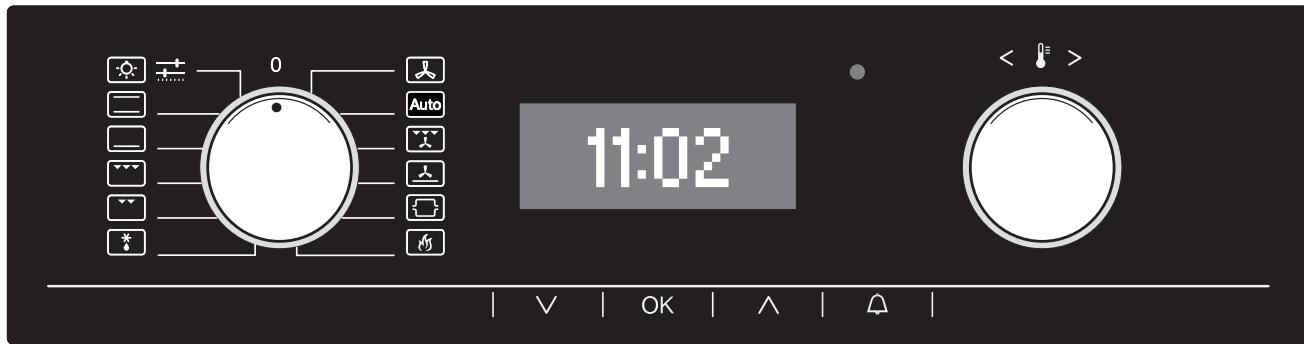

Function selector

The left-hand control is used to select the function.

It can be turned clockwise or anti-clockwise.

The function selector can only be retracted when it is at "0".

-  Fan plus
-  Automatic
-  Fan grill
-  Intensive bake
-  Auto roast
-  Defrost
-  Conventional heat
-  Bottom heat
-  Full grill
-  Economy grill
-  Pyrolytic:
cleaning function
-  Lighting:
For switching on the oven light independently. This can be useful when cleaning the oven. It also works with the door removed.
-  Settings:
From this position, you can also alter the settings of the appliance.

Temperature selector

The right-hand control <  > is used to select the temperature. It can be turned clockwise or anti-clockwise. The temperature selector can be retracted in any position.

Sensors

The sensors underneath the display react to touch. A keypad tone sounds each time a sensor is touched.

	Use
OK	<ul style="list-style-type: none">– For calling up the list of options.– For confirming an entry.
▼	<ul style="list-style-type: none">– For scrolling down the list of options.– For decreasing time entries, brightness, contrast, ...
▲	<ul style="list-style-type: none">– For scrolling up the list of options.– For increasing time entries, brightness, contrast, ...
🔔	For entering a minute minder time, e.g. for boiling eggs.

Keypad tone

The volume of the keypad tone is set to medium. You can change the volume of the keypad tone in the Settings menu. See "Settings - Volume - Keypad tone."

Controls

Display

All information about functions, temperature, cooking durations, Automatic programmes and settings is shown in the display.

The following **Information windows** or **list of options** appear in the display depending on the position of the function selector **and/or** confirmation with the OK sensor:

Position of the function selector	When the OK sensor is touched, the following appears
0	I Information window
Function (does not apply to  or )	Cooking programme list: <ul style="list-style-type: none">– Duration– Finish– Start time– Moist. reduction
	Settings list: <ul style="list-style-type: none">– Language – Time of day– Lighting– Catalyser– Cooling fan run-on– Pyrolytic– Heating phase– Recommended temperature– Display– Volume– Safety– Temperature format– Showroom programme– Factory default
	List of the Automatic programmes available. Please refer to the separate "User instructions" booklet supplied with your oven in addition to these Operating instructions for more information.

- Use the  or  sensors to scroll through the list until the option you want is highlighted.
- Then select the option with the OK sensor.

Controls

The following **Symbols** can appear in addition to the text:

Symbol	Meaning
	Duration
	Start time
	Finish
	Minute minder time
	Core temperature when using the food probe
	Arrows will appear if there are more than two options available. Use the ▲ or ▼ sensors to scroll through the list.
	The end of a list is indicated by a dotted line. By scrolling down further, you reach the beginning of the list again.
Back 	Selecting this option and confirming with OK returns you to the previous list of options.
	A tick will appear beside the option which is currently selected.
	This indicates additional information that is available. This information window can be cleared by selecting OK.
	The system lock is "Permitted". See "Settings - Safety". On = Operation not possible. Off = Operation possible.

Functions

Your oven has a range of oven functions for preparing a wide variety of recipes.

These include:

- Ⓐ Top heat/grill element (under the roof of the oven)
- Ⓑ Bottom heating element (under the floor of the oven)
- Ⓒ Ring heating element (behind the intake vent for the fan)
- Ⓓ Fan (behind the intake vent for the fan)

These components are combined in various ways, depending on the oven function selected. See the letters given in brackets for each function.

Functions	Notes
 Conventional heat [Ⓐ + Ⓑ]	<ul style="list-style-type: none">– For baking traditional recipes, e.g. fruit cake, casseroles.– Also ideal for soufflés.– If using an older recipe or cookbook, set the oven temperature for Conventional heat 10°C lower than that recommended. The cooking duration does not need to be changed.
 Bottom heat [Ⓑ]	<ul style="list-style-type: none">– Use this setting towards the end of baking to brown the base of a cake, quiche or pizza.
 Full grill [Ⓐ]	<ul style="list-style-type: none">– The whole grill element is switched on and glows red in order to create the heat required.– For grilling larger quantities of thin cuts (e.g. steaks).– For browning food in larger dishes.
 Economy grill [Ⓐ]	<ul style="list-style-type: none">– The inner part of the grill element is switched on and glows red in order to create the heat required.– For grilling larger quantities of flat cuts (e.g. steaks).– For browning food in smaller dishes.
 Defrost [Ⓒ + Ⓟ]	<ul style="list-style-type: none">– For the gentle defrosting of frozen food.

Functions

Functions	Notes
 Fan plus [C + D]	<ul style="list-style-type: none"> – For baking and roasting. – You can bake and roast on different levels at the same time. – Lower temperatures can be used than with "Conventional heat " as the Fan plus system distributes the heated air around the food.
 Automatic [depending on programme]	<ul style="list-style-type: none"> – The list of Automatic programmes available will appear in the display.
 Fan grill [A + D]	<ul style="list-style-type: none"> – The grill element and the fan switch on and off alternately. – For grilling larger items, e.g. rolled meat, poultry. – The hot air from the grill is distributed over the food by the fan. This enables a lower temperature to be selected than when using "Full grill " / "Economy grill .
 Intensive bake [B + C + D]	<ul style="list-style-type: none"> – For cooking dishes which require a moist topping and a crisp base such as pizza and quiche lorraine. – Intensive bake is not suitable for baking thin biscuits etc. or for roasting as the juices will become too dark.
 Auto roast [C + D]	<ul style="list-style-type: none"> – For roasting. <p>During the searing phase, the oven is heated up to a high temperature (230 °C) to sear the meat.</p> <p>Once this temperature has been reached, the temperature of the oven is automatically lowered to the set cooking temperature (continued roasting temperature).</p>

Before using for the first time

To enter basic settings

The oven will switch on automatically when it is connected to the electricity supply.

Welcome screen

A welcome screen will appear in the display, and you will then be requested to select some basic settings which are needed before the appliance can be used.

Follow the instructions in the display.

Setting the language

First select the language you want:

- Use the **▲** or **▼** sensor to scroll through the list until the language you want appears highlighted in the display.
- Confirm your selection with the **OK** sensor.
A tick **✓** will appear beside the language you have selected.

If you have selected the wrong language by mistake, proceed as described in "Settings - Language " to get back to the correct language.

Clock format

The request to select the Clock format will appear. The default setting for the clock is 24 h.

- Touch the **▲** or **▼** sensor until the clock format you want appears highlighted in the display.
- Confirm with "OK".

Setting the time of day

You will then be asked to enter the time of day. The hour is highlighted.

- Set the hour with the **▲** or **▼** sensor and confirm your setting with the **OK** sensor.

Then set the minutes in the same way.

Time of day display

You will then be asked when you want the time of day to show in the display:

- On
The time is always visible in the display.
- On for 60 seconds
The time is only ever visible for 60 seconds.
- Do not display:
The display remains dark.
- Use the **▲** or **▼** sensor to select the setting you want and confirm with the **OK** sensor.

The oven is now ready for use!

Cleaning and heating up for the first time

Before use, please remove

- any stickers from the oven and from any accessories.
- any protective foil from the oven front.

See "Cleaning and care" for more information.

Before using the oven for the first time

- take **all accessories** out of the oven and wash them.
- then **heat the oven up once with nothing in it**. New ovens can give off a slight smell on first use. Doing this will dissipate the smells before you use it to cook food.
- Before heating the oven up it is a good idea to wipe the interior out with a damp cloth. This way any dust or bits of packaging that may have accumulated in the oven cavity during storage and unpacking will be removed.
- Press and release the function selector and the temperature selector.
- Use the function selector to select "Fan plus ".
- The recommended temperature of 160 °C will appear.
- Use the temperature selector to set the highest temperature (250 °C).

The oven will start heating up as soon as this entry has been accepted.

- Heat the empty oven for at least an hour.

Please ensure the kitchen is well ventilated during this operation. Close doors to other rooms to prevent the smell spreading throughout the house.

The timer can also be used to set the finish time. See "To use Automatic switch-off".

- Leave the appliance to cool down to room temperature.
- Then wipe the oven interior out with a solution of hot water and a mild detergent, and dry it thoroughly with a soft clean cloth.

Leave the oven door open until the oven interior is completely dry.

Automatic programmes

Your appliance has a wide range of Automatic programmes to enable you to achieve excellent results with ease.

Simply select the programme for your food, and follow the instructions in the display.

The Automatic programmes available will appear when you select the "Automatic" **Auto** function.

A list will appear in the display.

- Auto roast (oven function)
- Slow cooking
- Cakes
- Baked goods
- Bread
- Bread mixes
- Bread rolls
- Pizza
- Meat
- Poultry
- Fish
- Bakes/gratin
- Frozen food

■ Select the option you require.

Each Automatic programme has a submenu with further options which will now show in the display.

Each step you need to take before starting the Automatic programme will appear in the display.

Depending on the programme you have selected, further information or prompts will appear regarding

- the roasting or baking dish,
- the shelf level,
- the use of the food probe,
- the cooking duration.

For further information about the Automatic programmes, including a selection of recipes, please refer to the "User instructions" book.

To operate the oven manually, switch the appliance on, select the oven function and temperature, then switch it off again once you have finished cooking.

- Place the food in the oven.
- Select the function you want (e.g. Fan plus .

The following will appear in the display:

- The function selected (in this example, Fan plus).
- The recommended temperature "160".
- Change the temperature in the display if necessary, using the temperature selector.

The oven heating and the cooling fan will switch on.

The lighting switches off automatically after approx. 15 seconds. If you wish, you can set the lighting to be on all the time. See "Settings - Lighting".

You can follow the progress of the programme in the display.

In addition to the cooking function and temperature, the words "Heating-up phase" will show in the display until the oven has reached the temperature selected.

Once the temperature selected has been reached

- "Heating-up phase" will go out in the display.
- A signal will sound (provided this is activated - see "Settings - Volume - Buzzer tones").

If you touch the OK sensor during a cooking programme, the duration, start time, finish and moisture reduction options will appear.

- At the end of the programme, turn the function selector to "0" and remove the food from the oven.

The cooling fan will continue to run for a while after the oven has been switched off to prevent any humidity building up in the oven, on the control panel or on the oven housing unit.

When the temperature in the oven has fallen sufficiently, the cooling fan will switch off automatically.

You can change the default setting for this (see "Settings - Cooling fan run-on").

More about manual operation

Automatic switch-off can be selected when operating the oven manually. You can also adjust the heat-up phase and the humidity level inside the oven.

To select a function

- Select the required function.

The function and recommended temperature are displayed.

- Touch the "OK" sensor.

Options which can be entered or changed will now appear in the display:

- Duration
- Start time
- Finish
- Moisture reduction
- Core temp.
(This only appears when the food probe is being used; see "Food probe" in the separate User instructions supplied with the oven).

Selecting a temperature

Recommended temperatures

As soon as a cooking function is selected, the **recommended temperature** will appear in the display.

Function	Recommended temperature
 Fan plus	160 °C
 Intensive bake	170 °C
 Conventional heat	180 °C
 Bottom heat	190 °C
 Fan grill	200 °C
 Full grill	240 °C
 Economy grill	240 °C
 Defrost	25 °C
 Auto roast*	160 °C

* Initial searing phase temperature approx. 230 °C, then drops to 160 °C for continued roasting

To change the temperature

If the recommended temperature is not suitable, you can use the temperature selector to change it.

As soon as you turn the temperature selector, the temperature range for that function will appear in the display. The temperature can be changed in increments of 5 °.

You can also change the recommended temperature for a function permanently if you wish, see "Settings - Recommended temperatures".

Heating-up phase

"Heating-up phase" will appear in the display until the set temperature has been reached for the first time.

Once the temperature selected has been reached

- "Heating-up phase" will go out in the display.
- A signal will sound (provided this is activated - see "Settings - Volume - Buzzer tones").

When using Fan plus , Conventional heat  and Auto roast , all the heating elements and the fan are set at the factory to switch on during the heating-up phase so that the temperature required is reached as quickly as possible.

You can alter this default setting, if wished. See "Settings - Heating-up phase".

Pre-heating the oven

Most dishes can be placed in a cold oven. They will then make use of the heat produced during the heating-up phase.

It is only necessary to pre-heat the oven in a few instances:

With **Fan plus** 

- for foods which cook in less than 20 minutes and for foods such as puff pastries and yeast mixtures where instant heat is required to make them rise quickly.
- for roasting beef/fillet.

With **Conventional** 

- it is usually necessary to pre-heat the oven.

Change the setting for the heating-up phase from "Rapid" to "Normal" when baking pizza or biscuits and small cakes, otherwise they will brown too quickly from the top. See "Settings - Heating-up phase".

To pre-heat the oven:

- Select the required function and set the temperature.
- Wait for the oven to heat up.
- Then place the food in the oven.

More about manual operation

Entering the Duration, a Start time or Finish time

By entering the Duration, Start time or Finish time, the cooking process can be programmed to switch off, or on and off, automatically.

– Duration

When entering the Duration, you are entering the time that the food takes to cook.

Once this time has elapsed, the oven heating switches off automatically. The maximum duration that can be entered is 9 hours 59 minutes.

The Duration cannot be entered if the food probe is being used as in this case the length of the cooking programme depends on the core temperature being reached.

– Start time

By entering the Start time, you specify the time you want cooking to start. The oven will switch on automatically at the time you have set.

The Start time can only be used in conjunction with Duration or Finish, except when using the food probe.

– Finish

By entering the Finish time, you specify the time you want cooking to finish. The oven will switch off automatically at the time you have set.

A Finish time cannot be entered if the food probe is being used as in this case the end of the cooking programme depends on the core temperature being reached.

To enter the time

- Select the required function and set the temperature.
- Touch the OK sensor.
- Using the **▲** or **▼** sensors, scroll through until the option required (Duration, Start time or Finish) is highlighted.
- Touch the OK sensor.

Depending on the option selected, the following will come up in the display:

- Duration: 0 : 00 h : min
- Start time: - - : - -
- Finish: - - : - -

The hour (to the left of the colon) is highlighted.

- Use the **▲** or **▼** sensors to first select the hour, and confirm your selection with the OK sensor.

After setting the hour, the minutes will be highlighted.

- Now use the **▲** or **▼** sensors to select the hour, and confirm your selection with the OK sensor.

If no cooking duration has been entered, and you have simply entered a Start time or Finish, then

- touching the **▲** sensor adds an hour to the time of day
- touching the **▼** sensor deducts an hour from the time of day.

To use Automatic switch-off

To switch a programme off automatically

select Duration or Finish and enter the time required.

Example:

The time is 11:45. Your dish will take 30 minutes to cook, and needs to be ready at 12:15.

Select Duration, and enter 0:30 h, or select Finish and enter 12:15.

The oven will switch off automatically at the time set.

Delaying the start with Automatic switch-off

We recommend using automatic switching on and off when roasting. However, do not delay the start for too long when baking as the cake mixture or dough will dry out, and the raising agents will lose their effectiveness.

To switch a programme on and off automatically you have various options:

- Enter the Duration and Finish time.
- Enter the Start time and the Duration.
- Enter the Start time and the Finish.

Example:

The time is 11:30. Your dish will take 30 minutes to cook, and needs to be ready at 12:30.

Select Duration and enter 0:30 h.

Then select Finish and enter 12:30 h.

The Start time will be calculated automatically. "Start at 12:00" will appear in the display.

The cooking programme will start at this time.

More about manual operation

Sequence of the cooking programme when using Automatic switch-off

The following will appear in the display:

Before the programme starts

- The cooking function and selected temperature
- "Start at" and the start time

After the programme has started

- The heating-up phase until the set temperature is reached
- Once this temperature is reached, a tone will sound (provided this is activated - see "Settings - Volume - Buzzer tones").

After the heating-up phase

- The "Time left" counting down can be followed in the display,

Shortly before the end of the programme

- The oven heating switches off.
- The cooking programme continues using residual heat. The residual heat in the oven is sufficient to complete the cooking process.
- "Use residual heat" will show in the display.
- The cooling fan continues to run, as does the hot air fan if a "Fan" setting has been chosen.

At the end of the cooking programme

- The hot air fan switches off, depending on the cooking function being used.
- The "Prog. finished" message will appear in the display.
- A tone will sound (provided this is activated - see "Settings - Volume - Buzzer tones").

After the programme has finished

- The cooling fan will continue to run for a while after the oven has been switched off to prevent any humidity building up in the oven, on the control panel or in the oven housing unit.

The fan is temperature controlled and will switch off automatically. You can change the default setting for this (see "Settings - Cooling fan run-on").

- To save energy, the oven will switch off automatically if it is not used again within a certain time. The timing depends on the settings selected (cooking function, temperature, duration).

Changing or deleting an entered cooking time

- Touch the OK sensor.
- Select "Duration" with the OK sensor.
- Use the **V** sensor to set the time to "- :- -".

If there is a power cut, all data entered will be deleted.

Activating moisture reduction

It is a good idea to use this function when cooking items which are moist on the inside but which should be crispy on the outside, e.g. frozen chips, croquettes or pork with crackling.

It is also suitable for deep filled fresh fruit cakes, such as plum or apple cake.

You can activate Moisture reduction with any function.

For best results, activate it at the beginning of the cooking programme.

- Place the food in the oven.
- Select the required function and set the temperature.
- Touch the OK sensor.

The list of options will show in the display.

- Use the \wedge or \vee sensor to select "Moist.reduction", and confirm with the OK sensor.
- Use the \wedge or \vee sensor to select "On", and confirm with the OK sensor.

Minute minder

The minute minder can be used to time any activity in the kitchen, e.g. boiling eggs.

You can enter a time of up to a maximum of 9 hours and 59 minutes.

You can set the minute minder at the same time as another timed programme, e.g. as a reminder to stir a dish or add seasoning etc.

To set the minute minder

- Touch the  sensor.
- "0 : 00 : 00 h : min : sec" comes up in the display.
The hour is highlighted.
- Use the  or  sensors to first select the hour, and confirm your selection with the OK sensor.
After setting the hour, the minutes will be highlighted.
- Now use the  or  sensors to select the minutes, and confirm your selection with the OK sensor.
After setting the minutes, the seconds will be highlighted.
- Finally, use the  or  sensors to select the seconds, and confirm your selection with the OK sensor.

The time counts down in the display.

At the end of the time set for the minute minder

- the  symbol will flash.
- A signal will sound (provided this is activated - see "Settings - Volume - Buzzer tones").
- the display will show the time counting upwards.
- Touch the  sensor.

To alter the time set for the minute minder:

- Touch the  sensor.
- Use the  sensor to scroll the minute minder through to "- : - : - -", and then set the hour, minutes and seconds, confirming each entry with OK.

To cancel the time set for the minute minder

- Touch the  sensor.
- Use the  sensor to scroll the minute minder through to "- : - : - -".
Touch the OK sensor.

Your appliance is supplied with a number of standard default settings.

Settings cannot be altered while a cooking programme is in progress.

To change a setting:

- Select "Settings".

The list of options will show in the display.

- Language 
- Time
- Lighting
- Catalyser
- Cooling fan run-on
- Pyrolytic
- Heating phase
- Recommended temperatures
- Boost
- Display
- Volume
- Safety
- Temperature format
- Showroom programme
- Factory default

- Select the setting that you want to change by touching the  oder  sensor, and confirm with OK.

- Use the  or  sensor to select the setting you want and confirm with the OK sensor.

Settings which are currently selected are marked with a .

If you do not make another selection within approx. 15 seconds after selecting a setting, the display will return to the Settings list.

Language

You can set the language you want the display to appear in.

After selecting and confirming "Language", the language you have selected will appear in the display.

If you have selected the wrong language by mistake, you can follow the flag symbol  to get back to the Language  menu.

Settings

Time

The options are:

- Display
- Clock format
- Set

If there is a power cut, the current time of day will reappear once power has been restored. The appliance will store this data for approx. 200 hours. After 200 hours it will show "12:00" and will need to be re-set.

Display

Select how you want the time to appear in the display when the oven is switched off:

– On

The time of day will always show in the display.

– On for 60 seconds

(Factory default)

The time will only show for 60 seconds if the **▲**, **▼** or OK sensor is touched.

– Do not display:

The display is off, but the time of day continues to run in the background. In order to see the time, one of the other two options must be selected.

Clock format

The time of day can be altered from a 24-hour display to a 12-hour display:

– 12 h

12 hour clock display

– 24 h

(Factory default)
24 hour clock display

To set the time of day

You cannot set the time of day while a cooking programme is in progress.

The hour is highlighted.

■ Set the hour with the **▲** or **▼** sensor and confirm your setting with the OK sensor.

After setting the hour, the minutes will be highlighted.

■ Then set the minutes with the **▲** or **▼** sensor and confirm your setting with the OK sensor.

Lighting

– On

The oven interior lighting remains on during the entire cooking programme.

– On for 15 seconds

(Factory default)

During a cooking programme, the oven interior lighting is set to switch off after 15 seconds.

It will come on again during the cooking programme if \wedge , \vee or OK is touched.

Catalyser

– On

(Factory default)

The catalyser is always switched on.

– Off next prog. only

The catalyser will be switched off for the next programme only.

Cooling fan run-on

The cooling fan will continue to run for a while after the oven has been switched off to prevent any humidity building up in the oven, on the control panel or in the oven housing unit.

– Temperature controlled

(Factory default)

The cooling fan will switch off when the temperature in the oven compartment drops below approx. 70 °C.

– Time controlled

The cooling fan will switch off after approx. 25 minutes.

Do not leave food in the oven to keep it warm if you have set the cooling fan to timed operation. Moisture levels in the oven could increase, leading to condensation forming on the control panel and surrounding kitchen furniture and drops of moisture collecting under the worktop.

Condensate can

- damage the housing unit/ worktop.
- lead to corrosion in the oven.

Settings

Pyrolytic

– With reminder

A reminder to carry out the pyrolytic cleaning process will appear in the display.

– Without reminder

(Factory default)

You will not be reminded to carry out the pyrolytic cleaning process.

The setting range selectable with the temperature selector will also appear.

Display

Contrast

The contrast is represented by a bar with seven segments, where one segment is filled in.

Factory default: 

To change the setting, move the solid segment to the left or right with the **▼** or **▲** sensor.

Brightness

The brightness is represented by a bar with seven segments, where one segment is filled in.

Factory default: 

To change the setting, move the solid segment to the left or right with the **▼** or **▲** sensor.

Volume

Buzzer tones

The volume of the buzzer is represented by a bar with seven segments, where one segment is filled in.

Factory default: 

To change the setting, move the solid segment to the left or right with the **▼** or **▲** sensor.

If none of the segments is filled in, the buzzers are switched off.

Heating phase

The heating phase can be changed with the Fan plus , Conventional heat  and Auto roast  functions.

– Rapid

(Factory default)

All the heating elements are switched on together in order to heat the oven up as quickly as possible to the required temperature.

– Normal

Only the heating elements for the cooking function selected are switched on.

Recommended temperatures

If you frequently change a recommended temperature it may be a good idea to change it permanently.

All of the functions which allow a temperature change are listed.

When you select a function the recommended temperature is highlighted.

Keypad tone

The keypad tone is represented by a bar with seven segments, where one segment is filled in.

Factory default: 

To change the setting, move the solid segment to the left or right with the **▼** or **▲** sensor.

If none of the segments is filled in, the keypad tone is switched off.

Frequency

The frequency of the buzzer can be changed. Changing the frequency may be necessary to optimise the volume in different installation environments.

The frequency level is represented by a bar with seven segments, where one segment is filled in. Each segment represents a different frequency.

Factory default:



To change the setting, move the solid segment to the left or right with the **▲** or **▼** sensor.

If the solid segment is on the far left of the display (factory default), a brief signal will sound after a short while four times at 15 second intervals.

If another segment is blocked out, a continual signal will sound after a short while for approx. 5 minutes on the frequency set.

Safety

System lock

The system lock prevents the appliance being switched on unintentionally, by children for example.

– Off

(Factory default)

The lock is deactivated, and the oven can be used.

– On

The oven is locked and cannot be operated.

When the oven is switched off,  appears in the display.

However, the minute minder  can still be used.

The system lock remains activated after a power cut.

To switch off the safety lock for one cooking programme

■ Select an oven function.

The system lock symbol will appear in the display.

■ Touch the OK sensor for 3 seconds.

The symbol will switch off, and the oven is ready for use.

Settings

Temperature format

- °C
(Factory default)
- °F

Showroom programme

This programme is for dealers who want to demonstrate the appliance without the heater elements working. Do not activate this setting for domestic use!

- **Off**
(Factory default)
- **Demo programme**
Follow the prompts in the display to switch the demo programme on.

To switch the demo programme off

If you have switched on the demo programme inadvertently, follow the steps below to switch it off again:

- Select "Settings".
- Select the "Showroom prog." option and confirm your selection with OK.
- Select the "Off" option and confirm your selection with OK.
- Touch the OK sensor for 4 seconds.
- Confirm the closing prompt with OK.

Factory default

- **All settings**
Any settings that you have altered will be reset to the factory default setting.
- **Recommended temperatures**
Only those recommended temperatures which have been changed will be reset to the factory default settings.

Miele branded cleaning and conditioning products are available from the Miele Spare Parts Department or via the internet on www.miele-shop.com.



Do not use a steam cleaner to clean the appliance. The steam could reach electrical components and cause a short circuit.

All external surfaces are susceptible to scratching. Scratches on glass surfaces could even cause a breakage in certain circumstances. Contact with unsuitable cleaning agents can alter or discolour the external surfaces.

To prevent damage to your appliance when cleaning do not use:

- cleaning agents containing soda, ammonia, acids or chlorides,
- cleaning agents containing descaling agents,
- abrasive cleaning agents, e.g. powder cleaners and cream cleaners,
- solvent-based cleaning agents,
- stainless steel cleaning agents,
- dishwasher cleaner,
- oven sprays,
- glass cleaning agents,
- hard, abrasive sponges and brushes, e.g. pot scourers,
- eraser blocks,
- sharp metal scrapers.

Appliance front

Remove any soiling immediately. If this is not done, it might become impossible to remove and could cause the surface to alter or discolour.

Clean the front using a damp Miele microfibre E-cloth or with a clean sponge and a solution of hot water and washing-up liquid. Wipe dry using a soft cloth.

Cleaning and care

Accessories

Remove all accessories as well as the runners and any extra accessories such as FlexiClip runners from the oven interior before starting the pyrolytic cleaning process.

The high temperatures needed for pyrolysis will damage the accessories.

Baking tray, universal tray, anti-splash insert (if applicable)

The surface has been treated with **PerfectClean enamel**.

Please refer to the section on "PerfectClean" for information on cleaning and care.

Rack, runners

The surface has been treated with **PerfectClean enamel**.

Treat in the same way as other surfaces coated with PerfectClean. See "PerfectClean".

Food probe

Clean the food probe with a damp cloth only.

Do not put the food probe into water or clean it in the dishwasher.

PerfectClean

Before using for the first time remove any stickers from PerfectClean surfaces.

The **enamelled surfaces** of the baking tray, universal tray and anti-splash insert (if applicable) have been treated with a special type of enamelling called "**PerfectClean**".

This surface has very good anti-stick properties and is much easier to keep clean than conventional oven enamel, if cleaned regularly.

Food can be taken off it more easily, and soiling from baking and roasting is easier to remove.

The following notes on cleaning and care should ensure that the anti-stick and easy clean properties of PerfectClean last for many years.

PerfectClean surfaces can be treated as you would treat glass.

Food can be sliced or cut up on the PerfectClean surface in the same way as on a baking tray with conventional enamel.

Allow the oven and any accessories to cool down before cleaning.

Danger of burning.

Normal soiling

Clean as soon as possible after each use with a dishcloth, soft sponge or a soft nylon brush, and a solution of hot water and a little washing-up liquid. The longer soiling is left, the harder it may become to remove.

Stubborn soiling

Stubborn soiling, e.g. from roasting, may need to be soaked first with a damp sponge to loosen it and if necessary a non-abrasive stainless steel spiral pad or a scraper suitable for glass can be used to remove it.

After cleaning, rinse thoroughly with clean water. The water must run off the surface easily. Any residual cleaning agents will hinder this effect.

Using oven sprays on very stubborn soiling

Some oven cleaners contain strong alkalines and / or abrasive materials. Because PerfectClean enamel is designed to be easily cleaned, the use of these cleaners is not recommended. However, if you still cannot get the surface clean, an oven cleaner can be used, but for a couple of minutes only.

Cleaning and care

Do not attempt to use on a hot oven or accessories. Allow the PerfectClean surfaces to cool down to room temperature before applying an oven spray.

Apply a spray oven cleaner to the soiled areas. Leave to take effect for **a couple of minutes only!**

If necessary use a soft sponge, soft nylon brush or a scraper suitable for glass surfaces to loosen the soiling.

Repeat the process if necessary.

After cleaning, rinse thoroughly with clean water and then dry thoroughly.

For optimum performance of PerfectClean enamel it is important to clean the oven and accessories after each use.

The surfaces will become harder to clean and the anti-stick properties will deteriorate if soiling is not removed after each use and allowed to build up. In extreme cases cleaning may become impossible.

The following cause lasting damage to the surface structure and reduce the anti-stick effect and must not be used on PerfectClean surfaces:

- abrasive cleaning agents, e.g. powder cleaners and cream cleaners,
- cleaning agents for ceramic hobs,
- wire wool or metal scourers,
- abrasive sponges, e.g. pot scourers or sponges which have been previously used with abrasive cleaning agents,
- oven spray must not be used in a hot oven or left on for too long,
- PerfectClean enamelled items must not be washed in a dishwasher.

Note:

- Soiling such as spilt juices and cake mixtures are best removed whilst the oven or tray is still warm. Exercise caution, make sure the oven is not too hot - danger of burning.
- Spilt fruit juices may cause lasting discolouration to the surfaces and roasting can cause matt areas to appear. Clean these following the instructions given above and do not use force to remove them. This discolouration is permanent but will not affect the efficiency of the enamel.

Oven interior

The oven interior is coated with dark **pyrolytic enamel** which facilitates cleaning.

This is a particularly hard enamel with an extremely smooth surface and very good anti-stick properties.

Manual cleaning of the oven interior

Allow the oven to cool down before cleaning by hand.

Danger of burning!

The oven interior and the inside of the door should be cleaned after each use. If this is not done subsequent soiling from baking and roasting will become worse and make cleaning harder. In extreme cases, heavy soiling could even damage the surface.

There is a fibre-glass door seal around the oven cavity.

This seal is particularly sensitive and should not be cleaned unless absolutely necessary. Rubbing it can damage it.

Most cooking residues can be removed with a damp cloth and a mild solution of hot water and washing-up liquid.

Never use hard brushes, hard sponges, wire wool pads*, knives or any other abrasive materials or cleaning agents. They can damage the enamel.

If using an oven spray, the manufacturer's instructions must be followed.

* Non-abrasive stainless steel spiral pads can, however, be used.

To make cleaning easier

- remove the oven door,
- dismantle the door,
- take out the side runners,
- lower the top heating/grill element.

Instructions for doing so are given further on in this section.

Cleaning and care

Pyrolytic cleaning of the oven interior

A message will appear in the display after a certain length of time to remind you to run a pyrolytic cleaning programme. You can deactivate this, if wished (see "Settings - Pyrolytic").

Before starting a pyrolytic cleaning process please note the following:

Remove any coarse soiling from the oven before you start.

There is a fibre-glass door seal around the oven cavity. This seal is particularly sensitive and should not be cleaned unless absolutely necessary. Rubbing can damage it.

Remove all accessories as well as the runners and any extra accessories, such as the FlexiClip runners, from the oven interior before starting the pyrolytic cleaning process. The high temperatures needed for pyrolysis will damage the accessories.

The oven door gets much hotter during pyrolytic operation than during normal use. Make sure children cannot touch the oven whilst a pyrolytic programme is running. Danger of burning.

During the pyrolytic process the oven is heated to over 400 °C. Any residual soiling is broken down and reduced to ash by the high temperatures.

Depending on soiling levels you can choose between three cleaning programmes:

- Level 1 (Duration approx. 2 hours 15 minutes)
- Level 2 (Duration approx. 2 hours 25 minutes)
- Level 3 (Duration approx. 2 hours 35 minutes)

For safety reasons the **oven door** is **automatically locked** at the beginning of the pyrolytic programme.

At the end of the programme it will not be unlocked until the temperature inside the oven has dropped to below 280 °C.

If the pyrolytic cleaning programme has been started by mistake or if the process is interrupted, the door lock will be released:

- immediately if the temperature is below 280 °C.
- not until the oven interior temperature is below 280 °C if the temperature inside the oven is higher than 280 °C.

You can delay the start of the pyrolytic process for example, to take advantage of cheaper night electricity tarifs.

Starting a pyrolytic process

- Take all accessories out of the oven.
- Turn the function selector to Pyrolytic .
- Use the **▲** or **▼** sensor to select Level 1, 2 or 3.
- Start the pyrolytic process required with the OK sensor.

You can either start the pyrolytic cleaning process immediately or later.

If you start the process immediately, the door will lock and the oven will start heating up.

Select the "Start later" option to **delay the start of the pyrolytic process** for example, to take advantage of cheaper night electricity tarifs.

You can change the time you want the pyrolytic process to start at, at any point up until the delay period has elapsed.

At the end of pyrolytic cleaning process

- "Prog. finished" will appear in the display.
- a buzzer will sound, if it is switched on (see "Settings - Volume - Buzzer tones").
- Turn the function selector to "0".

The buzzer will stop and the symbols in the display will go out.

If the function selector is not moved, the buzzer (if switched on) will sound every five minutes as a reminder that the programme has finished.

This **reminder** continues for up to 30 minutes.

After the pyrolytic process, any debris (e.g. ash), can easily be wiped away.

Remember to wait until the oven has cooled down before doing so!
Danger of burning.

Try not to wipe over the fibre-glass seal when cleaning the oven cavity. It is particularly sensitive and should not be cleaned unless absolutely necessary. Rubbing it can damage it.

Most residues are easily wiped away with a damp cloth. Depending on soiling levels in the oven there may be visible deposits on the door and below the trim under the oven cavity. This is best removed using a non-abrasive sponge or non-abrasive stainless steel spiral pad and a mild solution of warm water and washing-up liquid.

Spilt fruit juices may cause lasting discolouration to the surfaces. This discolouration is permanent but will not affect the efficiency of the enamel. Do not attempt to remove these marks.

Cleaning and care

The **pyrolytic process will be cancelled**,

- if the oven is switched off.
- if another function is selected during the pyrolytic process.
- in the event of a power cut.


In the two instances above, switch the oven off.

If the oven interior temperature is below 280 °C, the door lock will be released after a short while. It can then be opened.

Start the pyrolytic cleaning process again if necessary.


To remove the oven door

The oven door is connected to the oven by hinges.

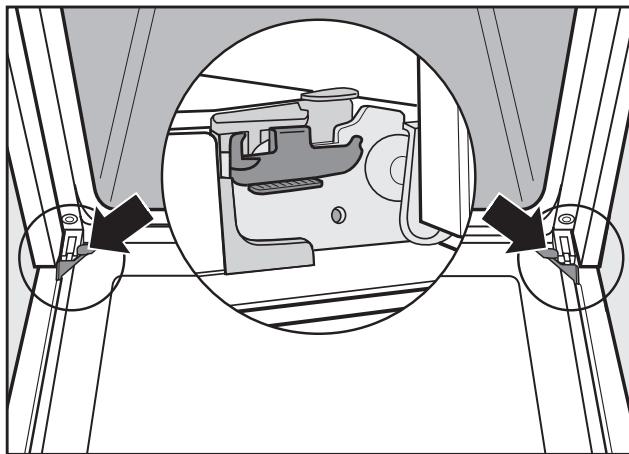

Before removing the door, the locking clamps on both hinges have to be released.


- Open the door fully.

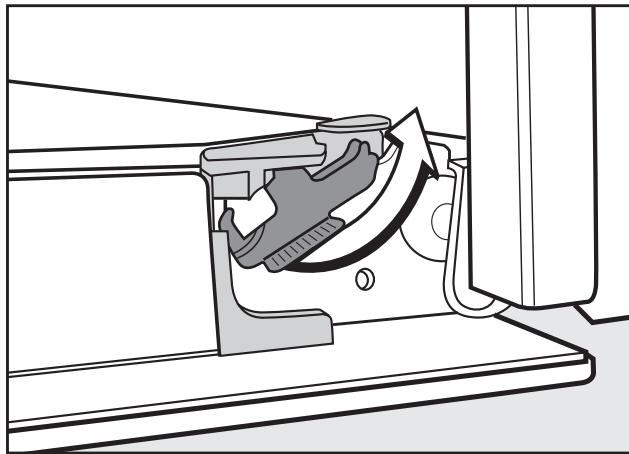

- To release the locking clamps on the hinges turn them upwards as far as they will go until they are at an angle. See illustration.

- Then lift the door upwards as far as it will go.

Do not attempt to take the door off the hinge guides when it is in a horizontal position. The guides will close, and damage the appliance. Danger of injury.

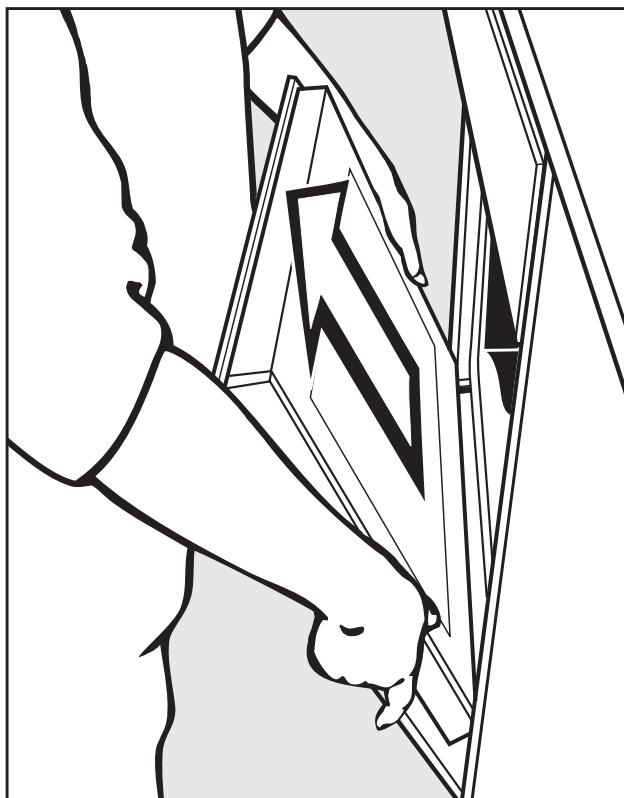

- Hold the door securely at both sides and lift upwards off the hinge guides.

Do not lift the door off by the handle. The handle could break and damage the door.

Make sure that you lift the door off equally on both sides.

Cleaning and care

To dismantle the oven door

The oven door is made up of four panes of glass and has vents at the top and bottom.

When the oven is operating, air is circulated through the door to keep the outer pane cool.

If condensate has worked its way in between the glass panes, the door can be dismantled in order to clean in between the panes.

When cleaning the glass panes please follow the same instructions given for cleaning the appliance front.

Do not use abrasive cleaning agents, sponges or brushes, as these can scratch the surface. These could damage the surface. Scratches can also cause the glass to break.


Do not use an oven spray. This will damage the surface of the aluminium surrounds.

Ensure that the glass panes are inserted the correct way round after cleaning, as each side of the pane has a different coating. Those facing the oven interior reflect the heat.

To avoid the risk of breakage, it is advisable to place the panes on a table protected by a soft cloth (e.g. a towel).

Always remove the oven door before dismantling it.


- Place the door on a protective surface (e.g. on a table cloth) to prevent it getting scratched. The door handle should line up with the edge of the table. Make sure the glass lies flat and does not get broken during cleaning.

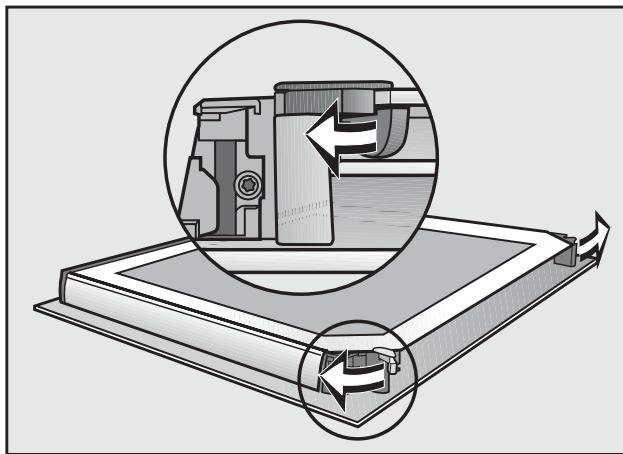


- Flip the glass pane retainers outwards to open them.

Cleaning and care


You can now remove the inner and the two middle panes.

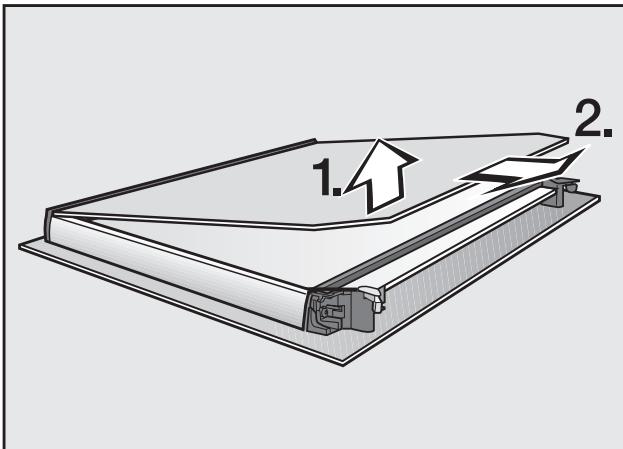


- **Gently** lift the inner pane up and out of the cover strip.

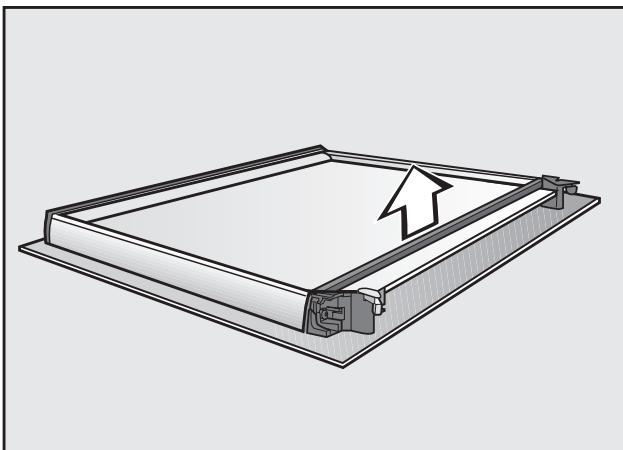

- Remove the seal.

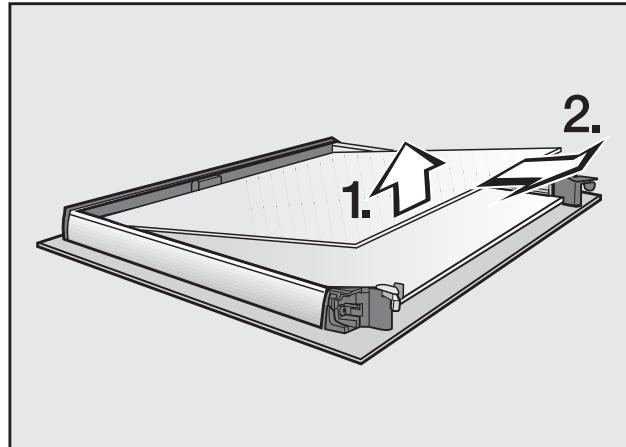

- Now gently lift up the upper of the two middle panes and remove it.

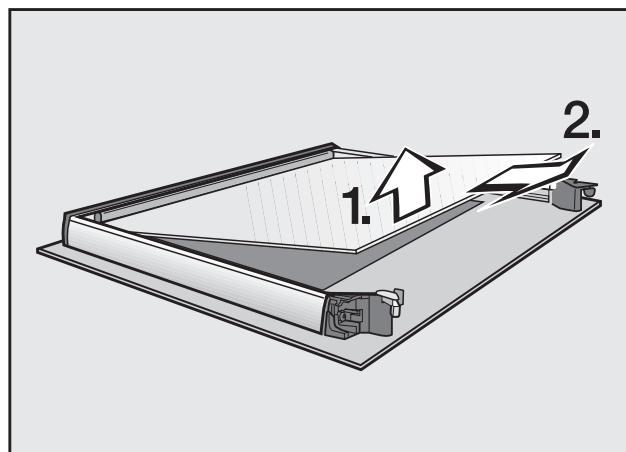


- Gently lift up the lower of the two middle panes and remove it.
- Clean the glass panes and other parts with a Miele E-cloth or a clean sponge and a solution of hot water with a little washing-up liquid. Wipe dry using a soft cloth.

Cleaning and care

■ To refit the door:


The two middle panes are identical. To ensure that they are refitted correctly, one of the corners is more angled than the others.

When refitting the lower pane, the more angled corner must be inserted in the left hand retainer at the bottom.

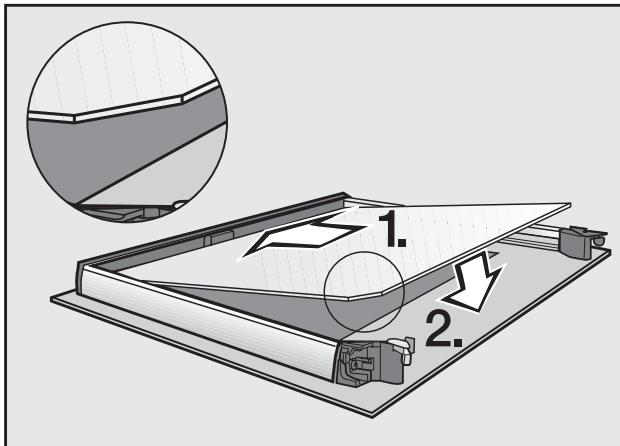


■ Replace the first of the middle panes. The more angled corner must be at the bottom left.

When refitting the upper pane, the more angled corner must be inserted at the top left.

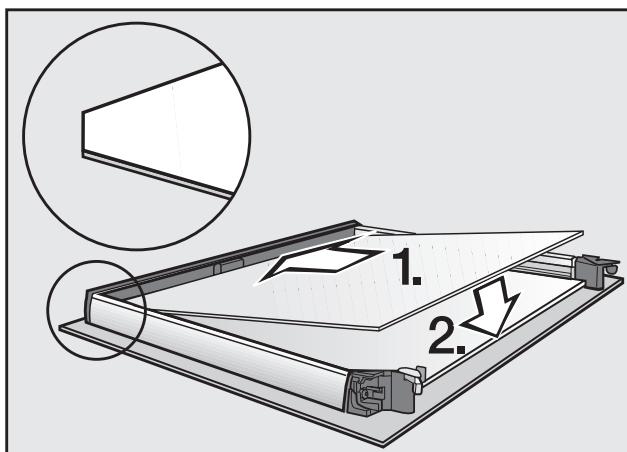


■ Replace the second of the middle panes with the more angled corner at the top left.

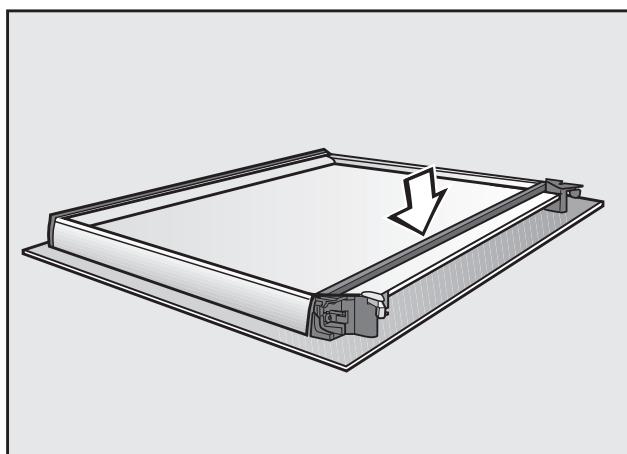


■ Refit the glass fibre seal.


To refit the door

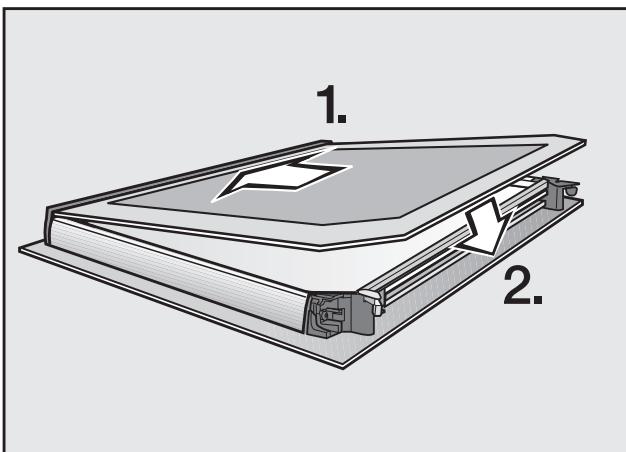

- Push the inner pane into the plastic strip and insert it in the retainers.

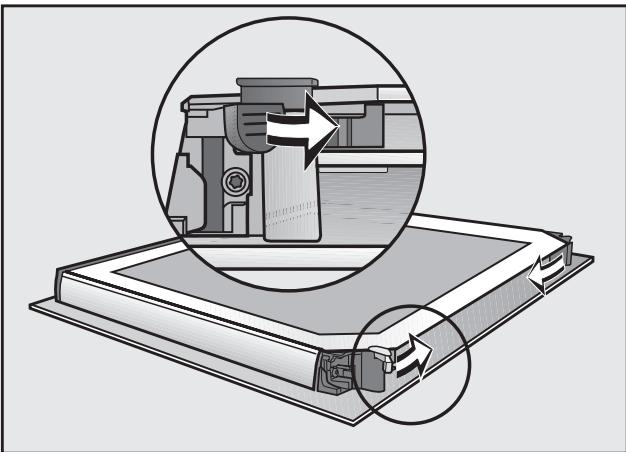

- Flip the glass pane retainers inwards to close them.

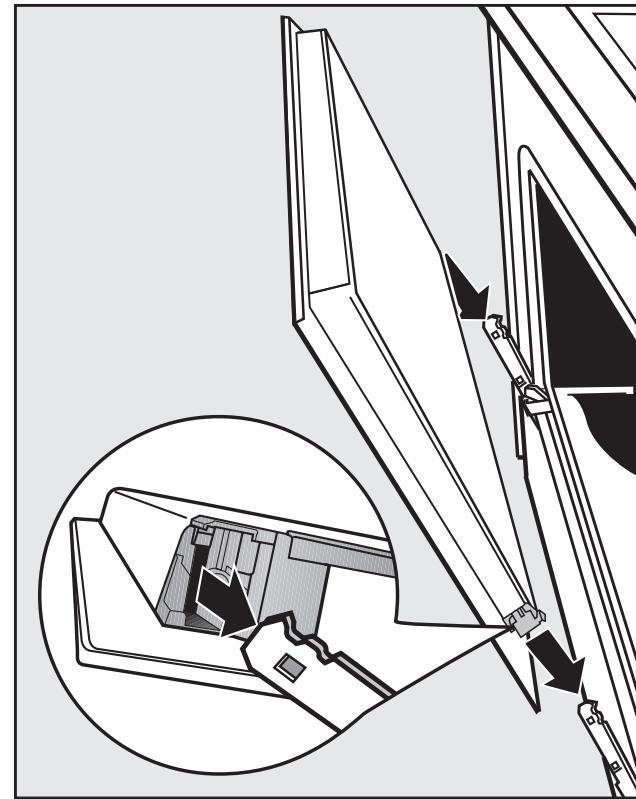


- Hold the door securely at both sides and carefully fit it back onto the hinge guides.

Make sure that the door goes back on straight.

Cleaning and care

- Open the door fully.

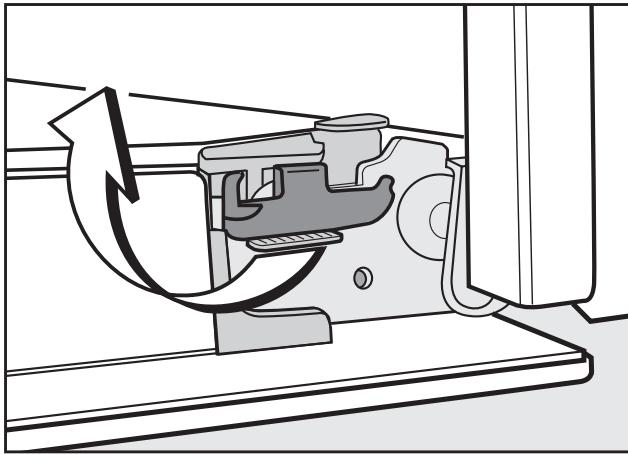


- Flip both locking clamps back up as far as they will go into a horizontal position.

It is essential that the locking clamps are flipped down when the door is refitted after cleaning. Otherwise the hinges could work loose, resulting in damage to the door.

To remove the runners

Make sure the oven heating elements are switched off and cool. Danger of burning.

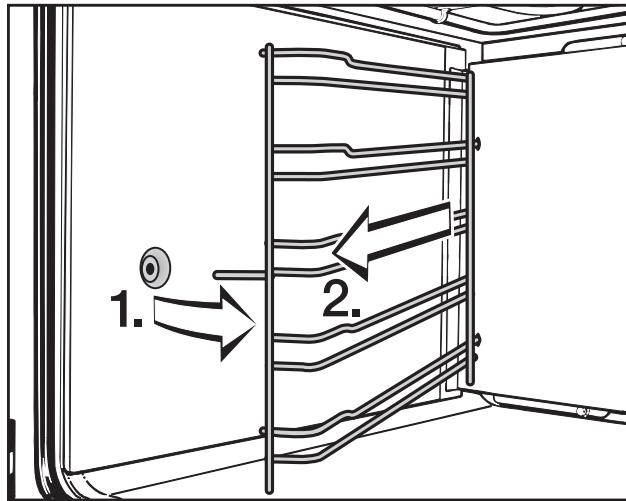


- Pull the runners forwards out of the holder and remove.

Reassemble in the reverse order, carefully ensuring all parts are correctly in place.

To lower the top heat/grill element

Make sure the oven heating elements are switched off and cool.
Danger of burning.

- Remove the runners.

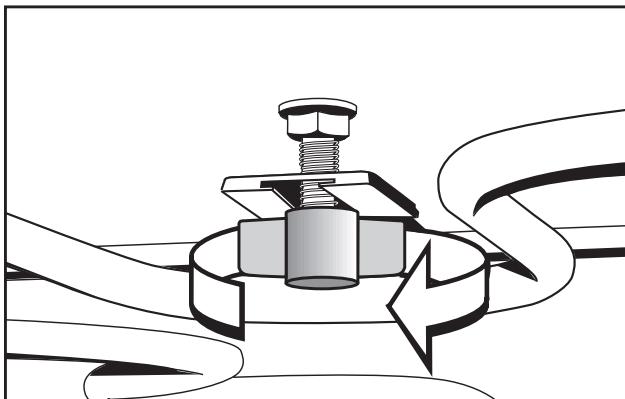

- Unscrew the wing nut and lower the top heating element.

Do not use force to pull it down as this can cause the element to break.

Reassemble in the reverse order, carefully ensuring all parts are correctly in place.

Problem solving guide

With the aid of the following guide, minor problems can be easily corrected without contacting Miele.

If you cannot resolve a problem following these instructions please contact the Miele Service Department.



Do not attempt to open the appliance casing yourself!

Installation, maintenance and repairs may only be carried out by a suitably qualified and competent person in strict accordance with current national and local safety regulations.

Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

Problem	Possible cause and remedy
The display is dark.	<ul style="list-style-type: none">– Check whether the time of day display is set so that it does not show in the display (see "Settings - Time of day - Display").– Check whether the mains fuse has tripped. If it has, contact a qualified electrician or the Miele Service Department.
The oven does not heat up.	<ul style="list-style-type: none">– Check whether the system lock  has been activated (see "Settings - Safety").– Check whether demo mode has been activated (see "Settings - Showroom prog.").– Check whether the mains fuse has tripped. If it has, contact a qualified electrician or the Miele Service Department.
A noise can be heard after a cooking programme.	The cooling fan remains switched on after the end of a cooking programme (see "Settings - Cooling fan").
The door cannot be opened at the end of a pyrolytic cleaning programme.	Switch the appliance off. If the door lock will still not open please contact the Miele Service Department.

Problem solving guide

Problem	Possible cause and remedy
The top lighting is not working.	<ul style="list-style-type: none"> ■ Disconnect the appliance from the electricity supply: Switch off and unplug at the socket, or disconnect the fuse, or switch off at the isolator as appropriate. ■ Turn the lamp cover a quarter turn anti-clockwise to release it and then pull it downwards to take it out. ■ Replace it with a new halogen lamp (Osram 66725 AM/A, 230 V, 25 W, G9). ■ Refit the lamp cover and turn it clockwise to secure it. ■ Reconnect the appliance to the mains electricity supply.
The side lighting is not working.	<ul style="list-style-type: none"> ■ Disconnect the appliance from the electricity supply: Switch off and unplug at the socket, or disconnect the fuse, or switch off at the isolator as appropriate. ■ Remove the shelf runners. ■ Use the lever supplied to release the lamp cover from its frame. ■ Replace it with a new halogen lamp (Osram 66725 AM/A, 230 V, 25 W, G9). ■ Push the lamp cover back into its retainers, and replace the shelf runners. ■ Reconnect the appliance to the mains electricity supply.
Cakes and biscuits are not cooked properly after following the times given in the chart.	<ul style="list-style-type: none"> – Check that the correct temperature has been set. – Check whether there has been a change to the recipe. The addition of more liquid or more eggs makes a moister mix which would need longer to cook.
Cakes / biscuits are browning unevenly.	<p>There will always be a slight unevenness. If browning is very uneven check that the correct temperature was set and that the correct shelf level was used.</p> <p>With conventional heat <input type="checkbox"/> the material and colour of the tin used plays an important role. Light coloured, shiny tins are less suitable.</p>

Problem solving guide

Problem	Possible cause and remedy
"Max. operating duration reached" appears in the display.	<p>Safety switch-off has activated. The appliance will be ready for use again after it has been switched off and then back on again.</p>
A fault code appears in the display: F + a number	<p>You can rectify the faults with the following codes yourself:</p> <ul style="list-style-type: none">– Fault 23: The temperature required for pyrolytic cleaning was not reached. This could have been caused by too much soiling in the oven to start with. Remove all coarse soiling before starting the pyrolytic cleaning programme again. If the fault message appears again please contact the Miele Service Department.– Fault 32: The door has not locked for the pyrolytic cleaning process. Switch the oven off and start the pyrolytic cleaning process again. If the fault code appears again call the Miele Service Department.– Fault 33: The door lock for the pyrolytic cleaning process will not open. Interrupt the pyrolytic cleaning programme by switching the oven off. If the door will still not open please contact the Miele Service Department.– Fault 54: The food probe is faulty. The message will go out as soon as the food probe is removed from the oven. A replacement can be ordered from your Miele Dealer or the Miele Spare Parts Department. <p>For all other fault codes please contact the Miele Service Department.</p>

After sales service

In the event of any faults which you cannot remedy yourself, or if the appliance is under guarantee, please contact

- your Miele Dealer
- or
- Miele (see back cover for address).

A call-out charge will be applied for service visits where the problem could have been resolved as described in these instructions.

When contacting Miele, please quote the model and serial number of your appliance.


These are shown on the data plate, visible on the front frame of the oven, with the door fully open.

Please note that telephone calls may be monitored and recorded to improve our service.

Optional accessories

A range of additional accessories as well as cleaning and care products are available for your Miele oven. Depending on product they are available to order from your Miele Dealer, the Miele Spare Parts Department or via the internet on www.miele-shop.com.

FlexiClip telescopic runners

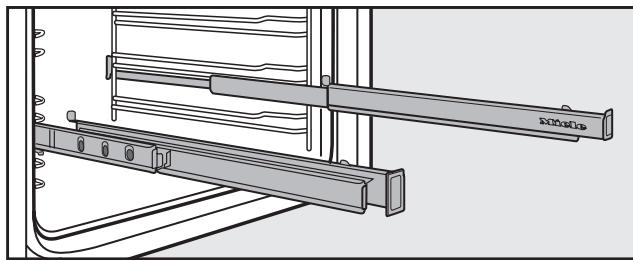


FlexiClip runners can be installed in the oven. They can be fitted to any shelf level, and can be fully extended out of the oven to give a good overview of cooking in progress.

Baking tray, universal tray and rack

These items, supplied with your oven, are also available to order.

When ordering, please quote the model number of your appliance.

Pizza stone

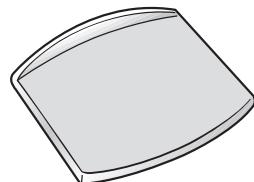


The pizza stone is ideal for items which need a well baked base such as pizza, quiche, bread, bread rolls and savoury snacks.

The pizza stone is made from heat retaining fire brick and is glazed. Place it directly on the rack.

A paddle made of untreated wood is supplied with it for placing food on the pizza stone and taking it off.

Flan/Pizza dish

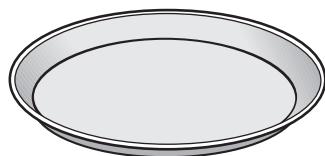

This circular pan is suitable for cooking pizzas, flat cakes made with yeast or whisked mixtures, sweet and savoury tarts, baked desserts, and can also be used for frozen cakes and pizzas. The surface has been treated with PerfectClean enamel.

Optional accessories

Gourmet oven dish

The gourmet oven dish can be placed in the oven directly on the runners. It has non-tip safety notches like the universal tray to prevent it being pulled out too far.

It has an anti-stick coating.

It is available in two sizes:


- HUB 5000-M (internal dimensions:
(Capacity approx. 5 litres,
dimensions approx. 38 x 22 x 8 cm)



- HUB 5000-XL (internal dimensions:
(Capacity approx. 8 litres,
dimensions approx. 38 x 35 x 8 cm)



Gourmet oven dish lid

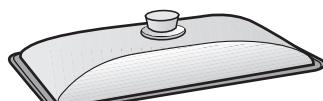

A lid is available separately for each of the gourmet oven dishes.

When ordering a lid, please specify the gourmet oven dish it is to be used with (HUB 5000 M or XL).

Miele E-cloth

Removes grease and stains and leaves no smearing. Suitable for cleaning surfaces such as stainless steel, glass, plastic and chrome without the use of chemicals.

Oven cleaner

Suitable for removing stubborn soiling. It is not necessary to pre-heat the oven beforehand.

Electrical connection

All electrical work should be undertaken by a suitably qualified and competent person in strict accordance with current national and local safety regulations (BS 7671 in the UK).

Installation, repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

Ensure power is not supplied to the appliance until after installation or repair work has been carried out.

The **voltage and connected load** are given on the data plate, visible below the oven interior, with the door open. Ensure that these match the household mains supply. Please quote these data, and the model and serial number when contacting Miele.

Connection of this appliance should be made via a fused connection unit or a suitable isolator, which complies with national and local safety regulations, and the on/off switch should be easily accessible after the appliance has been built in.

If the switch is not accessible after installation (depending on country) an additional means of disconnection must be provided for all poles.

For extra safety it is advisable to protect the appliance with a residual current device (RCD). Please contact a qualified electrician for advice.

When switched off there must be an all-pole contact gap of 3 mm in the isolator

switch (including switch, fuses and relays acc. to EN 60 335).

Important U.K.

The appliance is supplied for connection to a 230-240 V, 50 Hz supply with a 3-core cable.

The wires in the mains lead are coloured in accordance with the following code:

Green/yellow = earth

Blue = neutral

Brown = live


WARNING
THIS APPLIANCE MUST BE EARTHED

When replacing the cable supplied with another cable or changing the connection, only cable type H 05 VV-F or H 05 RR-F with a suitable cross-sectional area (CSA) may be used (available from the Miele Customer Contact Centre).


Dimensions are given in "mm".

Appliance and niche dimensions

Installation in a base unit

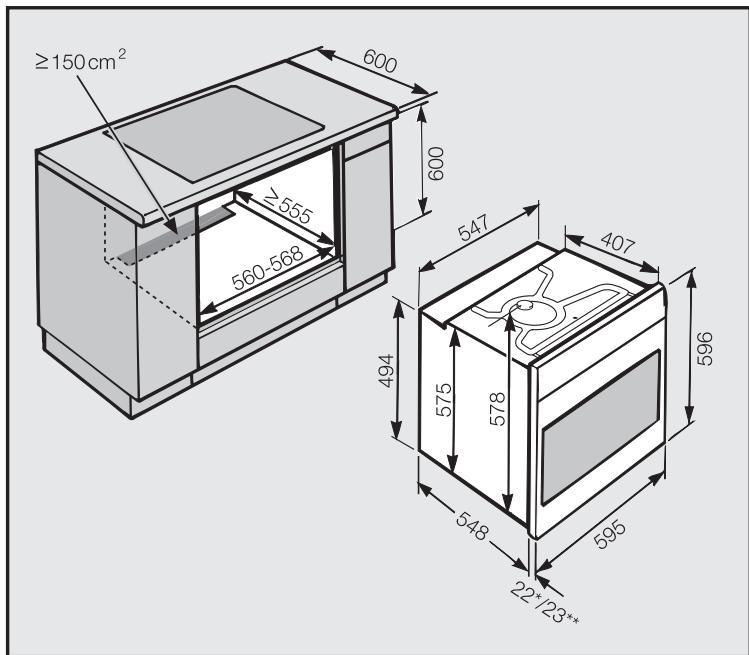

Installation in a tall unit

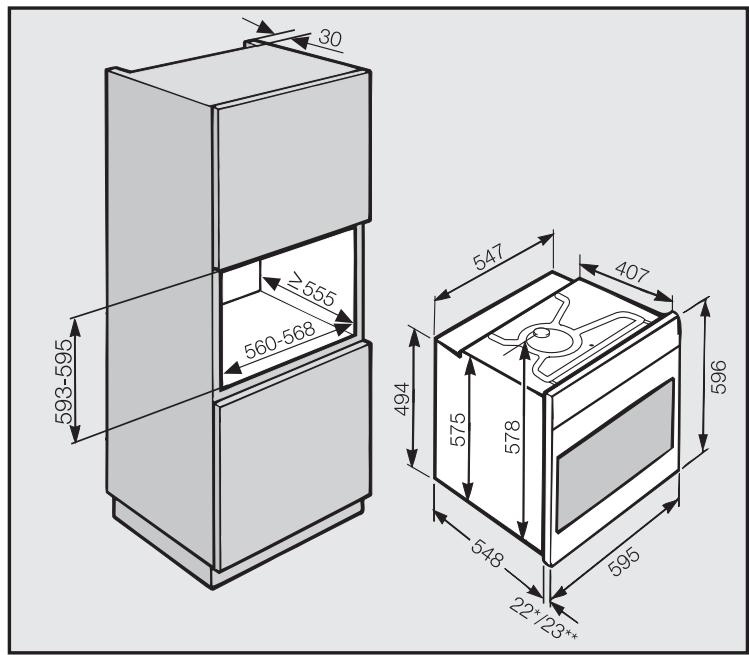


* Appliances with glass front

** Appliances with metal front

Building-in diagrams

Front dimensions

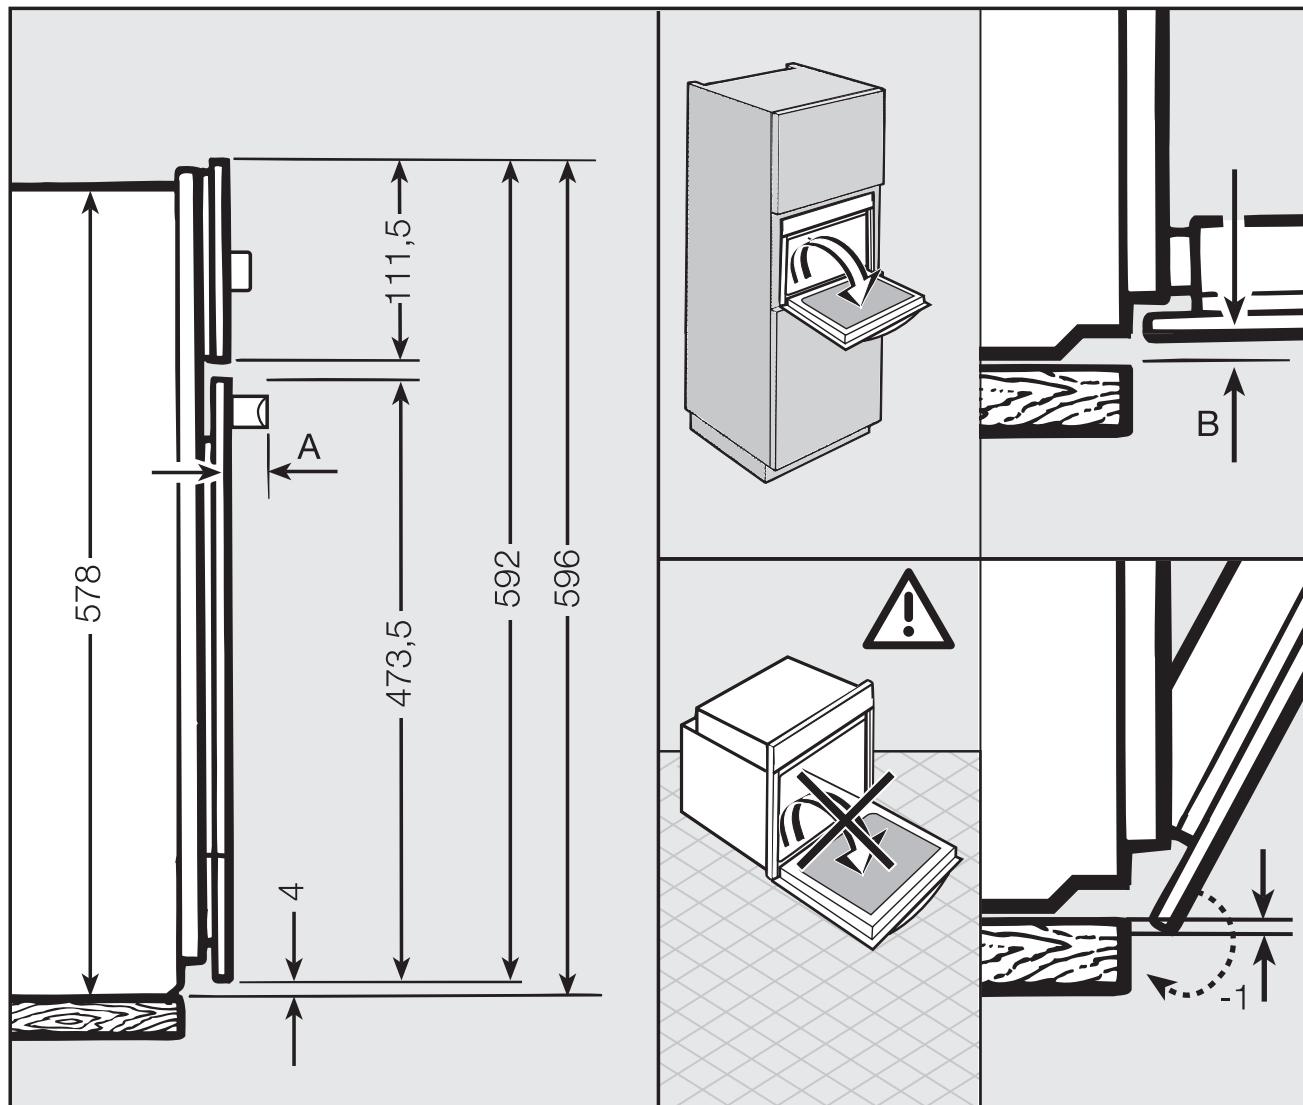

A H 5360: 53.2

H 5460: 47.5

B Appliances with glass front: 2.2

Appliances with metal front: 1.2

Installing the oven

⚠ The appliance must not be operated until it has been correctly installed in its housing unit. Otherwise it poses an electric shock hazard.


To ensure adequate ventilation to the oven once installed:

- do not fit a rear panel into the housing unit.
- make sure that the shelf on which the appliance is placed does not touch the wall.
- do not fit insulation material inside the housing unit.

When installing the appliance do not lift it up by the door handle as this can damage the door.

Turn off the mains electricity supply to the isolator.

- Connect the mains cable from the oven to the isolator.
- Push the appliance into the oven housing unit and align it.

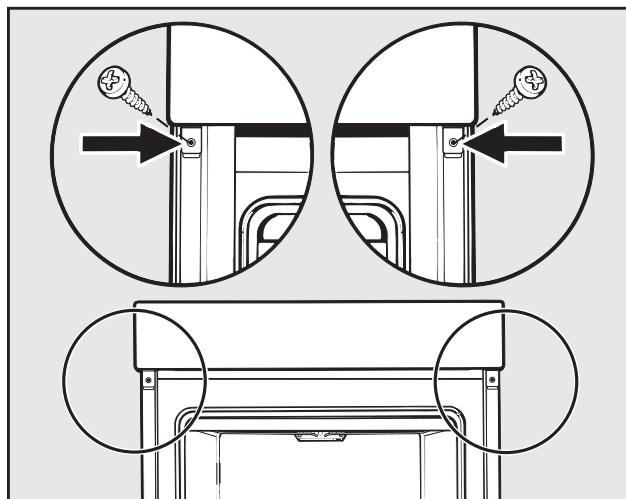

- Open the oven door and using two screws secure it to the side walls of the housing unit through the holes in the oven trim.



United Kingdom

Miele Co. Ltd.
Fairacres, Marcham Road
Abingdon, Oxon, OX14 1TW
Tel: 0845 365 0555
Fax: 0845 365 0777
Customer Contact Centre Tel: 0845 365 6600
E-mail: info@miele.co.uk
Internet: www.miele.co.uk

Australia

Miele Australia Pty. Ltd.
ABN 96 005 635 398
1 Gilbert Park Drive, Knoxfield, VIC 3180
Tel: (03) 9764 7130, Fax: (03) 9764 7149
Internet: www.miele.com.au

China

Miele Shanghai
Suite 4105-06, Plaza 66
1266 Nanjing Road West
Jing An District
Shanghai 200040, PRC
Tel: +86 21 6288 4200, Fax: +86 21 6288 4100
E-mail: mieleshanghai@cn.miele.com
Internet: www.miele.cn

Hong Kong

Miele (Hong Kong) Limited
AIA Plaza, 24th Floor
18 Hysan Avenue
Causeway Bay
Tel: +852- 2610-1331, Fax: +852-2610-1013
E-mail: mielehk@miele.com.hk
Internet: www.miele.hk

India

Miele Appliances India Pvt. Ltd.
Ground Floor, Copia Corporate Suites
Plot No. 9, Jasola
New Delhi – 110025
Tel: 011-46 900 000, Fax: 011-46 900 001
E-mail: customercare@miele.in
Internet: www.miele.in

Ireland

Miele Ireland Ltd.
Broomhill Road, Tallaght, Dublin 24
Tel: (01) 461 0710, Fax: (01) 461 07 97
E-Mail: info@miele.ie
Internet: www.miele.ie

New Zealand

Miele New Zealand Limited
Unit L, 10-20 Sylvia Park Road
Mt. Wellington, 1060, Auckland, NZ
Tel: 0800 264 353, Fax: 0800 463 453
Internet: www.miele.co.nz

Singapore

Miele Southeast Asia
Miele Pte. Ltd.
163 Penang Road
04 - 02/03 Winsland House II
Singapore 238463
Tel: +65 6735 1191, Fax: +65 6735 1161
E-Mail: infosea@miele.com.sg
Internet: www.miele.sg

South Africa

Miele (Pty) Ltd
63 Peter Place, Bryanston 2194
P.O. Box 69434, Bryanston 2021
Tel: +27 (0) 11 548-1900
Fax: +27 (0) 11 548-1935
E-mail: info@miele.co.za
Internet: www.miele.co.za

United Arab Emirates

Miele Appliances Ltd.
P.O. Box 11 47 82
Gold & Diamond Park
Sheikh Zayed Road
Building 6 / Offices Nos. 6-214 to 6-220
Dubai
Tel: +971-4-341 84 44
Fax: +971-4-341 88 52
E-Mail: info@miele.ae
Internet: www.miele.ae