

# Heating control instructions

- If “AUTO” is showing in the bottom left of the display screen, the heating is set to run from 06.30 to 23.00 at 21C then at 18C overnight.
- If “AUTO” is not showing, “OFF” will be showing in the bottom of the display screen and a target temperature of 15C. This is the setting for when The Burrow is unoccupied.
- To turn heating on:
  - Pull down flap and press the button marked “AUTO”. The display should now show “AUTO” in the bottom left and the target temperature of 21C
- To turn heating off:
  - Pull down flap and press the button marked “OFF”. The display should now show “OFF” in the bottom left and the target temperature of 15C