

Operating and installation instructions

Microwave combination oven



To avoid the risk of accidents or damage to the appliance it is **essential** to read these instructions before it is installed and used for the first time.

Contents

Warning and Safety instructions	8
Caring for the environment	23
Overview	24
Controls	25
On/Off sensor ①	26
Sensor controls	26
Display	28
Main menu	29
Symbols	29
Operation	31
Features	32
Model numbers	32
Data plate	32
Items supplied	32
Accessories supplied and available to order	32
Glass tray	33
Rack with non-tip safety notches	33
Oven controls	37
Safety features	37
System lock 	37
Cooling fan	37
Safety switch-off	37
PerfectClean treated surfaces	38
Before using for the first time	39
Basic settings	39
Heating up the oven for the first time	41
Settings	42
Settings overview	42
Open the Settings menu	44
To change and save settings	44
Language 	44
Time	45
Display	45
Clock display	45
Clock format	45
Set	45
Date	46
Lighting	46

Contents

Brightness	46
Start screen	46
Volume	47
Buzzer tones	47
Keypad tone	47
Welcome melody	47
Units	47
Weight	47
Temperature	47
Quick MW	48
Popcorn	48
Keeping warm	48
Cooling fan run-on	49
Recommended temperatures	49
MW Power level	49
Safety	50
System lock 	50
Sensor lock	50
Showroom programme	51
Demo mode	51
Factory default	51
MyMiele	52
To add an entry	52
To edit MyMiele	53
To delete entries	53
To sort entries	53
Minute minder + Alarm	54
Using the alarm 	54
Setting the alarm	54
Changing an alarm	55
Deleting an alarm	55
Using the minute minder 	56
To set the minute minder	56
To change the time set for the minute minder	57
To cancel the time set for the minute minder	57
Overview of functions	58
Functions which do not use microwave energy	58
Microwave solo 	59

Contents

Microwave combination programmes	59
Microwave power	60
How it works	60
Power levels	60
Suitable containers for microwave use	61
Suitable containers for microwave use	61
Unsuitable	63
Testing dishes for their suitability	64
Placing the dish in the oven	65
Cover	65
Tips on saving energy	67
Residual heat use	67
Energy save mode	67
Functions without microwave power	68
Simple operation	68
Cooling fan	68
Using the oven - further functions	69
Changing the temperature	70
Rapid heat-up	71
Pre-heating the oven	71
Using the Crisp function (steam reduction)	72
Changing the function	72
Setting the duration	73
Switching off automatically	74
Switching on and off automatically	74
Sequence of a programme that switches on and off automatically	75
Changing an entered cooking time	75
Cancelling cooking	75
Microwave solo 	76
Simple operation	76
Cooling fan	76
Using the oven - further functions	77
Changing the power level	77
Changing the cooking duration	77
Changing the function	77
Setting further durations	78
Switching on and off automatically	78
Sequence of a programme that switches on and off automatically	79

Changing the set time	79
Deleting a finish time	79
Cancelling cooking	79
Microwave combination programmes	80
Simple operation	80
At the end of the cooking duration	81
Cooling fan	81
Using the oven - further functions	81
Changing the power level and the temperature	82
Using the Crisp function (steam reduction)	82
Changing the function	82
Setting further durations	82
Setting the duration for microwave cooking	82
Automatic programmes	83
List of food types	83
To use an Automatic programme	83
Notes on using these programmes	84
Search	85
User programmes	86
To create a User programme	86
To start a User programme	87
To change User programmes	88
Change cooking stages	88
Change name	89
To delete User programmes	89
Quick-MW 	90
Popcorn 	91
Baking	92
Notes on the baking chart	93
Baking chart	94
Roasting	98
Notes on the roasting chart	99
Food probe	100
How the food probe works	100
When to use it	100
Important notes about using the food probe	101
Using the food probe	102

Contents

Time left display	103
To display the core temperature	103
Residual heat use	103
Roasting chart	104
Low temperature cooking	106
Using the "Low temperature cooking" special application	107
Low temperature cooking - setting the temperature manually	108
Grilling	109
Notes on the grilling chart	109
Grilling chart	112
Microwave defrosting, reheating and cooking	113
Charts for defrosting, reheating and cooking food	116
Chart for defrosting food	117
Chart for reheating food	118
Chart for cooking food	119
Special applications	120
Defrosting	120
Drying food	121
Reheat	122
Prove dough	122
Pizza	123
Heat crockery	123
Gentle bake	124
Frozen food / Ready meals	125
Note for test institutes	126
Test food acc. to EN 60350 (Function: Microwave solo )	126
Test food acc. to EN 60350 (functions without microwave power)	127
Cleaning and care	128
Unsuitable cleaning agents	128
Tips	129
Normal soiling	129
Stubborn soiling	130
Lowering the top heat/grill element	131
Problem solving guide	132
After Sales / Guarantee	138
Electrical connection	139

Contents

Building-in diagrams	140
Appliance and niche dimensions	140
Installation in a tall unit	140
Installation in a base unit	141
Front dimensions	142
Installation	143
Miele@home	144
Copyright and licences	146
Addresses	147

Warning and Safety instructions

This appliance complies with statutory safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the appliance, please read these instructions carefully before using it for the first time. They contain important notes on installation, safety, use and maintenance.

Miele cannot be held liable for non-compliance with these instructions.

Keep these instructions in a safe place and ensure that new users are familiar with the contents. Pass them on to any future owner.

Correct application

- ▶ This oven is intended for use in domestic households and similar working and residential environments.
- ▶ The oven is not intended for outdoor use.
- ▶ It is intended for domestic use only to cook food, and in particular to bake, roast, grill, cook, reheat, defrost and dry food. Any other use is not supported by the manufacturer and could be dangerous.
- ▶ Do not use the microwave combination oven to store or dry items which could ignite easily.
If such items were dried in the microwave oven, the moisture in the item would evaporate causing it to dry out and even self-ignite.
- ▶ People with reduced physical, sensory or mental capabilities, or lack of experience or knowledge who are not able to use the appliance safely on their own must be supervised whilst using it. They may only use it unsupervised if they have been shown how to use it safely and recognise and understand the consequences of incorrect operation.

Warning and Safety instructions

Safety with children

- ▶ Children under 8 years of age must be kept away from the appliance unless they are constantly supervised.
- ▶ Children 8 years and older may only use the oven unsupervised if they have been shown how to use it safely and recognise and understand the consequences of incorrect operation.
- ▶ Children must not be allowed to clean or maintain the appliance unsupervised.
- ▶ Please supervise children in the vicinity of the oven and do not let them play with it.
- ▶ Danger of suffocation. Packaging, e.g. plastic wrappings, must be kept out of the reach of babies and children. Whilst playing, children could become entangled in packaging or pull it over their head and suffocate.

Warning and Safety instructions

► Danger of burning.

Children's skin is far more sensitive to high temperatures than that of adults. External parts of the oven such as the door glass, control panel and the vents become quite hot during use. Do not let children touch the oven whilst it is in use.

► Danger of injury

The oven door can support a maximum weight of 8 kg. Do not let children sit on the door, lean against it or swing on it.

Warning and Safety instructions

Technical safety

- ▶ Unauthorised installation, maintenance and repairs can cause considerable danger for the user. Installation, maintenance and repairs must only be carried out by a Miele authorised technician.
- ▶ Never use a damaged oven. It could be dangerous. Check it for visible signs of damage before using it.
- ▶ Operating a damaged appliance can result in microwave leakage and present a hazard to the user. Do not use the appliance if:
 - the door is warped,
 - the door hinges are loose,
 - holes or cracks are visible in the casing, the door, the door seal or the oven interior walls.
- ▶ The electrical safety of this appliance can only be guaranteed when correctly earthed. It is essential that this standard safety requirement is met. If in any doubt please have the electrical installation tested by a qualified electrician.
- ▶ To avoid the risk of damage to the oven, make sure that the connection data on the data plate (voltage and frequency) match the mains electricity supply before connecting the oven to the mains. Consult a qualified electrician if in doubt.
- ▶ Do not connect the appliance to the mains electricity supply by a multi-socket unit or an extension lead. These do not guarantee the required safety of the appliance (fire hazard).

Warning and Safety instructions

- ▶ For safety reasons, this appliance may only be used after it has been built in.
- ▶ The oven must not be used in a non-stationary location (e.g. on a ship).
- ▶ Tampering with electrical connections or components and mechanical parts is highly dangerous to the user and can cause operational faults.
Never open the casing of the appliance.
- ▶ While the appliance is under guarantee, repairs should only be undertaken by a Miele authorised service technician. Otherwise the guarantee is invalidated.
- ▶ Miele can only guarantee the safety of the appliance when genuine original Miele replacement parts are used. Faulty components must only be replaced by Miele spare parts.
- ▶ If the connection cable is damaged or if the oven is supplied without a cable, it must be replaced or fitted with a special connection cable by a Miele authorised technician (see "Electrical connection").

Warning and Safety instructions

- ▶ During installation, maintenance and repair work, the appliance must be disconnected from the mains electricity supply, e.g. if the oven lighting is faulty (see "Problem solving guide" and "Electrical connection").
- ▶ In order to function correctly, the oven requires an adequate supply of cool air. Ensure that the supply of cool air is not impaired (e.g. by heat insulation strips in the housing unit). Please also ensure that the cool air supply is not unduly heated by other heat sources such as a solid fuel stove.
- ▶ If the oven is installed behind a furniture panel (e.g. a door), ensure that the door is never closed whilst the oven is in use. Heat and moisture can build up behind a closed furniture panel and cause subsequent damage to the oven, the housing unit and the floor. Do not close the door until the oven has cooled down completely.

Correct use

 Danger of burning.

The oven becomes hot when in use.

Depending on the function being used, you could burn yourself on the heating elements, oven interior, cooked food or oven accessories.

Wear oven gloves when placing food in the oven, turning or removing it and when adjusting oven shelves etc. in a hot oven.

► Due to the high temperatures radiated, objects left near the oven when it is in use could start to burn.

Do not use the oven to heat up the room.

► Oil and fat can ignite if overheated. Never leave the oven unattended when cooking with oil and fat. Do not use the oven for deep fat frying.

Never use water to extinguish ignited oil or fat. Switch the oven off immediately and then suffocate the flames by keeping the oven door closed.

Warning and Safety instructions

► Please be aware that durations when using microwave power are often considerably shorter when cooking, reheating and defrosting than when using functions without microwave power. Excessively long cooking times can lead to food drying out and burning or could even cause it to catch fire.

Make sure you keep to recommended grilling times when using the grill. Do not use Microwave solo  for drying items such as flowers, herbs, bread or rolls. Never use functions with the grill for bake-off products such as bread or bread rolls, or for drying flowers or herbs. Use Fan plus  for these procedures and monitor the process carefully.

► When using residual heat to keep food in the oven warm, the high humidity and amount of condensation in the oven can cause corrosion in the oven. The control panel, the worktop or the housing unit can also suffer damage.

Always cover food when using Microwave solo  function. Once food is cooked through, use a lower power for continued cooking to reduce the amount of steam produced from the food.

When using residual heat do not switch the oven off. Instead set the temperature to the lowest setting and leave the oven on the selected function.

The fan will then remain on automatically and dissipate the moisture.

► Food which is stored in the oven or left in it to be kept warm can dry out and the moisture released can lead to corrosion damage in the oven.

Always cover food that is left in the oven to keep warm.

Warning and Safety instructions

► A build-up of heat can cause damage to the enamel on the floor of the oven.

When using Conventional heat , Bottom heat , Intensive bake  or Fan plus  do not line the floor of the oven with anything, e.g. aluminium foil or so-called protective liners. Neither should you place roasting pans or glass trays directly on the oven floor.

► It is important that the heat is allowed to spread evenly throughout the food being cooked. This can be achieved by stirring and/or turning the food, and observing a sufficiently long standing time, which should be added to the time needed for cooking, reheating or defrosting.

► When heating food and drinks, remember that the heat is created in the food itself, and that the container will normally be cooler. The dish is only warmed by the heat of the food.

Before serving, remember to allow a sufficient standing time and then always check the temperature of the food after taking it out of the microwave oven. The temperature of the container is not an indication of the temperature of the food or liquid in it. **This is particularly important when preparing food for babies, children, and the elderly or infirm.** Shake or stir baby milk and food thoroughly after heating, and try it for temperature to ensure that it will not scald the baby.

► The oven is not suitable for cleaning or disinfecting items. Items can get extremely hot and there is a danger of burning when the item is removed from the appliance.

► Do not cook or reheat food or liquids in sealed containers, jars or bottles. With baby bottles, the screw top and teat must be removed. Otherwise pressure will build up which can cause the bottle or container to explode, posing a severe risk of injury.

Warning and Safety instructions

► When boiling and in particular when heating up liquid using microwave power, the boiling point of the liquid may be reached with the production of typical bubbles. The liquid does not boil evenly throughout. This so-called 'boiling delay' can cause a sudden build up of bubbles when the container is removed from the oven or shaken. This can lead to the liquid boiling over suddenly and explosively. Danger of burning.

The formation of bubbles can be so strong that the pressure forces the oven door open. Danger of injury and damage to the appliance. Stir liquid before cooking/heating it up. After heating it up wait for at least 20 seconds before removing the container from the oven.

Placing a suitable glass rod or utensil in the container whilst heating liquid up can also help prevent it from boiling over.

► Eggs can be cooked without their shells using microwave power only if the yolk membrane has been punctured several times first. The pressure could otherwise cause the egg yolk to explode.

Warning and Safety instructions

- ▶ Eggs in their shells will explode if cooked with microwave power, even after taking them out of the oven. They can only be cooked in their shells using microwave heat in a specially designed egg-boiling device available from specialist shops. Hard-boiled eggs must not be reheated in the microwave oven either as they too will explode.
- ▶ Food with a thick skin or peel, such as tomatoes, sausages, jacket potatoes and aubergines, should be pierced or cut in several places to allow steam to escape and prevent the food from bursting.
- ▶ To check food temperature, first interrupt the cooking process. Only use a thermometer specifically approved for food use to measure the temperature of the food. Do not use a thermometer containing mercury or liquid as these are not suitable for use with very high temperatures and break very easily.
- ▶ Do not use the oven to heat up cushions or pads filled with cherry kernels, wheat grains, lavender or gel, such as those used in aromatherapy. These pads can ignite when heated even after they have been removed from the oven.
- ▶ To avoid fuelling any flames, do not open the oven door if smoke occurs inside the appliance. Interrupt the process by switching the appliance off and disconnect it from the mains electricity supply. Do not open the door until the smoke has dispersed.
- ▶ Dishes with hollow knobs or handles are not suitable for use with microwave power. Moisture which has gathered in the hollow recesses can cause pressure to build up and the item can explode. If the hollow recess is sufficiently ventilated, the item could be used. However, we recommend that you do not use such dishes in the microwave oven.

Warning and Safety instructions

- ▶ Fire hazard. Using Microwave solo  or Microwave combination programmes with plastic dishes which are not microwave safe can cause them to melt and damage the appliance. Do not use any containers or cutlery made from or containing metal, aluminium foil, lead crystal glassware, temperature-sensitive plastics, wooden utensils or cutlery, metal clips or plastic or paper covered wire ties. Do not use bowls with milled rims, or plastic pots with the foil lid only partially removed (see "Suitable containers for microwave use").
- ▶ For functions without microwave power: plastic containers which are not suitable for use in an oven can melt at high temperatures and can even damage the oven or catch fire. Only use containers which are declared by the manufacturer as being suitable for use in an oven. Follow the manufacturer's instructions on use.
- ▶ Do not leave the microwave oven unattended when reheating or cooking food in disposable containers made of plastic, paper or other inflammable materials. Before using single-use containers make sure they are suitable for use in microwave ovens. See "Suitable containers for microwave ovens".
- ▶ Do not reheat food in the oven in heat-retaining bags which are intended for use in normal ovens.
These heat-retaining bags usually contain a thin layer of aluminium foil which reflects microwaves. This reflected energy can, in turn, cause the outer paper covering to become so hot that it ignites.
- ▶ The oven can suffer damage when using Microwave solo  or Combination programmes if it is empty or incorrectly loaded.
For this reason please do not use functions with microwave power to pre-heat crockery or to dry herbs.
Instead use Fan plus  or Conventional heat .
- ▶ Do not bottle or heat up food in closed containers e.g. tins or sealed jars in the oven, as pressure will build up in the container, causing it to explode.

Warning and Safety instructions

- ▶ You could injure yourself on the open oven door or trip over it. Avoid leaving the door open unnecessarily.
- ▶ The door can support a maximum weight of 8 kg. Do not sit on or lean against an open door, and do not place heavy objects on it. Also make sure that nothing can get trapped between the door and the oven cavity. The oven could get damaged.

Warning and Safety instructions

Cleaning and care

- ▶ Do not use a steam cleaning appliance to clean this appliance. The steam could reach electrical components and cause a short circuit.
- ▶ Scratches on the door glass can result in the glass breaking. Do not use abrasive cleaners, hard sponges, brushes or sharp metal tools to clean the door glass.
- ▶ Try to avoid the interior walls being splashed with food or liquids containing salt. If it does happen, wipe these away thoroughly to avoid corrosion on the stainless steel surface.

Accessories

- ▶ Only use genuine original Miele accessories. Using accessories from other manufacturers will invalidate the guarantee, and Miele cannot accept liability.
- ▶ Only use the Miele food probe supplied with this oven. If it is faulty, it must only be replaced with a suitable original Miele food probe.


Disposal of the packing material

The packaging is designed to protect the appliance from damage during transportation. The packaging materials used are selected from materials which are environmentally friendly for disposal and should be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites.

Disposing of your old appliance


Electrical and electronic appliances often contain valuable materials. They also contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of it with your household waste.

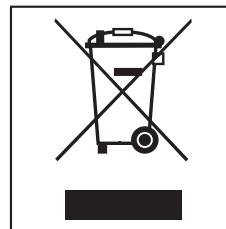


Please dispose of it at your local community waste collection / recycling centre.

Ensure that it presents no danger to children while being stored for disposal.

Overview

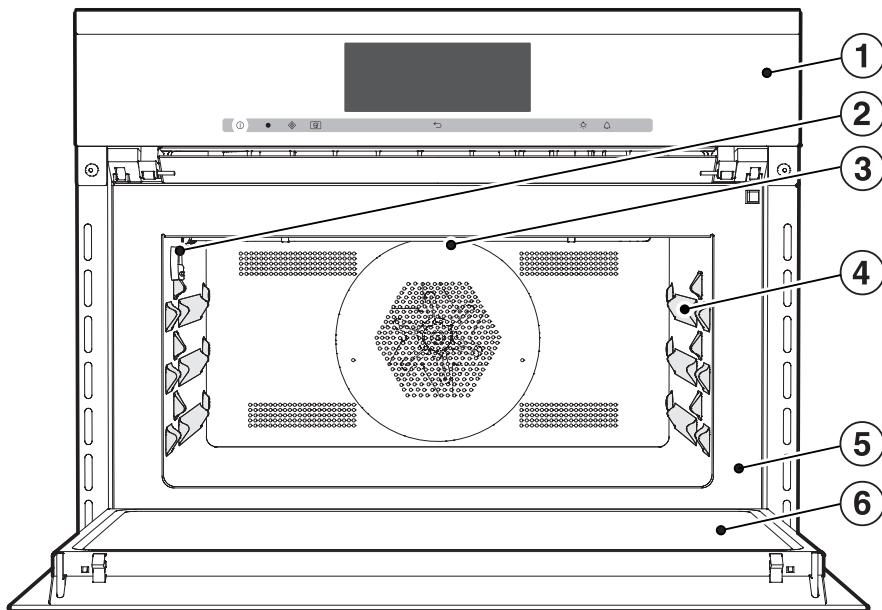

- ① Controls
- ② Connection socket for the food probe
- ③ Top heat/grill element
- ④ Three shelf levels for the glass tray and rack
- ⑤ Front frame with data plate
- ⑥ Door

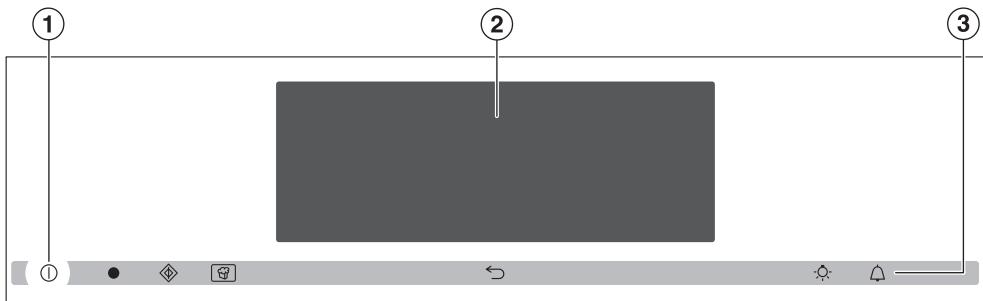

- ① On/Off sensor ①
- ② Display
- ③ , , ↲, ☀, 🔔 sensors

Controls

On/Off sensor ①

The On/Off sensor ① is recessed and reacts to touch.

It is used for switching the oven on and off.

Sensor controls

The ♦, ☰, ↵, ☷, ☸ sensors react to touch. Each touch is confirmed with a keypad tone. This keypad tone can be switched off (see "Settings – Volume – Keypad tone").

Sensor	Function	Notes
↵	To go back a step	
♦	Quick MW	The oven starts with maximum power (1000 W) and a duration of 1 minute (see "Quick-MW"). Touching the sensor repeatedly increases the duration in stages. This function can only be used when no other cooking programmes are in use.

Sensor	Function	Notes
	Popcorn	<p>The oven starts with 850 W and a duration of 3 minutes (see "Popcorn").</p> <p>This function can only be used when no other cooking programmes are in use.</p>
	For switching the oven interior lighting on and off	<p>If a list of options is showing in the display or if a cooking process is running, touching  will switch the oven interior lighting on or off.</p> <p>If the display is dark, the  sensor will not react until the oven is switched on.</p> <p>The oven interior lighting switches off after 15 seconds during a cooking process or remains constantly switched on, depending on the setting selected.</p>
	For activating and deactivating minute minder / alarm	<p>If a list of options is showing in the display, or if a cooking process is running, you can enter a minute minder time (e. g. when boiling eggs on the hob) or an alarm time, i. e. a specific time, at any point (see "Alarm + Minute minder").</p> <p>If the display is dark, the  sensor will not react until the oven is switched on.</p>

Controls


Display

The display is operated by finger tip contact and in contrast to the sensors, there is no audible tone when it is touched.

Do not use pointed or sharp objects e. g. pens to operate the Touch display as they can damage the surface.

The Touch display will also not react to being tapped by such objects.

The display is split into three sections.

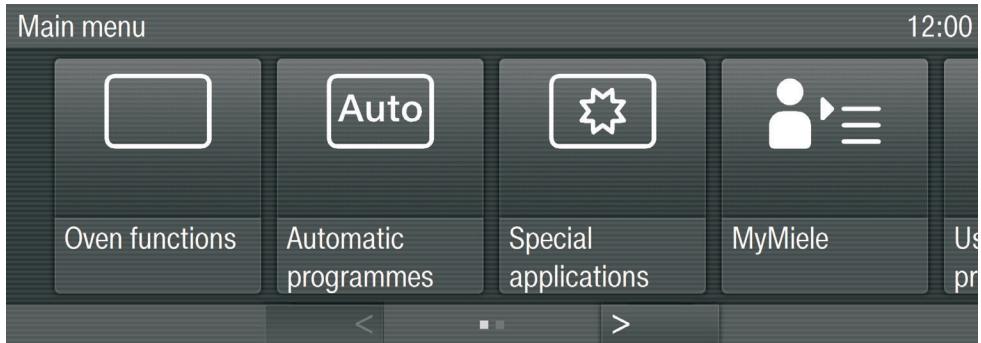

The menu path appears at the top left and shows you which menu or sub menu you are in.

Options within a menu are separated by a vertical line. If there is not enough space to show the whole path, additional options are indicated by **... ▶**.

The time of day, alarm and minute minder are shown at the top right hand side of the display.

The middle section shows the current menu and options. You can scroll to the right or left by swiping your finger across the display.

The **<** and **>** sensors at the bottom of the screen are used for scrolling to the left or right. The number of small squares between the arrows indicates the number of screens available and your position within the current menu.

Main menu

- Oven functions 
- Automatic programmes 
- Special applications 
- MyMiele 
- User programmes 
- Settings 

Symbols

The following symbols may also appear in the display in addition to the text:

Symbol	Explanation
	Some settings, e. g. display brightness and buzzer volume are selected using a bar chart.
	This symbol indicates that there is additional information and advice about using the oven. Select "OK" to access the information.
	The system lock or sensor lock is switched on (see "Settings – Safety"). The oven cannot be used.
	Alarm
	Minute minder
	This indicates that there are more options available, which are not visible because there is not enough space in the display.

Controls

When a function is selected, the following symbols may appear in the display, depending on setting:

Symbol	Explanation
	Fan plus
	Microwave
	Conventional heat
	Intensive bake
	Auto roast
	Bottom heat
	Grill
	Fan grill
	MW + Fan plus *
	MW + Fan grill *
	MW + Grill *
	MW + Auto roast *
	Gentle bake
	Core temperature when using the food probe

* MW = Microwave

Operation

Each time you touch a possible option the relevant field lights up orange.

To select or to open a menu

- Touch the field you want to select it.

Scrolling

You can scroll left or right.

- Swipe the screen, i. e. place your finger on the display and swipe in the direction you want or touch the < or > sensors to scroll to the left or the right.

Exiting a menu

- Touch ⏪ or touch an option in the menu path at the top of the screen or touch

Depending on which menu you are in, this will take you back a level or back to the main menu.

Help function

The "Help" field appears with some functions and options.

- Touch the field.

Helpful information will then appear in text and pictures.

Entering numbers

Numbers can be entered by swiping and touching the roller or by using the numerical keypad.

To enter numbers using the roller:

- Swipe the roller up or down to select the number you want.

To enter numbers using the numerical keypad:

- Touch ☰ in the bottom right of the input field.

The numerical keypad will appear.

- Touch the numbers you want.

Once you have entered an accepted value the "OK" sensor will light up green. The last input figure can be deleted using the arrow.

- Touch "OK".

Entering letters

You can enter short names for your own user programmes using a keyboard.

- Touch the letters or numbers required.
- Touch "Save".

Features

Model numbers

A list of the ovens described in these operating instructions can be found on the back page.

Data plate

The data plate is located on the front frame, visible when the door is open.

The data plate states the model number of your oven, the serial number as well as connection data (voltage, frequency and maximum connected load).

Please have this information to hand, should you need to contact Miele regarding any questions or problems.

Items supplied

The oven is supplied with:

- the operating and installation instructions for using the oven,
- a cookbook or order voucher for a cookbook depending on country,
- screws for securing your oven in the housing unit,
- various accessories.

Accessories supplied and available to order

This oven is supplied with a glass tray and rack.

All the accessories as well as the cleaning and care products listed here are designed for Miele appliances.

These can be ordered via the internet at www.miele-shop.com, from Miele (see end of manual for contact details) or from your Miele dealer.

When ordering, please quote the model number of your oven and the reference number of the accessories required.

Glass tray




The glass tray is suitable for use with all cooking functions.

Always use the glass tray when using the Microwave (Solo) function .

Do not place items weighing more than 8 kg on it.

Do not place the hot glass tray on a cold surface, such as a tiled or granite worktop. The glass tray could get damaged. Use a suitable heat-resistant mat or pot rest.

Rack with non-tip safety notches

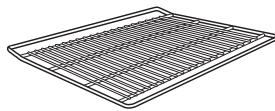

The rack can be used with microwave combination programmes or with oven functions without microwave power. However, it is **not suitable** for use with Microwave solo .

Danger of burning. The rack gets hot when used with cooking programmes..

Wear oven gloves when placing food in a hot oven and when taking it out.

Do not use the rack with Microwave solo .


This could cause arcing which could damage the oven and the rack. Do not place the rack directly on the floor of the oven. Instead, use one of the oven shelves.

Do not place items weighing more than 8 kg on the rack.


Features

The rack has non-tip safety notches which prevent it being pulled right out when it only needs to be pulled out partially.

When pushing the rack back in, always ensure that the safety notches are at the **back** of the oven (see illustration).

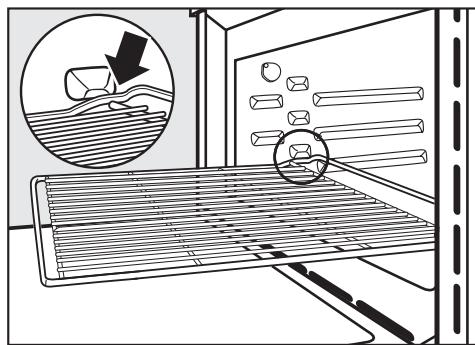


■ To remove the rack, lift it upwards slightly at the front when the safety notches connect with the sides of the oven.

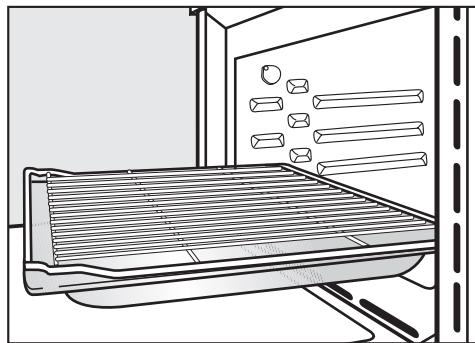

■ We recommend using the rack together with the glass tray when cooking items on the rack which might drip.


Food probe

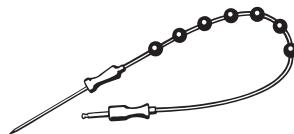

■ Using the food probe enables the temperature during the cooking process to be monitored simply and accurately (see "Roasting - Food probe").

Round baking tray HBF 27-1

Do not use the round baking tray with Microwave solo  or with Microwave combination programmes.

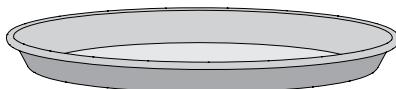

The round baking tray is suitable for cooking pizza, shallow cakes made with yeast or whisked mixtures, sweet and savoury tarts, baked desserts, flat bread, and can also be used for frozen cakes and pizzas.

Place the round baking tray on the rack.

The enamelled surface has been treated with PerfectClean.

HUB oven dishes and HBD oven dish lids

Do not use the gourmet oven dish with Microwave solo  or with Microwave combination programmes.

Miele gourmet oven dishes can be placed on the rack on shelf level 1. They have an anti-stick coating.

The Miele oven dishes are either 22 cm or 35 cm deep. The width and height are the same.

Lids are also available. These are ordered separately.

Depth: 22 cm

HUB61-22

HUB62-22*



HBD 60-22



Depth: 35 cm

HUB61-35**



HBD 60-35



* suitable for use on induction hobs

** Oven dish HUB61-35 cannot be used in conjunction with its lid because the total height of these two items exceeds the height of the cavity.

Features

Miele microfibre cloth

Light soiling and fingerprints can be easily removed with the microfibre cloth.

Miele oven cleaner

Miele oven cleaner is suitable for removing very stubborn soiling. It is not necessary to pre-heat the oven beforehand.

Oven controls

In addition to operating the various cooking functions for baking, roasting and grilling, the oven controls are also used to operate

- the time of day display,
- a minute minder,
- a timer to automatically switch cooking programmes on and off,
- Automatic programmes,
- create User programmes,
- settings that can be customised.

Cooling fan

The cooling fan will come on automatically when a cooking programme is started. The cooling fan mixes hot air from the oven cavity with cool room air before venting it out into the kitchen through vents located between the appliance door and the control panel.

The cooling fan will continue to run for a while after a cooking process to prevent moisture building up in the oven, on the control panel or on the oven housing unit. It will switch itself off automatically after a while.

Safety features

System lock

The system lock prevents the oven from being used unintentionally (see "Settings - System lock .

The system lock will remain activated even after an interruption to the power supply.

Safety switch-off

A function **without microwave** can be started without selecting a cooking duration. To prevent over-use and the consequent danger of fire, the oven will switch itself off automatically after a certain length of time. This can be between 1 hour and 12 hours depending on the function and temperature chosen.

If a **combination programme** is followed in quick succession by another programme using microwave power, the magnetron (which produces the microwaves) cannot be switched on again until approx. 10 seconds have elapsed. Therefore wait a short while before starting the second process.

Features

PerfectClean treated surfaces

PerfectClean surfaces have very good non-stick properties and are much easier to keep clean than conventional enamel surfaces, if cleaned regularly.

Food can be taken off these surfaces easily, and soiling from baking and roasting is simple to remove.

Food can be sliced or cut up on PerfectClean surfaces.

However, do not use ceramic knives as these will scratch the PerfectClean surface.

Surfaces treated with PerfectClean enamel can be cleaned as you would clean glass.

Read the instructions in "Cleaning and care" so that the benefits of the non-stick properties and easy cleaning are retained.

The oven compartment and the rack have a PerfectClean finish.

Basic settings

 The oven must not be operated until it has been correctly installed in its housing unit.

The oven will switch on automatically when it is connected to the electricity supply.

Welcome screen

The greeting "Miele Willkommen" will appear in the display and you will hear the welcome melody.

You will then be requested to select some basic settings which are needed before the appliance can be used.

Follow the instructions in the display.

Set the language

■ Select the language you want and touch "OK".

Select the country

■ Then select the country you want and touch "OK".

Set the date

- Swipe the screen in the "Day" field until the current date appears.
- Do the same thing for the "Month" and "Year", to set the date.
- Touch "OK".

The setting is now saved.

Set the time of day

- Swipe the screen in the left-hand field until the current hour appears.
- Do the same thing for the minutes in the right-hand field to set the time.

Alternatively you can set the time using the numerical keypad .

- Touch "OK".

The setting is now saved.

The time of day can be displayed in 12 hour format (see "Settings - Time - Clock format").

Before using for the first time

Time of day display

You will then be asked when you want the time of day to show in the display when the oven is switched off (see "Settings - Time - Display"):

- On
The time always shows in the display.
- Off
The display appears dark to save energy. Some functions are limited.
- Night dimming
The time only shows in the display between 5:00 and 23:00. It switches off at night to save energy.

■ Select the option you want.

■ Touch "OK".

Some information about energy consumption will appear in the display.

- Touch "OK".
- Follow and further instructions in the display.

The oven is ready for use once you have confirmed the message "Set-up successfully completed" with "OK".

If you have selected the wrong language by mistake proceed as described in "Settings - Language" .

Heating up the oven for the first time

New ovens can give off an unpleasant smell on first use. Heating up the oven for at least 1 hour with nothing in it will get rid of this smell.

Ensure that the kitchen is well ventilated during this operation. Close doors to other rooms to prevent the smell spreading throughout the house.

- Remove any stickers or protective foil from the oven and accessories.
- Take the accessories out of the oven and clean them (see "Cleaning and care").
- Before heating the oven up, wipe the interior with a damp cloth to remove any dust or bits of packaging that may have accumulated in the oven compartment during storage and unpacking.
- Switch the oven on.

The main menu will appear.

- Select Functions 
- Select Fan plus 

The recommended temperature will appear (160 °C).

The oven heating, lighting and cooling fan will switch on.

- Use the roller or the numerical keypad to set the maximum possible temperature of 250 °C.
- Touch "OK".

Heat the empty oven for at least an hour.

After at least an hour:

- Switch the oven off.

After heating up for the first time

 Danger of burning. Allow the oven interior to cool down before cleaning by hand.

- Switch the oven on.
- Clean the oven interior with a clean sponge and a solution of hot water and washing-up liquid or a damp microfibre cloth.
- Dry all surfaces with a soft cloth.
- Switch the oven off.

Leave the oven door open until the oven interior is completely dry.

Settings

Settings overview

Settings cannot be altered while a cooking programme is in progress.

Factory default settings are shown in **bold** in the chart.

Setting	Options	
Language 	[...] deutsch english [...] / Deutschland / Luxemburg / / Australia / United Kingdom /
Time	Display Clock display Clock format Set	On / Off / Night dimming Analogue / Digital 24 h / 12 h Set the time of day
Date	Set the date	
Lighting	On "On" for 15 seconds	
Start screen	Main menu Oven functions Automatic programmes Special applications MyMiele User programmes	
Brightness	Darker  Brighter	
Volume	The volume can be adjusted for the welcome melody, buzzer and keypad tones or switched off altogether. Buzzer tones Keypad tone Welcome melody	Quieter  Louder On / Off Quieter  Louder On / Off On / Off

Setting	Options	
Units	Weight	g lb/oz
	Temperature	°C °F
Quick MW	Power level	1000 W
	Duration	1:00 min
Popcorn	Duration	3:00 min
Keeping warm	On Off	
Cooling fan run-on	Temp. controlled Time controlled	
Recommended temperatures	You can change the recommended temperatures	
MW power levels	The recommended power levels can be changed for Microwave solo  and for Microwave combination programmes.	
Safety	System lock	On Off
	Sensor lock	On Off
Showroom programme	Demo mode	On Off
Factory default	Settings User programmes MW power levels Recommended temperatures MyMiele	

Settings

Open the Settings menu

From the main menu:

- Select Settings 

You can now check or make alterations to settings.

To change and save settings

- Select Settings 
- Swipe across the screen until the setting you want appears, then touch it to select.

The settings which are currently selected will have a coloured frame around them.

- Swipe across the screen until the option you want appears, then touch it to select it.

The setting is now saved.

Language

You can set the language and the country you want for the display.

After selecting and confirming your choice, the language you have selected will appear in the display.

Tip: If you have selected the wrong language by mistake, select the  symbol, to get back to the "Language" menu.

Time

Display

Select how you want the time of day to show in the display when the oven is switched off:

- On
The time always shows in the display.
- Off
The display is switched off to save energy. The oven has to be switched on before you can use it. This also applies to using the following functions: Quick MW , Popcorn , the Oven lighting  and the Alarm + Minute minder .
- Night dimming
To save energy the time is only shown in the display between 5:00 and 23:00. The rest of the time it is not visible.

Clock display

You can choose from an analogue clock face or a digital (h:min) display.

The date will also appear in the digital clock display.

Clock format

You can select whether the time shows as a 24 h or 12 h clock.

- 24 h
The time of day is shown in 24 hour clock format.
- 12 h
The time of day is shown in 12 hour clock format.

Set

Set the hours and the minutes.

If there is a power cut, the current time of day will reappear once power has been restored. The time is stored in memory for about 200 hours.

Settings

Date

Set the date.

When the oven is switched off, the date only appears if the oven is set to "Time – Clock type – digital".

Lighting

- On
The interior lighting is switched on during the entire cooking period.
- "On" for 15 seconds
The oven lighting switches off 15 seconds after a programme starts. Touching  switches it on for another 15 seconds.

Brightness

The display brightness is represented by a bar with seven segments.



- Use the segment bar to alter the brightness of the display.

Start screen

The main menu will appear in the display when the oven is switched on. You can change this default setting so that, for instance, the oven functions or MyMiele settings appear in the display.

Volume

Buzzer tones

The volume setting is represented by a bar with seven segments.



- Use the segment bar to alter the volume.
Select "On" or "Off" to switch the buzzer tones on or off.

Maximum volume is selected when all segments are filled.

If none of the segments are filled the volume is switched off.

Keypad tone

The volume of the tone that sounds each time you touch a sensor is represented by a bar with seven segments.



- Use the segment bar to alter the volume.
Select "On" or "Off" to switch the keypad tone on or off.

Maximum volume is selected when all segments are filled.

If none of the segments are filled the volume is switched off.

Welcome melody

The melody that sounds when you touch the On/Off sensor ① can be switched on or off.

Units

Weight

- g
Weight in Automatic programmes is set using grammes.
- lb/oz
Weight in Automatic programmes is set using pounds and ounces.

Temperature

- °C
The temperature is displayed in degrees Celsius.
- °F
The temperature is displayed in degrees Fahrenheit.

Settings

Quick MW

The maximum pre-set power level is 1000 W and the maximum duration is 1 minute.

- Power level

The following power levels can be selected 80 W, 150 W, 300 W, 450 W, 600 W, 850 W or 1000 W.

- Duration

The maximum duration that can be set depends on the power level selected.

80–300 W: maximum 10 minutes

450–1000 W: maximum 5 minutes.

Popcorn

The power level is pre-set at 850 W and the duration at 3 minutes. This is suitable for most brands of microwave popcorn.

This duration can be altered if necessary. The power level cannot be changed.

- Duration

The maximum duration that can be set is 4 minutes.

Keeping warm

- On

The warming function is activated as standard with Microwave solo , if a power level of min. 450 W and the cooking duration of min. 10 minutes is selected.

If food is not removed from the oven at the end of a programme, the warming function will automatically start after approx. 5 minutes.

"Keeping warm" will appear in the display and the food will be kept warm for approx. 15 minutes using a power level of 150 W.

- Off

The keeping warm function has been deactivated.

Cooling fan run-on

The cooling fan will continue to run for a while after the oven has been switched off to prevent any humidity building up in the oven, on the control panel or in the oven housing unit.

- Temp. controlled

The cooling fan switches off when the temperature in the oven drops below 70° C.

- Time controlled

The cooling fan switches off after a period of about 25 minutes.

Do not leave food in the oven to keep it warm if you have set the cooling fan to timed controlled operation.

Moisture levels in the oven could increase, leading to condensation forming on the control panel and surrounding kitchen furniture and drops of moisture collecting under the worktop.

Condensate can damage the oven housing unit, damage the worktop and lead to corrosion in the oven.

Recommended temperatures

If you cook with different temperatures a lot it makes sense to change the recommended temperature.

After selecting this option a list of functions will appear in the display.

- Touch the function you want to select it.

- Change the recommended temperature.

MW Power level

If you cook with different temperatures a lot it makes sense to change the recommended power level.

The recommended power levels can be changed for Microwave solo  and for Microwave combination programmes.

After selecting this option a list of functions will appear in the display together with their recommended power levels.

- Microwave solo 

80 W, 150 W, 300 W, 450 W, 600 W, 850 W, 1000 W

- Microwave combination programmes:

80 W, 150 W, 300 W

- Touch the function you want to select it.

- Change the recommended power level if necessary.

Settings

Safety

System lock

The system lock prevents the oven being switched on by mistake.

The system lock will remain activated even after an interruption to the power supply.

Select "On" to activate the system lock

– On

The system lock is now active. If you want to use the oven press the  symbol for at least 6 seconds.

The alarm and minute minder can still be used when the system lock is active.

– Off

The system lock is not active. You can use the oven as normal.

Sensor lock

The sensor lock prevents the oven being switched off by accident whilst in use.

Once activated, the sensor lock prevents sensors working once a programme has been started.

– On

The sensor lock is now active. If you want to use the sensors press the  symbol for at least 6 seconds.

– Off

The sensors will now react to touch again.

Showroom programme

This function enables the oven to be demonstrated in showrooms without heating up. It should not be set for domestic use.

Demo mode

- On
Touch OK for at least 4 seconds to activate demo mode.

Once activated, the message "Demo mode active. The appliance will not heat up" will appear in the display when the oven is switched on.

- Off
Touch OK for at least 4 seconds to deactivate demo mode. The oven can then be used as normal.

Factory default

- Settings
Any settings that you have altered will be reset to the factory default setting.
- User programmes
All user programmes will be deleted.
- MW Power level
Power levels which have been changed will be reset to the factory default settings.
- Recommended temperatures
Recommended temperatures which have been changed will be reset to the factory default settings.
- MyMiele
All MyMiele entries will be deleted.

MyMiele

You can personalise your oven using the MyMiele  function by inputting frequently used processes.

It is particularly useful with Automatic programmes as you do not need to work through every screen in order to start your programme.

You can also set processes that you have entered into MyMiele to appear in the Start screen (see "Settings – Start screen").

To add an entry

You can add up to 20 entries.

■ Select "MyMiele .

■ Select "Add entry".

You can select options listed in the following categories:

- Oven functions 
- Automatic programmes 
- Special applications 
- User programmes 

■ Confirm your choice with OK.

A box will appear in the list next to the selected option, together with a symbol to show which category it was selected from.

■ Proceed as above for further entries as required. You can only chose options that have not already been selected.

To edit MyMiele

First select "Process" then

- add entries as long as MyMiele contains fewer than 20 entries,
- delete entries,
- sort entries as long as MyMiele contains more than 4 entries.

To delete entries

- Select "MyMiele ≡".
- Select "Process".
- Select "Delete entry".
- Select the entry that you want to delete.
- Confirm your choice with OK.

The entry will then be removed from the list.

To sort entries

The order can be rearranged as long as there are more than 4 entries.

- Select "MyMiele ≡".
- Select "Process".
- Select "Sort entry".
- Select the entry that you want to move.
- Select the position you want to move it to.
- Confirm your choice with OK.

The entry will now appear in the position you want it in.

Minute minder + Alarm

Using the  sensor you can set a minute minder duration to time any activity in the kitchen, e.g. boiling eggs, or an alarm for a specific time.

Two alarms can be set simultaneously, two minute minder durations or an alarm and a minute minder duration.

Using the alarm

The alarm can be used to set a specific time at which a buzzer will sound on the oven.

Setting the alarm

If "Time – Display – Off" has been selected, you will need to switch the oven on before you can set the alarm. The time for the alarm will now appear in the display when the oven is switched off.

- Touch .
- Touch "New alarm".
- Set the time for the alarm.
- Touch "OK".

When the oven is switched off, the alarm time and  will appear instead of the time of day.

If you are cooking at the same time or if you are in a different menu, the alarm time and  will appear in the top right hand side of the display.

At the set alarm time

- a buzzer will sound if the buzzer volume has been set (see "Settings - Volume - Buzzer tones").
-  will flash next to the time in the display.
- Touch  or the alarm  in the top right hand side of the display.

The buzzer will stop and the symbols in the display will go out.

Changing an alarm

- Touch the alarm  at the top right hand side of the display or touch the  sensor and select the relevant alarm.

The alarm selected appears.

- Set the new time for the alarm.
- Touch "OK".

The altered alarm is now saved and will show in the display.

Deleting an alarm

- Touch the alarm  at the top right hand side of the display or touch the  sensor and select the relevant alarm.

The alarm selected appears.

- Touch "Reset".
- Touch "OK".

The alarm will be deleted.

Minute minder + Alarm

Using the minute minder

The minute minder can be used to time other activities in the kitchen, e.g. boiling eggs.

The minute minder can also be used at the same time as a cooking programme in which the start and finish times have been set, e.g. as a reminder to stir a dish or add seasoning etc.

A maximum minute minder duration of 9 hours, 59 minutes and 59 seconds can be set.

To set the minute minder

Example:

You want to boil some eggs and set a minute minder time.

If you want to use the minute minder and "Time – Display – Off" has been selected, you will need to switch the oven on before you can set the minute minder. The minute minder can then be seen counting down in the display when the oven is switched off.

- Touch .
- Touch "New minute minder time".
- Set the minute minder time you require.
- Touch "OK".

When the oven is switched off the minute minder time counts down in the display and  appears instead of the time of day.

If you are cooking at the same time or if you are in a different menu, the minute minder time and  will appear in the top right hand side of the display.

At the end of the minute minder time

- a buzzer will sound if the buzzer volume has been set (see "Settings - Volume - Buzzer tones").
-  will flash and the display will show the time counting up if the oven is switched off or if you are cooking at the same time.
- Touch  or the minute minder time in the top right hand side of the display.

The buzzer will stop and the symbols in the display will go out.

To change the time set for the minute minder

- Touch the minute minder time in the top right hand side of the display or touch  and select the relevant minute minder.

The minute minder time selected appears.

- Set a new minute minder time.
- Touch "OK".

The changed minute minder is saved and will count down in seconds.

To cancel the time set for the minute minder

- Touch the minute minder time in the top right hand side of the display or touch  and select the relevant minute minder.

The minute minder time selected appears.

- Touch "Reset".
- Touch "OK".

The minute minder is now cancelled.

Overview of functions

Your oven has a range of oven functions for preparing food.

Functions which do not use microwave energy

Fan plus

This function is used for baking and roasting on different levels at the same time.

A lower temperature can be selected than when using Conventional heat , as the fan distributes the heat to the food straight away.

Auto roast

This is used for roasting at a high temperature and continued cooking at a lower temperature.

During the searing phase the oven heats up to a high temperature (230 °C) to seal the meat and keep it succulent and tasty. As soon as this temperature has been reached, the oven temperature automatically drops back down to the pre-selected temperature for continued roasting.

Grill

For grilling thin cuts (e.g. steaks) and browning baked dishes.

Fan grill

For grilling thicker cuts of meat (e. g. roulades, chicken). Lower temperatures can be used than when using the Grill  function, as the fan distributes the heat to the food straight away.

Intensive bake

For baking cakes with moist toppings. Intensive bake is not suitable for baking thin biscuits or for roasting as the juices will become too dark.

Conventional heat

For baking and roasting traditional recipes, preparing soufflés and cooking at low temperatures.

If using an older recipe or cookbook, set the oven temperature for Conventional heat 10 °C lower than that recommended. This will not change cooking times.

Bottom heat

Use this setting towards the end of cooking to brown the base of a cake, quiche or pizza.

Gentle bake

Ideal for cooking bakes and gratins that need to be crispy on top.

Microwave solo

This function is used to rapidly defrost, reheat and cook food

Microwave combination programmes

With Microwave combination programmes the heating element and the magnetron switch on and off alternating one after the other. The heating element browns the food and the magnetron helps it cook quickly.

A maximum microwave power level of 300 W can be used with Microwave combination programmes.

MW + Fan plus

For rapid reheating and cooking of food, browning it at the same time. This combination programme saves the most time and energy.

When baking do not set the microwave power higher than 150 W.

MW + Auto roast

This is used for roasting at a high temperature and continued cooking at a lower temperature.

During the searing phase the oven heats up to a high temperature (230 °C) to seal the meat and keep it succulent and tasty. As soon as this temperature has been reached, the oven temperature automatically drops back down to the pre-selected temperature for continued roasting.

MW + Grill

For grilling thin cuts (e.g. steaks) and browning baked dishes.

The grilling duration is shorter.

MW + Fan grill

For grilling larger items, e.g. rolled meat, poultry.

The grilling duration is shorter.

Microwave power

How it works

In a microwave combination oven there is a high-frequency tube called a magnetron. This converts electrical energy into microwaves. These microwaves are distributed evenly throughout the oven interior, and rebound off the metal sides of the oven interior to reach the food from all sides.

In order for microwaves to reach the food, they must be able to penetrate the cooking utensil being used.

Microwaves can penetrate porcelain, glass, cardboard and plastics, but not metal. Do not, therefore, use utensils made of metal, or which contain metal, for example in the form of gold or silver trim. The metal reflects the microwaves and this could cause sparking. The microwaves cannot be absorbed.

Microwaves pass through a suitable container and find their way directly into the food. All food contains moisture molecules which, when subjected to microwave energy, start to oscillate 2.5 thousand million times a second. The friction caused by this vibration creates heat, which first starts developing around the outside of the food and then slowly penetrates towards the centre. The moisture, fat and sugar content of food will affect the speed at which it is cooked. The more water a food contains, the quicker it is to reheat or cook.

As heat is produced directly in the food,

- food can generally be cooked without adding much liquid or cooking oil.
- cooking, reheating and defrosting is quicker than using conventional methods.
- nutrients, such as vitamins and minerals, are generally retained.
- the colour, texture and taste of food are not impaired.

Microwaves stop being produced as soon as the cooking process is interrupted or the appliance door is opened.


When the appliance is in operation, the closed, sealed door prevents microwaves escaping from the appliance.

Power levels


The following power levels can be selected:

80 W, 150 W, 300 W, 450 W, 600 W, 850 W, 1000 W


Suitable containers for microwave use

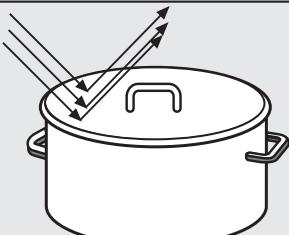

Microwaves are reflected by metal,

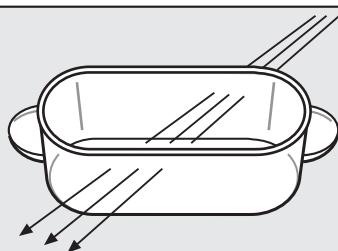

pass through glass, porcelain, plastic and card,

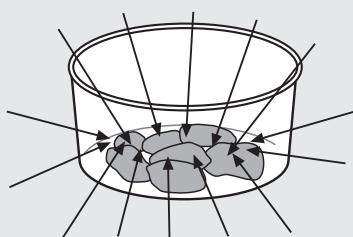

and are absorbed by food.

Fire hazard. Non-microwave safe dishes can suffer damage or damage the oven if used with Microwave solo (wf) or Microwave combination programmes.

The material and shape of the containers used affect cooking results and times.

Heat distribution is more even in round and oval shaped flat containers than in rectangular containers, providing better results.

Suitable containers for microwave use

Glassware

Heat-resistant glass or ceramic glass are ideal for use with microwave power.

Exception: Do not use crystal glass as it contains lead which can crack or shatter in a microwave oven.

Porcelain

Porcelain is a suitable material.

Exception: Do not use porcelain with gold or silver edging or items with hollow knobs or handles, as insufficient ventilation may cause a build-up of pressure.

Suitable containers for microwave use

Earthenware

Decorated earthenware is only suitable if the decoration is beneath an all-over glaze.

Danger of burning. Wear oven gloves when removing earthenware dishes from the oven.

Plastics

Plastic containers and plastic disposable containers may only be used for Microwave solo  if they have been declared as suitable for microwave use by the manufacturer. To protect the environment it is best to avoid using single-use containers.

Do not leave the oven unattended when reheating or cooking food in disposable containers made of plastic, paper or other inflammable materials.

Plastic containers must only be used with Microwave solo . They must not be used with Microwave combination programmes. They must be heat-resistant to a minimum of 110 °C.

Otherwise the plastic may melt and fuse with the food.

– Plastic microwave containers

These are readily available from retail outlets.

– Styrofoam containers

Styrofoam containers can be used for short, timed warming and reheating of food.

– Plastic "Boil-in-the-bag" bags

Plastic boiling bags can be used for cooking and reheating. They should be pierced beforehand so that steam can escape.

This prevents a build-up of pressure and reduces the risk of the bag bursting. There are also special steaming bags available which do not need to be pierced. Please follow instructions given on the packet.

– Roasting bags and tubes

Please follow the manufacturer's instructions when using roasting bags and tubes.



Do not use metal clips, plastic clips containing metal parts, or paper ties containing wire. There is a danger that they will ignite when heated.

– Melamine containers

Melamine is not suitable for use in this oven. Melamine absorbs microwave energy and gets hot. When purchasing plasticware, make sure that it is suitable for use in a microwave oven.

Suitable containers for microwave use

Unsuitable

 Dishes with hollow knobs or handles are not suitable for use with microwave power. Moisture which has gathered in the hollow recesses can cause pressure to build up and the item can explode. If the hollow recess is sufficiently ventilated, the item could be used. However, we recommend that you do not use such dishes in the microwave oven.

Metal

Metal reflects microwaves and obstructs the cooking process.

- Do not use metal containers, aluminium, foil, metal cutlery and china with metallic decoration such as gold rims or cobalt blue with Microwave combination programmes.

Do not use containers where the foil lid has not been completely removed as small pieces of foil can cause sparking.

Exceptions:

The rack **supplied** can be used with microwave combination programmes or with oven functions without microwave power. However, it is **not suitable** for use with Microwave solo .

Do not place the rack directly on the floor of the oven. Instead, use one of the oven shelves.

- Metal bakeware can be used with microwave combination programmes.
- Ready-meals in aluminium foil trays can be defrosted and reheated using microwave power as long as the lid is removed.

When using foil trays there is a risk of arcing or sparks occurring in the oven. For this reason place the foil tray on the glass tray and not on the rack.

The foil tray must be at least 2 cm away from the oven walls. It must not touch them.

However, as food is only heated from the top it is better to remove the food from the aluminium foil container and transfer it to a dish suitable for use in a microwave oven. The heat distribution will be more even.

Suitable containers for microwave use

- For even defrosting and to avoid overcooking unevenly shaped cuts of meat, poultry or fish, small pieces of aluminium foil may be used to mask wingtips or other thin parts for the last few minutes of the programme.

Make sure that the aluminium foil is at least 2 cm from the oven walls at all times. It must not touch the walls.

- Metal meat skewers or clamps should only be used if they are very small in comparison to the size of the cut of meat.

Glazes and colours

Some glazes and colours contain metal and are therefore unsuitable for microwave functions.

Wood

Wooden dishes are not suitable. Moisture contained in the wood evaporates when exposed to microwave energy, causing the wood to dry and crack.

Testing dishes for their suitability

If in doubt as to whether glass, earthenware or porcelain plates or dishes are suitable for use with microwave energy, a simple test can be performed:

- Place the container in the middle of the glass tray and slide the tray into shelf level 1.
- Close the door.
- Select Microwave solo .
- Set the highest power level (1000 W) and a duration of 30 seconds.
- Start the programme.

At the end of the test, the water in the glass should be hot and the dish cool. If the dish is hot, it would be unwise to use the dish.


If a cracking noise is heard accompanied by sparks during the test, switch the appliance off immediately. Any crockery which causes this reaction is unsuitable for use with microwave power.

If any doubt exists about the suitability of a container, please contact the supplier.

This test cannot be used to check whether items with hollow knobs or handles are suitable for use with microwave power.

Suitable containers for microwave use

Placing the dish in the oven

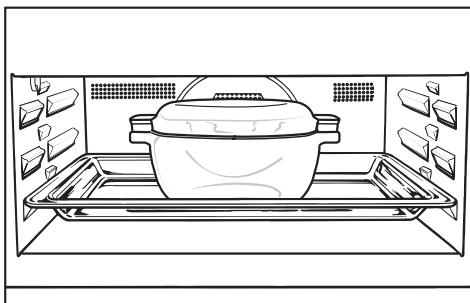


- Insert the glass tray on shelf level 1.
- The dish containing the food should always be placed in the middle of the glass tray.

Placing the food directly on the floor of the oven would give unsatisfactory and uneven results as the microwaves would not be able to reach the food from below.

Cover

A cover:

- prevents too much steam escaping, especially when cooking foods which need longer to cook, such as potatoes.
- speeds up the cooking process.
- prevents food from drying out.
- helps keep the oven interior clean.

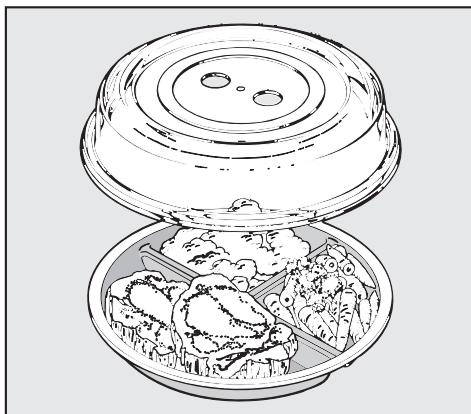

- When using Microwave solo  always cover the food with a lid or cover made of microwave safe glass or plastic.

These are available from retail outlets.

Alternatively, use a clingfilm recommended for use in a microwave oven (pierce as instructed by the manufacturer). Heat can cause normal clingfilm to distort and fuse with the food.

Suitable containers for microwave use

 The cover can only withstand temperatures up to 110 °C. Higher temperatures (e. g. those used for grilling and Fan plus) can cause the plastic to distort and fuse with the food. The cover should only be used with Microwave solo .

The cover should not form a seal with the container. If the cover is used with a container which only has a narrow diameter, there might not be enough room for condensation to escape through the holes in the top. The cover could get too hot and could start to melt.

Do **not** use a cover if:

- cooking breaded food,
- cooking food which requires a crisp finish,
- cooking food with a Microwave combination programme.

 Do not cook or reheat food or liquids in sealed containers, jars or bottles. With baby bottles, the screw top and teat must be removed. Otherwise pressure builds up which can cause the bottle or container to explode, posing a severe risk of injury.

- Remove any accessories from the oven that you do not require for cooking.
- Pre-heat the oven only if instructed to do so in the recipe or the cooking chart.
- If possible, do not open the door during a programme.
If the door is opened during a programme that is not using microwave power, the heat in the oven automatically switches off. The fans continue to operate. As soon as the door is closed again, the programme will continue.
- In general, if a range of temperatures is given, it is best to select the lower temperature and to check the food after the shortest given time.
- Use Fan plus  as you can cook at temperatures 10–30 °C lower than when using other functions.
- Fan grill  can be used for a wide variety of food. With Fan grill you can use lower temperatures than with other grill functions which use the maximum temperature setting.
- Your oven will use as little energy as possible if you set the time of day display to "Time - Display - Off".
- In the factory default setting of "Lighting – On for 15 seconds" the oven lighting will switch off automatically after 15 seconds if a programme is running. Touch  at any time to switch the light back on.

Residual heat use

The oven heating will switch off automatically shortly before the end of a cooking process for which an automatic switch-off time has been set or which is using the food probe.

Cooking continues using residual heat. The heat in the oven is sufficient to complete the cooking process.

Energy save mode

The oven will switch itself off automatically to save energy if no other action is taken within a certain time frame after switching it on or after the end of a cooking programme.

The time when this happens will depend on the selected settings (function, temperature and duration).

The time of day will be displayed or the display will remain dark (see "Settings - Time - Display").

Functions without microwave power

Simple operation

- Switch the oven on.

The main menu will appear.

- Place the food in the oven.

- Select Functions

- Touch the function you want to select it.

Function and recommended temperature will appear.

The oven heating, lighting and cooling fan will switch on.

- Change the recommended temperature if necessary.

The recommended temperature will be automatically accepted within a few seconds.

If required, touch "Change" to go back to the temperature selection option (see "Changing the temperature").

- Touch "OK".

The required and the actual temperature will appear.

You will see the temperature increasing.

A buzzer will sound when the selected temperature is first reached. See "Settings - Volume - Buzzer tones".

After cooking:

- Take the food out of the oven.

- Switch the oven off.

Cooling fan

The cooling fan will continue to run for a while after a cooking process to prevent moisture building up in the oven, on the control panel or on the oven housing unit.

The cooling fan will switch off automatically when the temperature in the oven interior has fallen sufficiently.

You can change this default setting if you wish (see "Settings - Cooling fan run-on").

Using the oven - further functions

You can select cooking durations and further settings for the cooking process from the Open further settings field.

You have placed the food in the oven, selected a function and set the temperature.

If you are using the food probe, the "Core temperature" field will also appear and you cannot set a cooking time (see "Roasting - Food probe").

- Select "Change".
- Touch "Open further settings".

Further options will appear in the display which you can select or change for your programme:

- Duration
- Ready at
- Start at
(this will appear after a "Duration" or "Ready at" time has been set.)
- Rapid heat-up
(This only appears if a temperature of more than 100 °C has been set for Fan plus , Auto roast  or Conventional heat ).

- Crisp function
(Moisture reduction for making items crispy on the outside or baking deep filled fresh fruit cakes).
- Changing the function
(You can change the cooking function during operation).

Functions without microwave power

Changing the temperature

As soon as a cooking function is selected, a recommended temperature will appear in the display.

The following recommended temperatures are set at the factory:

Fan plus	160 °C (30–250 °C)
Conventional heat .	180 °C (30–250 °C)
Intensive bake . . .	170 °C (50–220 °C)
Auto roast*	160 °C (100–230 °C)
Bottom heat	190 °C (100–200 °C)
Grill	Level 3 (1–3)
Fan grill.	200 °C (100–220 °C)
Gentle bake	190 °C (100–230 °C)

* Initial searing phase temperature approx. 230 °C, continued roasting temperature 160 °C

- If the recommended temperature is suitable for your recipe, touch "OK".
- If it is not suitable for your recipe, you can change it for this particular cooking programme.

You can also permanently reset the recommended temperature to suit your personal cooking practices. See "Settings - Recommended temperatures".

Example:

You have selected Fan plus  and 170 °C and can see the temperature increasing.

You want to reduce the target temperature to 155 °C.

- Select "Change".
- Set the temperature.
- Touch "OK".

The altered target temperature is saved. The target and actual temperatures are displayed.

Rapid heat-up

Rapid heat-up can be used to speed up the heating up phase.

The Rapid heat-up function switches on automatically if you set a temperature of more than 100 °C for Fan plus , Auto roast  and Conventional heat .

Rapid heat-up should be switched off when cooking pizza and delicate items (e. g. sponge or biscuits). These will get brown too quickly on the top.

You can switch-off "Rapid heat-up" for a relevant cooking process.

Rapid heat-up

To switch off the Rapid heat-up function:

- Select "Change".
- Touch "Open further settings".
- Touch "Rapid heat-up".

"Off" will appear in the "Rapid heat-up" field.

- Touch "OK".

Rapid heat-up has been deactivated.

Pre-heating the oven

It is only necessary to pre-heat the oven in a few instances.

Most dishes can be placed in a cold oven. They will then make use of the heat produced during the heating-up phase.

Pre-heat the oven when using:

Fan plus

- dark bread dough,
- beef sirloin joints and fillet.

Conventional heat

- cakes and biscuits with a short baking time (up to 30 minutes)
- delicate mixtures (e.g. sponges)
- dark bread dough,
- beef sirloin joints and fillet.

- Select the required oven function and the temperature.
- Rapid heat-up should be switched off when baking pizza, biscuits and small cakes.
- Wait for heating-up to finish.

A buzzer will sound when the set temperature is reached as long as the buzzer is set (see "Settings - Volume - Buzzer tones").

Place the food in the oven.

Functions without microwave power

Using the Crisp function (steam reduction)

It is a good idea to use this function when cooking items which are moist on the inside but which should be crispy on the outside, e.g. frozen chips, croquettes.

It is also suitable for deep filled fresh fruit cakes, such as plum or apple cake.

You can activate the "Crisp function" with any function. For best results, activate it at the beginning of the cooking process.

You have placed the food in the oven, selected a function and set the temperature.

- Select "Change".
- Touch "Open further settings".
- Touch "Crisp function".

"On" will appear in the "Crisp function" field.

- Touch "OK".

Moisture reduction is now activated.

Changing the function

You can change the cooking function at any time during operation.

- Select "Change".
- Touch "Open further settings".
- Touch "Change function".
- Select the function you want.

The new function will appear in the display together with its recommended temperature.

- If necessary set a temperature for the new function.
- Touch "OK".

The function has been changed.

The times already entered will be kept.

Functions without microwave power

Setting the duration

You have placed the food in the oven, selected a function and set the temperature.

You can set the programme to switch on or on and off automatically by setting "Duration", "Ready at" or "Start at".

– Duration

Enter the cooking duration you require.

Once the duration set has elapsed, the heating will switch off automatically.

The maximum duration which can be set is 12:00 hours.

A cooking duration cannot be entered if you are using the food probe. When using the food probe, the cooking duration is determined by when the set core temperature is reached.

– Ready at

Set the time you want cooking to finish at. The oven will switch off automatically at the time you have set.

A "Ready at" time cannot be entered if you are using the food probe.

When using the food probe, the end of the cooking duration is determined by when the set core temperature is reached.

– Start at

Set the time you want cooking to start at. The oven will switch on automatically at the time you have set.

"Start at" can only be used together with "Duration" or "Ready at". (Exception: when using the food probe).

Functions without microwave power

Switching off automatically

Example:

It is 11:45. Your food needs 30 minutes to cook and should be ready at 12:15 .

Select "Duration" and set the time to 00:30 h or select "Ready at" and set the time to 12:15.

The oven will switch off automatically after this duration has elapsed or the time set has been reached.

Set the "Duration"

- Select "Change".
- Touch "Open further settings".
- Set the cooking duration.
- Touch "OK".

Set "Ready at"

- Select "Change".
- Touch "Open further settings".
- In the "Ready at" field, set the time at which the food should be ready.
- Touch "OK".

The cooking duration is saved and then counts down in minutes, with the last minute counting down in seconds.

Switching on and off automatically

We recommend using automatic switching on and off when roasting. For baking do not delay the start for too long as the cake mixture or dough will dry out, and the raising agents will lose their effectiveness.

To **switch a cooking programme on and off automatically** you have a choice of how to enter the time parameters:

- "Duration" and "Ready at"
- "Duration" and "Start at"
- "Ready at" and "Start at"

Example:

It is 11:30. Your food needs 30 minutes to cook and should be ready at 12:30 .

- Select "Change".
- Touch "Open further settings".
- Set a time of 00:30 h in the "Duration" field.
- Set the time to 12:30 in the "Ready at" field.
- Touch "OK".

The "Start at" time will be calculated automatically. "Start at 12:00" will appear in the display.

The oven will switch on automatically at this time.

Functions without microwave power

Sequence of a programme that switches on and off automatically

Up until the start time the function, the selected temperature, "Start at" and the start time will appear in the display.

After the programme has started you can follow the heating-up phase in the display until the required temperature has been reached.

Once this temperature is reached a buzzer will sound, if this option has been switched on (see "Settings - Volume - Buzzer tones").

After the heating-up phase the time remaining will appear in the display.

You can follow the time counting down in the display. The last minute counts down in seconds.

At the end of the programme a buzzer will sound, if this option has been switched on (see "Settings - Volume - Buzzer tones").

The oven heating and lighting will switch off. "Process finished" will appear in the display.

You have the option of saving the programme as a User programme (see "User programmes") or increasing the duration of the programme via "Change".

During the cooling down phase the cooling fan will continue to run for a while.

Changing an entered cooking time

- Select "Change".

All options that can be changed will appear.

- Set the time you require.
- Touch "OK".

These settings will all be deleted in the event of a power cut.

Cancelling cooking

- Touch ↲ twice.

"Cancel cooking?" will appear in the display.

- Touch Yes.

The main menu will appear. Any cooking durations set will be deleted.

Simple operation

- Switch the oven on.

The main menu will appear.

- Place the food in the oven.

- Select Functions .

- Select Microwave solo .

The recommended power level and the duration field will appear in the display.

- Change the recommended temperature if necessary.

- Set the cooking duration.

The maximum duration that can be set depends on the power level selected.

- Touch Start.

The magnetron, lighting and cooling fan will come on and the cooking programme will start.

The time remaining will then appear in the display. To interrupt cooking at any time touch "Stop".

At the end of the cooking duration

- "Process finished" will appear in the display,
- the cooling fan will continue to run for a while,
- a buzzer will sound if the buzzer is switched on (see "Settings - Volume - Buzzer tones"),

You have the option of saving the programme as a User programme (see "User programmes") or increasing the duration of the programme via "Change". Touch  to go to the main menu.

- Take the food out of the oven.
- Switch the oven off.

Cooling fan

The cooling fan will continue to run for a while after a cooking process to prevent moisture building up in the oven, on the control panel or on the oven housing unit.

The cooling fan will switch off after a set time.

Using the oven - further functions

You can select further cooking durations and further settings for the cooking process from the Open further settings field.

You have placed the food in the oven, selected a power level and set the duration.

- Touch "Change".
- Touch "Open further settings".

Further options will appear in the display which you can select or change for your programme:

- Ready at
- Start at
- Changing the function
(You can change the cooking function during operation).

Changing the power level

In Microwave solo  the recommended power level is set at the factory to 1000 W.

You can also permanently reset the recommended power level to suit your personal cooking practices. See "Settings - MW power levels".

- Touch "Change".
- Set the power level and wait for approx. 15 seconds.

The programme will restart with the new power level.

Changing the cooking duration

- Touch "Change".
- Set the cooking duration.
- Touch Start.

The programme will restart with the new duration.

Changing the function

You can change the cooking function during operation. See "Functions without microwave power - Changing the function".

Setting further durations

You have placed the food in the oven, selected a power level and set the duration.

You can set the programme to switch off or on and off automatically by setting a "Ready at" or "Start at" time.

– Ready at

Set the time you want cooking to finish at. The oven will switch off automatically at the time you have set.

A "Ready at" time cannot be entered if you are using the food probe.

When using the food probe, the end of the cooking duration is determined by when the set core temperature is reached.

– Start at

Set the time you want cooking to start at. The oven will switch on automatically at the time you have set.

Switching on and off automatically

To **switch a cooking programme on and off automatically** you have a choice of how to enter the time parameters:

- "Duration" and "Ready at"
- "Duration" and "Start at"

Example:

It is 11:45. Your food needs 5 minutes to cook and should be ready at 12:30 .

- Set a time of 5:00 min. in the "Duration" field.
- Touch "Open further settings".
- Set the time to 12:30 in the "Ready at" field.
- Touch "OK".

The "Start at" time will be calculated automatically. "Start at 12:25" will appear in the display.

The oven will switch on automatically when this time is reached.

Sequence of a programme that switches on and off automatically

Up until the start time the function, the selected power level, the duration, "Start at" and the start time will appear in the display.

After starting the time remaining will appear in the display.

You can follow the time counting down in the display.

At the end of the programme a buzzer will sound, if this option has been switched on (see "Settings - Volume - Buzzer tones").

The magnetron and lighting will switch off. "Process finished" will appear in the display.

You have the option of saving the programme as a User programme (see "User programmes") or increasing the duration of the programme via "Change". Touch  to go to the main menu.

Changing the set time

- Touch "Change".
- Touch "Open further settings".

All options that can be changed will appear.

- Set the time you require.
- Touch OK or "Start" if the programme is already running.

These settings will all be deleted in the event of a power cut.

Deleting a finish time

- Touch "Change".
- Touch "Open further settings".
- Set the time to "----" in the "Ready at" field.
- Touch Start.

The cooking duration finish time is now deleted.

The programme will start using the duration set.

Cancelling cooking

- Touch  twice.

"Cancel cooking?" will appear in the display.

- Touch Yes.

The main menu will appear. Any cooking durations set will be deleted.

- Switch the oven off.

Microwave combination programmes

Microwave combination programmes use microwave power with another cooking function (e.g. Fan plus, Auto roast, Grill or Fan grill). This combination enables shorter cooking durations.

Simple operation

- Switch the oven on.

The main menu will appear.

- Place the food in the oven.

- Select Functions

- Touch the function you want to select it.

Recommended power level, recommended temperature and the duration field will appear in the display.

A microwave power level of maximum 300 W can be set for a Microwave combination programme.

The following recommended temperatures or levels are set at the factory:

MW + Fan plus 160 °C (30–220 °C)

MW + Fan grill 200 °C (100–200 °C)

MW + Grill Grill level 3 (levels 1–3)

MW + Auto roast* 160 °C (100–200 °C)

* Initial searing phase temperature approx. 200 °C, continued roasting temperature 160 °C

- Set the power level, temperature and the duration.

You can set a maximum duration of 2:00 hours.

- Touch Start.

The cooking programme will start. The oven heating, lighting and cooling fan will switch on.

The power level, duration and the required and actual temperature will appear.

You will see the temperature increasing.

A buzzer will sound when the selected temperature is first reached. See "Settings - Volume - Buzzer tones".

The time remaining will appear in the display.

Microwave combination programmes

At the end of the cooking duration

- "Process finished" will appear in the display,
- the oven heating will switch off automatically,
- the cooling fan will continue to run for a while,
- a buzzer will sound if the buzzer is switched on (see "Settings - Volume - Buzzer tones"),

You have the option of saving the programme as a User programme (see "User programmes") or increasing the duration of the programme via "Change". Touch  to go to the main menu.

- Take the food out of the oven.
- Switch the oven off.

Cooling fan

The cooling fan will continue to run for a while after a cooking process to prevent moisture building up in the oven, on the control panel or on the oven housing unit.

The cooling fan will switch off automatically when the temperature in the oven interior has fallen sufficiently.

You can change this default setting if you wish (see "Settings - Cooling fan run-on").

Using the oven - further functions

You can select further cooking durations and further settings for the cooking process from the Open further settings field.

You have placed the food in the oven, selected a temperature, a power level and a duration.

- Touch "Change".
- Touch "Open further settings".

Further options will appear in the display which you can select or change for your programme:

- Ready at
- Start at
- Duration MW
- Changing the function
(You can change the cooking function during operation).

Microwave combination programmes

Changing the power level and the temperature

- Touch "Change".
- Set the power level or the temperature.
- Touch "OK".

The altered value is now saved and will show in the display.

Using the Crisp function (steam reduction)

You can activate or deactivate the Crisp function (see "Functions without microwave power - Using the Crisp function (Moisture reduction)".

Changing the function

You can change the cooking function during operation. See "Functions without microwave power - Changing the function".

Setting further durations

You can set this procedure to switch on and off automatically (see "Microwave solo  – Setting further durations").

Setting the duration for microwave cooking

You can select how long you want microwave power to be on for at the beginning of a Microwave combination programme. This can be useful e. g. when baking to help the dough rise more efficiently.

- Touch "Change".
- Touch "Open further settings".
- Set the duration in the "MW duration" field.
- Touch "OK".

Your oven has a wide range of Automatic programmes to enable you to achieve excellent results with ease. Simply select the appropriate programme for the type of food you are cooking and follow the instructions in the display.

Select Automatic programmes from the "Automatic programmes"  menu.

List of food types

- Cakes
- Cookies / Muffins
- Bread
- Bread mixes
- Bread rolls
- Pizza, Quiche & Co.
- Meat
- Game
- Poultry
- Fish
- Bakes & Gratins
- Frozen food
- Dessert
- Side dishes
- Cook with microwave

To use an Automatic programme

Please see the separate booklet for recipes.

From the main menu:

- Touch Automatic programmes .

A list of food types will appear in the display.

- Touch the food type you want

The Automatic programmes available will then appear.

- Select the Automatic programme that you want.

Each step you need to take before starting the Automatic programme will appear in the display.

Depending on the programme you have selected, further information or prompts will appear regarding

- the roasting or baking dish,
- the shelf level,
- using the food probe,
- the cooking duration.

- Follow the instructions in the display.

Automatic programmes

Notes on using these programmes

- When using the Automatic programmes the recipes provided are designed as a guide only. You can use them for other similar recipes, including those using different quantities.
- The oven interior needs to be at room temperature before starting an Automatic programme.
- The duration quoted for Automatic programmes is an estimate. It may increase or decrease depending on the programme. When using the food probe the duration will be determined by when the core temperature is reached. The duration, in particular with meat, will vary depending on the initial temperature of the food.
- Some programmes require the addition of liquid during cooking. You will be prompted by a message in the display when this needs to be done (e.g. "Add liquid at ...").
- Some programmes require a pre-heating phase before food is placed in the oven. A prompt will appear to tell you when to add the food.

Search

(depending on language)

You can search "Automatic programmes " by food type and by the name of the Automatic programme.

There is a full text search which can also be used to search for parts of words.

From the main menu:

- Touch Automatic programmes .

A list of food types will appear in the display.

- Touch "Search".
- Use the keyboard to type in the search text, e.g. "Bread".

The number of hits will be shown in the bottom right of the display.

If no match is found, or if there are more than 40 matches, the "Hits" field will be deactivated and you will need to change the search text.

- Touch "Hits".

The food types and Automatic programmes available will then appear.

- Touch the Automatic programme you want, or the food type until the programme you want appears.

The Automatic programme will start.

- Follow the instructions in the display.

User programmes

You can create and save up to 20 of your own programmes.

- Each one can have up to 10 cooking stages. This enables you to save your most frequently used recipes very accurately. Each stage contains a function, temperature and duration or core temperature.
- You can specify the shelf level(s) for the food.
- You can enter the name of the programme for your recipe.

When you next select the programme it will start automatically.

There are different ways of creating a User programme:

- Touch "Save" at the end of running an Automatic programme.
- Touch "Save" after running a programme with a set duration.

Then name the programme.

To create a User programme

- Touch User programmes .
- Select "Create programme".

You can now specify the settings for cooking stage 1.

Follow instructions in the display:

- Select and confirm the cooking function, power level, temperature and duration or core temperature.

Depending on the cooking function selected you can switch on the Rapid heat-up and Crisp functions via "Open further settings".

Settings for the 1st cooking stage have now been set.

You can add more cooking stages, for example, if you want to add another cooking function to follow on from the first.

If further cooking stages are required:

- Touch "Add" and proceed as for the 1st cooking stage.

When you have finished setting the cooking stages:

- Touch "Finish".

Finally set the shelf level(s) to be used.

■ Touch the level you want.

■ Touch "OK".

A summary or your settings will appear in the display.

■ Check the settings and then touch "OK" or "Change" to alter a setting.

■ Select "Save".

■ Enter the programme name using the keyboard.

You can add a line break for longer programme names using the ↵ symbol.

■ Once you have entered the programme name, touch "Save".

A message will appear in the display confirming that the name has been saved.

■ Touch "OK".

You can start the saved programme immediately, delay the start or change the cooking stages.

The option to "Change cooking stages" is described in "To change User programmes".

To start a User programme

■ Touch User programmes .

The programme names will appear in the display.

■ Touch the programme you want.

You can start the saved programme immediately, delay the start or display the cooking stages.

– Start now

The programme will start straight away and the oven heating will switch on.

– Start later

This option only appears if you are using the food probe. You can specify when you want the programme to start. The oven heating will switch on automatically at the time you set.

– Ready at

You can specify when you want cooking to finish. The oven heating will switch off automatically at the time you set.

– Start at

You can specify when you want the programme to start. The oven heating will switch on automatically at the time you set.

– Display cooking stages

A summary of your settings will appear in the display. You can alter the settings via "Change" (see "To change User programmes").

User programmes

- Touch the function you want.
- Confirm the message regarding which shelf level to use with "OK".

The programme will start according to the specified start or finish time.

To change User programmes

Change cooking stages

Cooking stages in an Automatic programme that you have renamed as a User programme cannot be changed.

- Touch User programmes .

The programme names will appear in the display.

- Touch the programme you want.

A summary or your settings will appear in the display.

- Select "Change".

You can change the specified settings for a cooking stage or add more cooking stages to the programme.

- Touch the cooking stage you want to change or "Add cooking stage".
- Change the programme as you wish (see "To create a User programme").
- Check the settings and then confirm them with "OK".
- Select "Save".
- Change the name if necessary (see "To create a User programme") and touch "Save".

Save the changes to your programme.

Change name

- Touch User programmes .

The programme names will appear in the display.

- Select "Process".
- Select "Change programme".
- Touch the programme you want.
- Touch "Change name".
- Enter a new name (see "To create a User programme").
- Select "Save".

A message will appear in the display confirming that the name has been saved.

- Touch "OK".

The new name for your programme has been saved.

To delete User programmes

- Touch User programmes .

The programme names will appear in the display.

- Select "Process".
- Select "Delete programme".
- Touch the programme you want.
- Touch Yes.

The programme has been deleted.

You can delete all User programmes at once (see "Settings - Factory default - User programmes").

Quick-MW

If you touch the Quick-MW sensor , the oven will start with a set power level and duration, e. g. to reheat a drink.

The maximum pre-set power level is 1000 W and the maximum duration is 1 minute.

You can alter the power level and the duration. The maximum adjustable duration will depend on the power level selected (see "Settings – Quick MW").

This function can only be used when no other cooking programmes are in use.

- Touch  until the cooking process begins.
Touching it repeatedly increases the duration in set stages.

The time remaining will appear in the display.

You can interrupt the programme at any time by touching "Stop" and then the  sensor.

At the end of the programme

- "Process finished" will appear in the display,
- a buzzer will sound if the buzzer is switched on (see "Settings - Volume - Buzzer tones").

If you touch the Popcorn sensor  the microwave oven will start with a set power level and duration.

The power level is pre-set at 850 W and the duration at 3 minutes. This is suitable for most brands of microwave popcorn.

The duration can be changed up to a maximum of 4 minutes. The power level cannot be changed (see "Settings – Popcorn").

This function can only be used when no other cooking programmes are in use.

■ Touch  until the programme starts.

The time remaining will appear in the display.

You can interrupt the programme at any time by touching "Stop" and then the  sensor.

Do not leave the oven unattended during this programme and make sure you follow the instructions on the packaging.

At the end of the programme

- "Process finished" will appear in the display,
- a buzzer will sound if the buzzer is switched on (see "Settings - Volume - Buzzer tones").

Baking

Eating food which has been cooked correctly is important for good health.
Only bake cakes, pizza, chips etc. until they are golden. Do not overcook them.

Functions

Fan plus

Ideal for baking biscuits, sponges, choux pastry, puff pastry and filo pastry.

Microwave + Fan plus

Suitable for dough which requires longer baking, such as rubbed in, beaten mixtures and yeast recipes.

The baking duration is shorter.

During baking the microwave power level must not exceed 150 W.

Bakeware

The choice of bakeware depends on the oven function.

– Fan plus

Bakeware made of any ovenproof material is suitable. Light-coloured, thin-walled, non-reflective metal tins can be used, but results may not be as good as with dark non-reflective tins.

- **Microwave + Fan plus** :
Only use ovenproof dishes suitable for microwave use (see "Suitable containers for microwave use"), such as ovenproof glass or ceramic dishes as these allow microwaves through them.
Metal containers reflect microwaves so food will only cook from above. Cooking durations would therefore be longer and metal tins could also cause sparking. Place the dish on the glass tray such that it cannot touch the oven walls. If the dish being used causes sparking do not use it for combination cooking again.

Baking parchment

Place chips, croquette potatoes and similar types of food on baking parchment.

Notes on the baking chart

Temperature

As a general rule, select the lower temperature given in the chart.

Baking at temperatures higher than those recommended may reduce the cooking time, but will lead to uneven browning, and unsatisfactory cooking results.

Baking duration

Check if the food is cooked at the end of the shortest time quoted.

To check if a cake is ready, insert a wooden skewer into the centre. It is ready if the skewer comes out clean, without dough or crumbs sticking to it.

Shelf level ³

● Fan plus

- Cakes in baking tins: Shelf level 1
- Flat items (e. g. biscuits, tray bakes): Shelf level 2
- Baking on two levels at once (depending on the depth of the items to be baked):
Shelf levels 1+3 or
Shelf levels 2+3

● Microwave + Fan plus

Insert the glass tray on shelf level 1 and place the baking container on it.

Tips

- Set the cooking duration. When baking, the oven should not be set to start a long time off. Otherwise the cake mixture or dough will dry out, and the raising agents will lose their effectiveness.
- Position rectangular tins with the longer side across the width of the oven for optimum heat distribution and even baking results.

Baking

Baking chart

Cakes / biscuits						
	 [°C]	 [min]	 [W]	 [°C]	 [min]	
Creamed mixture						
Sponge cake	140–160	60–80	–	–	–	–
Ring cake	150–170	65–80	80	160	60–70	–
Muffins ^{1) 2)}	150–170	25–40	–	–	–	–
Marble cake (tin)	150–170	60–70	–	–	–	–
Fresh fruit cake, with meringue topping (glass tray) ¹⁾	150–170	35–45	–	–	–	–
Fresh fruit cake (glass tray) ¹⁾	150–170	35–45	–	–	–	–
Fresh fruit cake (tin)	150–170	55–65	80	160	45–60	–
Flan base ²⁾	150–170	30–35	–	–	–	–
Biscuits ²⁾	150–170	15–30	–	–	–	–
Sponge mix						
Sponge cake ²⁾	150–170	30–35	–	–	–	–
Tart / flan base (2 eggs) ²⁾	150–170	25–30	–	–	–	–
Swiss roll ^{1) 2)}	150–170	20–25	–	–	–	–
Rubbed in mixture						
Flan base ²⁾	150–170	30–38	–	–	–	–
Streusel cake (glass tray) ^{1) 3)}	150–170	40–50	–	–	–	–
Biscuits ^{1) 2)}	150–170	20–30	–	–	–	–
Cheese cake	150–170	75–85	–	–	–	–
Apple pie	150–170	65–75	–	–	–	–
Apricot tart with topping (tin)	150–170	60–70	–	–	–	–

The data for the recommended function is printed in bold.

Unless otherwise stated, the durations given are for an oven which has not been pre-heated. With a pre-heated oven, shorten durations by up to 10 minutes. Please observe specified temperature ranges, microwave power levels, shelf levels and durations. They take into account the different types of baking tins, amount of cake mixture and baking practices.

In general, if a range of temperatures is given, it is best to select the lower temperature and to check the food after the shortest duration.

			
 [°C]	 [min]	 [°C]	 [min]
150–170	60–80	–	–
160–180	55–70	–	–
160–180	25–40	–	–
160–180	60–70	–	–
160–180	35–45	–	–
170–190	30–40	–	–
160–180	50–60	–	–
170–190	15–20	–	–
160–180	12–20	–	–
160–180		22–30	–
160–180		15–20	–
160–180		15–20	–
170–190	20–25	–	–
160–180	35–45	–	–
160–180	12–20	–	–
160–180	55–65	150–170	65–75
160–180	55–65	150–170	60–70
160–180	55–65	150–170	60–70

 Fan plus /  MW + Fan plus /  Conventional heat /  Intensive bake

 Temperature /  Duration /  Microwave power level in Combination programmes

1) Use shelf level 2.

2) Pre-heat the oven using Conventional heat 

3) With Conventional heat  use shelf level 1.

Baking

Cakes / biscuits					
	 [°C]	 [min]	 [W]	 [°C]	 [min]
Yeast mixtures and quark dough					
Streusel cake (glass tray) ¹⁾	150–170	35–45	–	–	–
Fresh fruit cake (glass tray) ¹⁾	150–170	40–50	150	170	35–45
Gugelhupf	140–160	55–65	–	–	–
Stollen	150–170	55–75	–	–	–
White bread	160–180	40–50	–	–	–
Dark rye bread	150–170	110–130	–	–	–
Pizza (glass tray) ^{1) 2)}	170–190	40–50	80	180	30–40
Onion cake (glass tray) ^{1) 2)}	150–170	35–40	–	–	–
Apple turnovers ^{1) 2)}	150–170	25–35	–	–	–
Choux pastry, Eclairs ¹⁾	160–180	30–40	–	–	–
Puff pastry ^{1) 2)}	170–190	25–35	–	–	–
Meringues, macaroons ^{1) 2)}	120–140	35–45	–	–	–
Frozen pizza (rack) ^{1) 2) 3)}	200	12–16	–	–	–

The data for the recommended function is printed in bold.

Unless otherwise stated, the durations given are for an oven which has not been pre-heated. With a pre-heated oven, shorten durations by up to 10 minutes. Please observe specified temperature ranges, microwave power levels, shelf levels and durations. They take into account the different types of baking tins, amount of cake mixture and baking practices.

In general, if a range of temperatures is given, it is best to select the lower temperature and to check the food after the shortest duration.

 [°C]	 [min]	 [°C]	 [min]
160–180	30–40	–	–
170–190	40–50	–	–
150–170	45–70	–	–
160–180	55–65	–	–
160–180	35–45	–	–
150–170	110–130	–	–
170–190	30–40	170–190	30–40
170–190	30–40	150–170	30–40
160–180	20–25	–	–
–	–	–	–
170–190	15–25	–	–
120–140	28–38	–	–
220	12–16	–	–

 Fan plus /  MW + Fan plus /  Conventional heat /  Intensive bake

 Temperature /  Duration /  Microwave power level in Combination programmes

1) Use shelf level 2.

2) Pre-heat the oven using Conventional heat 

3) On Conventional heat  use shelf level 1.

Roasting

Functions

Fan plus / **Auto roast**

Use this programme for roasting meat, fish and poultry that needs to be well browned.

Microwave + Fan plus /

Microwave + Auto roast

The programme duration is shorter with these functions.

The following microwave power levels should be used throughout roasting:

- For meat and fish: max. 300 W,
- For poultry: 150 W.

These combination programmes are **not** suitable for roasting sirloin joints or fillet. The centre would be too well cooked before the exterior is browned.

Roasting dishes

Please take into account the material of your bakeware in your choice of oven function:

- Fan plus  / Auto roast 
Gourmet oven dishes, oven proof ceramic dishes and glass dishes.

Make sure that the pot and lid have heat-resistant handles.

- Microwave + Fan plus  /
Microwave + Auto roast 
Dishes must be suitable for use in a microwave oven and must not have metal lids (see "Suitable containers for microwave use").

Pot roasting

We recommend roasting in covered oven dishes. Meat will be tender and there will be sufficient stock for making gravy. The oven also stays cleaner than when roasting on the rack.

- Season the meat and place it in the roasting dish. Dot with butter or margarine or brush with oil if necessary.
For large lean cuts of meat (2-3 kg) and fatty poultry add about 1/8 litre of water to the dish.
- When using a roasting bag, follow the manufacturer's instructions.

Roasting on the rack

Add a little fat or oil to very lean meat or place a few strips of streaky bacon on the top.

Do not add too much liquid during cooking as this will hinder the browning process.

Notes on the roasting chart

Temperature

As a general rule, select the lower temperature given in the chart. If higher temperatures are used, the meat will brown on the outside, but will not be properly cooked through.

For cuts which weigh more than 3 kg, select a temperature approx. 10 °C lower than that given in the roasting chart. Roasting will take longer at the lower temperature, but will be more even.

When roasting on the rack, set a temperature approx. 20 °C lower than for roasting in an oven dish.

Pre-heating

Pre-heating is required when roasting beef sirloin joints and fillet.

Roasting duration

The traditional British method for calculating the roasting time is to allow 15 to 20 minutes per lb/450 grammes, according to type of meat, plus approx. 20 minutes, adjusting the length of time as roasting proceeds to obtain the required result. The roasting time can also be determined by multiplying the thickness of the roast [cm] with the time per cm [min/cm], depending on the type of meat:

Beef/venison: 15–18 min/cm

Veal/lamb: 12–15 min/cm

Sirloin/fillet: 12–15 min/cm

Check if the meat is cooked after the shortest duration quoted.

Shelf level ³

- Fan plus  / Auto roast : Rack with meat on it on shelf level 1
- Microwave + Fan plus  / Microwave + Auto roast : Rack or glass tray with meat on it on shelf level 1

Tips

Browning

Browning only occurs towards the end of the roasting time. Remove the lid about halfway through the roasting time if a more intensive browning result is desired.

Standing time


At the end of the programme, take the roast out of the oven, wrap in aluminium foil and leave to stand for about 10 minutes. This helps retain juices when the meat is carved.

Roasting poultry

For a crisp finish, baste the poultry 10 minutes before the end of the cooking time with slightly salted water.

Roasting

Food probe

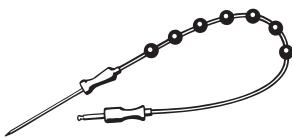

The food probe enables the roasting process to be monitored simply and reliably.

How the food probe works

The metal tip of the food probe is inserted into the food. There is a temperature sensor in the metal tip which measures the core temperature of the food during cooking. The rise in the core temperature reflects the extent to which the food is cooked. You can programme the core temperature to be lower or higher, depending on whether you want your meat to be rare, medium or well done.

The core temperature of up to 99 °C can be set. Please refer to the Roasting chart and "Low temperature cooking" for the core temperatures applicable for different types of meat.

The duration for roasting meat by temperature using the probe is similar to the duration when cooking by time.

When to use it

Some Automatic programmes and Special applications will prompt you to use the food probe.

You can also use it with your own User programmes and with the following functions:

- Auto roast 
- Fan plus 
- Conventional heat 
- Fan grill 
- Microwave solo 
- MW + Auto roast 
- MW + Fan plus 
- MW + Fan grill 

Important notes about using the food probe


Please note:

- You can place the meat in a pot, on the rack or in the glass dish, depending on the function selected.
- The metal tip of the food probe must be fully inserted into the centre of the food.
- When cooking poultry, insert the metal tip into the thickest part of the breast. You can find the thickest part of the breast by pressing the area with your thumb and index finger.
- Do not let the metal tip touch any bones or insert it into a particularly fatty area of the meat. If fat or bone come into contact with the probe, this can lead to the oven being switched off too early.
- If the meat is very heavily marbled with fat, select the highest core temperature given in the Roasting chart.
- When using roasting bags or aluminium foil, insert the probe through the bag or foil into the centre of the meat. You can also place the meat, with the food probe inserted, inside the foil. Follow the roasting bag / aluminium foil manufacturer's instructions.

Roasting

Using the food probe

- Insert the metal tip of the food probe fully into the food.
- Place the food in the oven.

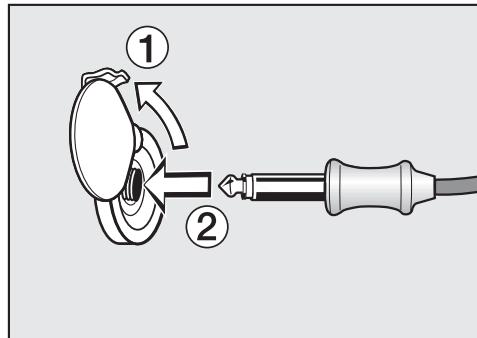

- Insert the plug of the food probe into the socket until you feel it engage.
- Close the door.
- Select the oven function or Automatic programme.

- Set the temperature or power level if necessary.
- Set the core temperature if necessary.

The core temperatures cannot be changed for the Automatic programmes.

You can also delay the start of the cooking programme to a later time. Select the "Start at" option. In Automatic programmes select "Start later".

You can estimate approximately when the food will be ready as the duration of the cooking programme is about the same as if you were cooking food without using the food probe.

You cannot enter a "Duration" or "Ready at" time, as the total cooking duration is determined by how long it takes for the core temperature to be reached.

Time left display

If the temperature set for a cooking process is above 140 °C, the estimated time left for the cooking process will appear in the display after a short while.

The time remaining is calculated from the cooking temperature selected, the required core temperature and the pattern of the increasing core temperature.

The time remaining first shown is an estimate. As the cooking process continues the time remaining is revised continuously, and a more accurate revised figure shown.

Altering the cooking or core temperature or selecting a different function will delete the time left information.

The time remaining will be recalculated if the door is kept open for a long period of time.

To display the core temperature

As soon as the time remaining appears, you can also display the actual core temperature.

- Select "Change".
- Touch "Display core temperature"
- Touch On.
- Touch "OK".

The actual core temperature will also appear in the display.

Residual heat use

The heating in the oven switches off shortly before the end of the cooking programme. The residual heat in the oven is sufficient to complete the cooking process.

Using the residual heat in the oven saves energy.

"Energy save phase" will appear in the display to show that the oven is in energy save mode. The measured core temperature is no longer visible.

The cooling fan continues to run, as does the hot air fan if a "fan" setting has been chosen.

When the core temperature selected has been reached,

- "Process finished" will appear in the display,
- a buzzer will sound if the buzzer is switched on (see "Settings - Volume - Buzzer tones"),

If the food is not yet cooked sufficiently, insert the food probe into another place and repeat the programme.

Roasting

Roasting chart

Meat/Fish		
	 [°C] 1) 2)	 [min]
Topside of beef, approx. 1 kg	170–190	100–120
Sirloin/fillet 4) 5), approx. 1 kg	190–210	30–50
Haunch of venison (approx. 1 kg)	180–200	100–120
Saddle of venison (approx. 1 kg)	180–200	50–80
Gammon joint, approx. 1 kg	170–190	60–70
Meat loaf 5), approx. 1 kg	160–180	60–70
Veal, approx. 1 kg	160–180	100–120
Leg of lamb, approx. 2 kg	170–190	100–120
Saddle of lamb 4), approx. 2 kg	–	–
Poultry, approx. 1 kg	170–190	50–60
Poultry, approx. 4 kg	160–180	180–210
Fish, whole, approx. 1.5 kg	160–180	40–50

Unless otherwise stated, the durations given are for an oven which has not been pre-heated.

In general, if a range of temperatures is given, it is best to select the lower temperature and to check the food after the shortest time.

Please observe the temperature range, the microwave power level, the shelf levels and the durations. These also take the type of cooking container, the size of the meat and cooking practices into account.

 [W]			 [°C]			 3) 6) [°C]
 [W]	 [°C]	 [min]	 [°C]	 [min]		
–	–	–	180–200	100–120	85–90	
–	–	–	200–220	35–60	40–65	
–	–	–	190–210	100–120	70–85	
–	–	–	190–210	60–90	70–85	
150	180	50–60	180–200	60–70	70–80	
300	180	35–45	180–200	60–70	75–85	
150	180	70–80	160–180	100–120	75–80	
150	180	80–100	180–200	100–120	75–85	
–	–	–	180–200	60–80	70–80	
300	180	35–45	180–200	50–60	85	
150	160	100–130	180–210	190–210	85	
150	170	30–40	180–200	40–50	70–80	

 Auto roast /  MW + Fan plus /  Conventional heat

 Microwave power level in combination programmes /  Temperature /  Duration/

 Core temperature for the food probe

- 1) Roast in a covered dish.
When roasting on the rack, set the temperature approx. 20 °C lower than for roasting in a covered oven dish.
- 2) Do not select a higher temperature than that advised. The meat will become brown, but will not be cooked properly.
- 3) If the meat is very heavily marbled with fat, select the highest core temperature given in the chart.
- 4) Do not cover the food.
- 5) Pre-heat the oven.
- 6) When using the food probe, enter an appropriate core temperature for the food being cooked.

Low temperature cooking

This method is ideal for cooking beef, veal or lamb when a tender result is required.

First sear the meat all over at a high temperature on the hob in order to seal it.

Then place the meat in the pre-heated oven where the low temperature and long cooking duration will cook it to perfection and ensure it is very tender.

The meat will relax and the juices inside will start to circulate evenly throughout the meat to reach the outer layers. This will give very tender and succulent results.

Tips

- Use lean meat which has been correctly hung and trimmed. Bones should be removed before cooking.
- For searing, use a suitable cooking oil or fat that can withstand high temperatures (e.g. clarified butter, vegetable oil).
- Do not cover meat during cooking.

Cooking takes between 2-4 hours depending on the size and weight of the meat and on how well cooked you want it as well as the level of browning required.

Cooking duration / Core temperatures

Meat	Duration [min]	Core temperature [°C]
Sirloin joint		
– Rare	60–90	48
– Medium	120–150	57
– Well-done	180–240	69
Gammon*	150–210	68
Saddle of veal*	180–210	63
Saddle of lamb*	90–120	60

* Boned

After cooking

Because the cooking and core temperatures are very low:

- Meat can be carved straight from the oven. It does not need to rest.
- The cooking result will not be affected if the meat is left in the oven after the programme has finished. It can be kept warm until you serve it.
- The meat is an ideal temperature to eat straight away. Serve on pre-heated plates with very hot sauce or gravy to prevent it cooling down too quickly.

Using the "Low temperature cooking" special application

Use the glass tray with the rack placed on top of it.

- Touch Special applications .
- Touch "Low temperature cooking".
- Set the temperature.
- Set the core temperature.
- Follow the instructions in the display.
Place the glass tray and rack in the oven for the pre-heating phase.
- Whilst the oven is pre-heating, sear the meat thoroughly on the hob.

Danger of burning!

Use oven gloves when placing food in the oven, turning or removing it and when adjusting oven shelves etc. in a hot oven.

- As soon as "Use the food probe" appears in the display, place the seared meat on the rack and insert the metal tip of the food probe fully into the centre of the meat.

Please also refer to the information in "Roasting - Food probe".

- Place the glass tray with the rack on top into the oven on the shelf level quoted.

 Take care: the top heating element / grill element in the oven will be hot. Danger of burning.

- Insert the plug of the food probe into the socket until you feel it engage.
- Close the door.

At the end of the programme, "Process finished" will appear in the display and a buzzer will sound if the buzzer is switched on (see "Settings – Volume – Buzzer tones").

If the meat is not cooked to your satisfaction you can cook it for longer.

Low temperature cooking

Low temperature cooking - setting the temperature manually

Use the glass tray with the rack placed on top of it.

Do not use the Rapid heat-up function to pre-heat the oven.

- Place the glass tray with rack on top into the oven on shelf level 1.
- Select Conventional heat  and a temperature of 130 °C.
- Switch off Rapid heat-up by touching "Change – Open further settings – Rapid heat-up – Off".
- Pre-heat the oven together with the glass tray and the rack for approx. 15 minutes.
- Whilst the oven is pre-heating, sear the meat thoroughly on the hob.

- Place the seared meat on the rack.
- Select "Change".
- Reduce the temperature to 100 °C.
- Continue cooking until the end of the cooking duration.

You can set this procedure to finish automatically (see "Functions without microwave power - Setting the duration").



Danger of burning!

Use oven gloves when placing food in the oven, turning or removing it and when adjusting oven shelves etc. in a hot oven.

 Danger of burning.
Grill with the oven door closed. If you grill with the door open, hot air will escape from the oven instead of being cooled by the cooling fan. The controls will get hot.

Functions

Grill

For grilling thin cuts e.g. steak, burgers or toast.

Fan grill

For grilling thicker items, e.g. rolled meat, poultry pieces.

The top heating / grill element and the fan switch on and off alternately.

MW + Grill

MW + Fan grill

The grilling time is shorter.

During grilling the microwave power level must not exceed 300 W.

Trays and racks

- Grill on the rack.
- Brush the rack with oil and then place the food on the rack.

Notes on the grilling chart

Grill level

- Grill , MW + Grill 

Level	Use
3	Thin cuts are cooked quickly when placed close to the grill element.
2	For a lighter, golden finish, e.g. on gratins and bakes.
1	Thicker cuts should be grilled further from the grill.

Temperature

- Fan grill , MW + Fan grill 

As a general rule, select the lower temperature given in the chart. If higher temperatures are used, the meat will brown on the outside, but will not be properly cooked through.

Thin cuts can generally be grilled at 220 °C, thicker cuts at 180–200 °C.

Grilling

Pre-heating

Always pre-heat the grill for approx. 5 minutes with the door closed.

Do not set a microwave power level during pre-heating.

Shelf level ³

- Grill , MW + Grill :
Use shelf level 2 or 3 depending on the height of the food.
- Fan grill , MW + Fan grill :
Use shelf level 1 or 2 depending on the height of the food.

Grilling duration

- Flat pieces of fish and meat usually take 6–8 minutes per side.
It is best to grill food of a similar thickness at the same time so that the grilling duration for each item does not vary too greatly.
- Thicker pieces need about 7–9 minutes per side.
- With rolled meat, allow approx. 10 minutes per cm diameter.

Testing to see if cooked

One way of finding out how well a piece of meat has been cooked is to press down on it with a spoon:

Rare: If the meat gives easily to the pressure of the spoon, it will still be red on the inside.

Medium: If there is some resistance, the inside will be pink.

Well-done: If there is very little resistance, it is cooked through.

Check if the meat is cooked after the shortest time quoted.

Tip

If the surface of thicker cuts of meat is cooked but the centre is still raw, continue grilling at a lower temperature setting or use a lower shelf level to allow the food to cook through to the centre.

Preparing food for grilling

Trim the meat. Do not season meat with salt before grilling as this draws the juices out.

Add a little oil to lean meat if necessary. Do not use other types of fat as they can burn and cause smoke.

Clean fish in the normal way. To enhance the flavour, add a little salt or squeeze a little lemon juice over the fish.

Grilling

- Pre-heat the grill for approx. 5 minutes with the door closed.

Do not set a microwave power level during pre-heating.

- Place the food on the rack.
- Select a function, microwave power level and a grill setting for the Grill  and MW + Grill  functions.
- Select a function, microwave power level and a temperature for the Fan grill  and MW + Fan grill  functions.

 Danger of burning.
Use oven gloves when placing food in the oven, turning or removing it and when adjusting oven shelves etc. in a hot oven.

- Place the food on the appropriate shelf level (see Grilling chart).
- Close the door.
- Turn the food halfway through cooking.

Grilling

Grilling chart

Pre-heat the grill for approx. 5 minutes with the door closed. Do not use microwave power whilst pre-heating the oven.

The data for the recommended function is printed in bold.

Check the food after the shortest duration quoted.

Take note of the temperature range, the microwave power level, the shelf levels and the durations. These take the size of the meat and cooking practices into account.

Food to be grilled	□ ³ ₁	■		■	
		Level	⌚ [min] ¹⁾	🌡 [°C]	⌚ [min] ¹⁾
Thin cuts					
Steak	2/3 ²⁾	3	18–22	220	10–16
Kebabs	2	–	–	220	15–20
Chicken kebabs	2	–	–	220	15–20
Escalopes	2/3 ²⁾	–	–	220	14–18
Burgers	2/3 ²⁾	3	20–25	220	20–25
Sausages	2/3 ²⁾	3	15–20	–	–
Fish fillet	2/3 ²⁾	3	15–20	–	–
Trout	2/3 ²⁾	–	–	220	20–25
Toast	2/3 ²⁾	3	2–4	–	–
Cheese toast	2	3	5–9	–	–
Tomatoes	2/3 ²⁾	3	10–12	220	6–8
Peaches	2	3	4–8	220	7–10
Thicker cuts					
Chicken, approx. 1 kg	1/2 ³⁾	1/2	50–60	180–200 150 W + 200⁴⁾	45–55 35–45
Rolled meat, Ø 10 cm, approx. 1.5 kg	1	1/2	80–100	180–200	80–100

□³₁ Shelf level / ■ Grill / ■ Fan grill / □ Temperature / ⌚ Duration

- 1) Turn the food halfway through grilling.
- 2) Select the shelf level according to the thickness of the food.
- 3) With Fan grill ■ use shelf level .
- 4) Select MW + Fan grill □■.

Microwave defrosting, reheating and cooking

	Function	⠼ / ⚛	Suitable for:
Defrosting		80 W	Very delicate foods such as cream, butter, cream and butter cream gateaux, cheese
		150 W	All other types of food
Reheating		450 W	Baby food
		600 W	All types of food; frozen ready-meals which do not need browning.
		850 W	
		1000 W	Drinks
Cooking		850 W	Casseroles;
		Heating up	porridge and rice pudding; frozen foods which do not need browning.
		450 W	
		Continued cooking	
		150 W	
		Simmering	
		300 W + 160–180 °C	Sear using a high temperature to start with, then continue cooking with a lower temperature.
		300 W + 150–170 °C	Ready-meals which need to be browned, e.g. gratins

 Microwave solo /  MW + Auto roast /  MW + Fan plus

 Temperature

The duration required depends largely on the nature of the food, the amount and its initial temperature. Food that has been refrigerated, for example, takes longer to reheat than food at room temperature.

Please refer to the relevant charts.

Microwave defrosting, reheating and cooking

Before defrosting, reheating and cooking

- Place food (including frozen) in a dish that is suitable for microwave use, and cover it.
- Place the dish in the middle of the glass tray on shelf level 1.

The food probe can be used to monitor the temperature when reheating or cooking (see "Roasting - Food probe" in the operating instructions supplied with the appliance).

With Microwave combination programmes

Only use heat-resistant containers which are microwave safe.

A lid is not usually required. Never use a lid with MW + Auto roast  and MW + Grill  as the food will not brown.

- Place the glass tray on shelf level 2.

Place ready-meals in aluminium foil dishes on the glass tray.

During the defrosting, reheating and cooking process

- Turn or stir the food several times. Stir the food from the outside towards the middle, as food heats more quickly from the outside.

After defrosting, reheating and cooking

Allow the food to stand at room temperature for a few minutes to enable the heat to spread evenly throughout the food.

 After reheating food, especially food for babies and small children, stir the food or shake the container and check that the temperature does not pose any danger. Double check after it has been left to stand. Danger of burning.

 Danger of burning. Be careful when removing dishes from the appliance. Although heat is not normally produced in the container itself by the microwaves (apart from stoneware), heat transfer from the food to the container may be considerable, making the container itself hot.

Always ensure that food is sufficiently cooked or reheated.

If in any doubt that a sufficiently high temperature has been reached, continue cooking or reheating for a little longer.

Microwave defrosting, reheating and cooking

Ensure that food, such as meat, poultry and fish, are cooked for an appropriate length of time. The food probe can be used to monitor the temperature when reheating or cooking (see "Roasting - Food probe").

Set a core temperature of at least:
70 °C for fish and,
85 °C for poultry.

Stirring liquid before it heats up can help to prevent it boiling over. After heating it up wait for at least 20 seconds before removing the container from the oven. Placing a suitable glass rod or utensil in the container whilst heating liquid can also help prevent the liquid from boiling over.

Tips on reheating

 We do not recommend heating or reheating food or drinks for babies or young children in the microwave oven. Any decision to do this is the responsibility of the user, and should only be done with the utmost care. Pasteurised or sterilised cooked food should be gently heated for 1/2 to 1 minute at 450 W, and tasted to make sure it is not too hot for a baby's palate before serving. When reheating other food or drink, heat to a high temperature and allow to cool to a suitable heat for eating. For formula milk follow the manufacturer's instructions.

Never reheat hard boiled eggs using Microwave solo  even without the shell. The eggs can explode.

Tips on cooking

Food with a thick skin or peel, such as tomatoes, sausages, jacket potatoes and aubergines, should be pierced or cut in several places to allow steam to escape and prevent the food from bursting.

Do not cook or reheat food or liquids in sealed containers, jars or bottles. With baby bottles, the screw top and teat must be removed.

Otherwise pressure will build up which can cause the bottle or container to explode, posing a severe risk of injury.

Eggs can only be cooked in their shells using Microwave solo  in a specially designed egg-boiling device available from specialist shops. Eggs can burst, even after they have been taken out of the oven.

Eggs can be cooked without their shells using microwave power only if the yolk membrane has been punctured several times first. The pressure could otherwise cause the egg yolk to explode.

Microwave defrosting, reheating and cooking

Use	Notes
Defrosting large quantities of food at once, e.g. 2 kg fish	The glass tray can be used on shelf level 1 for defrosting food.
Reheating food	Always cover food when reheating it, except when reheating meat/fish coated in breadcrumbs.
Cooking vegetables	Add a little water to vegetables which have been kept stored. Vegetable cooking times depend on the texture of the vegetable. Fresh vegetables contain more water than vegetables which have been stored and usually cook more quickly.
Cooking frozen ready-meals	Deep-frozen, ready-made meals can be defrosted and then reheated or cooked in one process. Follow the instructions on the packet.

Charts for defrosting, reheating and cooking food

The following notes apply to all charts:

- Take note of the recommended microwave power levels, durations and standing times. These take the consistency, the quantity and the initial temperature of the food into account.
- You are generally advised to select the middle duration.
- Place the food on the glass tray and place the glass tray on shelf level 1.

Microwave defrosting, reheating and cooking

Chart for defrosting food

	Quantity	150 W ⌚ [min]	80 W ⌚ [min]	Standing time [min] ¹⁾
Dairy products				
Cream	250 ml	–	13–17	10–15
Butter	250 g	–	8–10	5–10
Cheese slices	250 g	–	6–8	10–15
Milk	500 ml	14–16	–	10–15
Quark	250 g	10–12	–	10–15
Cakes / Pastry / Bread				
Sponge cake	Qty 1, approx. 100 g	1–2	–	5–10
Sponge cake	300 g	4–6	–	5–10
Fresh fruit cake	Qty 3, approx. 300 g	6–8	–	10–15
Butter cake	Qty 3, approx. 300 g	5–7	–	5–10
Cream cake	Qty 1, approx. 100 g	–	1.5	5–10
	Qty 3, approx. 300 g	–	4–4.5	5–10
Yeast buns, puff pastries	Qty 4	6–8	–	5–10
Fruit				
Strawberries, raspberries	250 g	7–8	–	5–10
Red / blackcurrants	250 g	8–9	–	5–10
Plums	500 g	12–16	–	5–10
Meat				
Minced beef	500 g	16–18	–	5–10
Chicken	1000 g	34–36	–	10–15
Vegetables				
Peas	250 g	8–12	–	5–10
Asparagus	250 g	8–12	–	10–15
Beans	500 g	13–18	–	10–15
Red cabbage	500 g	15–20	–	10–15
Spinach	300 g	12–14	–	10–15

 Microwave power /  Defrosting duration

- 1) Allow the food to stand at room temperature for a few minutes to enable the heat to spread evenly throughout the food.

Microwave defrosting, reheating and cooking

Chart for reheating food

Drinks ²⁾	Quantity	[]		Standing time [min] ¹⁾
		1000 W ⊕ [min]	450 W ⊕ [min]	
Coffee, drinking temperature 60–65 °C	1 cup (200 ml)	00:50–1:10	–	–
Milk, drinking temperature 60–65 °C	1 cup (200 ml)	1–1:50 ³⁾	–	–
Water, bringing to the boil	1 cup (125 ml)	1–1:50	–	–
Baby bottle (milk)	approx. 200 ml	–	00:50–1 ³⁾	1

Food ³⁾	Quantity	[]		Standing time [min] ¹⁾
		600 W ⊕ [min]	450 W ⊕ [min]	
Baby food (room temperature)	1 jar (200 g)	–	00:30–1	1
Cutlets, roasted	200 g	3–5	–	2
Fish fillet, roasted	200 g	3–4	–	2
Roast meat in gravy	200 g	3–5	–	1
Side dishes	250 g	3–5	–	1
Vegetables	250 g	4–5	–	1
Gravy	250 ml	4–5	–	1
Soup / casserole	250 ml	4–5	–	1
Soup / casserole	500 ml	7–8	–	1

[] Microwave power / ⊕ Reheating duration

- 1) Allow the food to stand at room temperature for a few minutes to enable the heat to spread evenly throughout the food.
- 2) Stirring liquid before it heats up can help to prevent it boiling over. After heating it up wait for at least 20 seconds before removing the container from the oven. Placing a suitable glass rod or utensil in the container whilst heating liquid can also help prevent the liquid from boiling over.
- 3) Durations assume food is approx. 5 °C to start with.

For food not normally refrigerated, durations assume food is at room temperature or approx. 20 °C.

With the exception of baby food and delicate whisked sauces food should be reheated to a temperature of 70–75 °C.

Microwave defrosting, reheating and cooking

Chart for cooking food

	Quantity	850 W ⊕ [min]	+	450 W ⊕ [min]	Standing time ¹⁾ [min]
Meat					
Meatballs in gravy (400 g meat)		10–12			2–3
Stew (750 g meat)		16	+	15	2–3
Poultry					
Chicken in mustard sauce	Approx. 800 g	4	+	12	2–3
Chicken curry	Approx. 900 g	5	+	12	2–3
Chicken risotto	Approx. 1.6 kg	10	+	15	3–5
Fish					
Fillet in sauce	Approx. 900 g	8–10			2–3
Fish curry	Approx. 1.5 kg	5	+	12	3–5
Fresh vegetables					
Carrots	300 g	2	+	6	2
Cauliflower florets	500 g	6	+	10	2
Peas	450 g	5	+	10	2
Peppers, cut into strips	500 g	5	+	10	2
Kohlrabi batons	500 g	3	+	8	2
Brussels sprouts	300 g	3	+	9	2
Asparagus	500 g	5	+	8	2
Broccoli florets	300 g	4	+	4	2
Leeks	500 g	5	+	8	2
Green beans	500 g	4	+	12	2
Frozen vegetables					
Peas, mixed veg.	450 g	5	+	11	2
Spinach	450 g	5	+	7	2
Brussels sprouts	300 g	4	+	6	2
Broccoli	300 g	3	+	6	2
Leeks	450 g	4	+	8	2
Desserts					
Quark souffle (500 g quark)		10–12		–	–
Fruit compote (500 ml fruit juice or 500 g fruit)		6–8		–	–

 Microwave power /  Duration

1) Allow the food to stand at room temperature for a few minutes to enable the heat to spread evenly throughout the food.

Special applications

Your oven has the following Special applications in addition to the Automatic programmes:

- Defrosting
- Drying food
- Reheat (Reheating plated meals)
- Heat crockery
- Prove dough
- Low temperature cooking

This Special application is described in "Low temperature cooking".

- Pizza

This section also gives information on the following applications:

- Gentle bake
- Bottling
- Frozen food/Ready meals

Defrosting

Use the Defrost function to gently defrost frozen food.

Only use heat-resistant containers which are microwave safe.

- Touch Special applications .
- Touch "Defrost".
- Select the food category.
- Enter the weight of the food.
- Follow the instructions in the display.

Air is circulated throughout the cabinet to gently defrost the food.

 Danger of salmonella poisoning. It is particularly important to observe food hygiene rules when defrosting poultry. Do not use the liquid from the defrosted poultry. Pour it away, and wash the tray, the sink and your hands.

Tips

- Place the food to be defrosted on the glass tray without its packaging.
- When defrosting poultry, put it on the rack over the glass tray to catch the defrosted liquid so that the meat is not lying in this liquid.
- Meat, poultry and fish do not need to be fully defrosted before cooking. Defrost so that the surface is sufficiently soft to take herbs and seasoning.

Drying food

This programme is designed for traditional style drying of food to preserve it.

The temperature can be set between 80 and 100 °C.

It is important that fruit and vegetables are ripe and not bruised before they are dried.

■ Prepare the food for drying

- Peel and core apples, and cut into slices 0.5 cm thick.
- Stone plums, if necessary.
- Peel, core and cut pears into thick wedges.
- Peel and slice bananas.
- Clean mushrooms and cut them in half or slice them.
- Remove parsley and dill from the stem.

■ Distribute the food to be dried evenly over the glass tray or the rack.

- Touch Special applications .
- Touch "Drying".
- Alter the recommended temperature if necessary and then set the duration.
- Follow the instructions in the display.

Food	Drying time
Fruit	2–8 hours
Vegetables	3–8 hours
Herbs*	50–60 minutes

* Because this programme uses the fan you should use Conventional heat  with a temperature of 80–100 °C for drying herbs.

■ Reduce the temperature if condensation begins to form in the oven.



Danger of burning. Wear oven gloves when removing the dried food from the oven.

■ Allow the dried fruit or vegetables to cool down after drying.

Dried fruit must be completely dry, but also soft and elastic.

■ Store in sealed glass jars or tins.

Special applications

Reheat

This programme is designed to reheat cooked food.

Only use heat-resistant containers which are microwave safe.

- Place the food to be reheated in its dish on the rack. Do not cover it.
- Touch Special applications .
- Touch "Reheat".
- Select the food category.
- Enter the weight of the food.
- Follow the instructions in the display.



Danger of burning.
Wear oven gloves when removing the dishes from the oven.
Droplets of water may have accumulated underneath the dish.

Prove dough

This programme is designed specifically for proving yeast dough.

The temperature can be set between 30 and 50 °C.

- Touch Special applications .
- Touch "Prove dough".
- Alter the recommended temperature if necessary and then set the duration.
- Follow the instructions in the display.

Pizza

This programme is designed specifically for baking pizza.

The temperature can be set between 160 and 250 °C.

- Touch Special applications .
- Touch "Pizza".
- Alter the recommended temperature if necessary and then set the duration.
- Follow the instructions in the display.

Heat crockery

This programme is designed to pre-heat your crockery.

The temperature can be set between 50 and 80 °C.

Use heat-resistant crockery.

- Place the rack on shelf level 1 and place the dish to be pre-heated on it.
- Touch Special applications .
- Touch "Heat crockery"
- Alter the recommended temperature if necessary and then set the duration.
- Follow the instructions in the display.



Danger of burning
Wear oven gloves when removing dishes from the oven.

- Remove the heated crockery from the oven.
- Switch the oven off.

Special applications

Gentle bake

The Gentle bake  function is ideal for bakes and gratins which require a crisp top.

The temperature can be set between 100 and 230 °C.

- Touch Oven functions .
- Touch "Gentle bake".
- Alter the recommended temperature if necessary.
- Follow the instructions in the display.

The table contains just a few examples.

Food	 [°C]	 ³ 1	 [min]
Lasagne	190	2	45–60
Potato gratin	180	2	55–65
Vegetable bake	180	2	55–65
Pasta bake	190	2	40–50

 Temperature / ³ Shelf level /  Duration
For other recipes, use the temperature and time settings given for Fan plus  as a guide.

Frozen food / Ready meals

Tips

Cakes, pizza, baguettes

- Bake on a layer of baking parchment placed on the rack.
- Use the lowest temperature recommended on the manufacturer's packaging.

Oven chips, croquettes or similar items

- Place them on baking paper on the rack.
- Use the lowest temperature recommended on the manufacturer's packaging.

- Turn several times during cooking.

Method

Eating food which has been cooked correctly is important for good health.

Only bake cakes, pizza, chips etc. until they are golden. Do not overcook them.

- Select the function and temperature recommended on the manufacturer's packaging.
- Pre-heat the oven.
- Place the food in the pre-heated oven on the shelf level recommended on the packaging.
- Check the food at the end of the shortest duration recommended on the packaging.

Tip: This oven offers Automatic programmes for some Frozen food/Ready meals (see "Automatic programmes").

Note for test institutes

Test food acc. to EN 60350 (Function: Microwave solo

Test food	 [W]	 [min]	Standing time [min] ¹⁾	Notes
Defrost raspberries, 250 g ²⁾	150	7	3–5	Do not cover
Defrost minced beef, 500 g ²⁾	150	16–18	5–10	Do not cover, turn halfway through defrosting
Cook meat loaf, 900 g ²⁾	600 + 450	7 + 11	5	Container: Pyrex 03.838.80, 28 cm long, do not cover, place the container across the oven
Cook potato gratin, 1105 g ²⁾	300 + 	35–40	5	Container: Pyrex 03.827.80
Bake sponge cake, 475 g ²⁾	450	7:30–8:30	5	Container: Pyrex 03.827.80, do not cover
Grill chicken, 1200 g frozen weight, 2 halves ³⁾	150 + 	38–43	2	Place the breast side face downwards, turn halfway through cooking
Cook custard, 1000 g ²⁾	600 + 450	3 + 20–22	120	Container: Pyrex 07.227.8 (25 x 25 cm)

 Microwave power /  Grill /  Defrost or cooking duration

- 1) Leave the food to stand at room temperature.
This allows the heat to be distributed evenly through the food.
- 2) Place the glass tray on shelf level 1.
- 3) Place the glass tray and rack on shelf level 1.

Test food acc. to EN 60350 (functions without microwave power)

Test food	Tin/ glass tray	Function	🌡 [°C]	🕒 ³ [min]
Drop cookies	1 glass tray		140	1 42–49
	2 glass trays		140	2+3 42–49
	1 glass tray		160	2 22–27 + pre-heating
Sponge cake	Springform, Ø 26 cm, dark		170	32–37
	Springform, Ø 26 cm, dark		180	18–24 + pre-heating
Apple pie	Springform, Ø 20 cm, dark		160	110–120
	Springform, Ø 20 cm, dark		160	110–120
	Springform, Ø 20 cm, dark		170	65–75
Small cakes	1 glass tray		150	2 30–36
	2 glass trays		140	2+3 44–50
	1 glass tray		160	2 28–32 + pre-heating
Toast	Rack		Level 3	3 5–7 + 5 min. pre-heating
Grill beef burgers (12 burgers)	Rack + glass tray		Level 3	2 1st side: 16–18, 2nd side: 12–14 + 5 min. pre-heating

Fan plus / Conventional heat / Intensive bake / Grill

🌡 Temperature / ³ Shelf level / ⏳ Duration

Cleaning and care

 Danger of burning. Make sure the oven heating elements are switched off and that the oven cavity is cool.

 Danger of injury. Do not use a steam cleaning appliance to clean this appliance. The steam could reach electrical components and cause a short circuit.

Clean the oven interior, inside of the door and door seal as soon as the oven has cooled down. Waiting too long can make cleaning unnecessarily difficult and in some cases impossible. In certain circumstances, very heavy soiling can even damage the appliance.

Check the door and door seal for any sign of damage. If any damage is noticed, the oven should not be used again in microwave mode until the fault has been rectified by a service technician.

Unsuitable cleaning agents

To avoid damaging the surfaces, do not use:

- cleaning agents containing soda, ammonia, acids or chlorides,
- cleaning agents containing descaling agents on the oven front,
- abrasive cleaning agents, e.g. powder cleaners and cream cleaners,
- solvent-based cleaning agents,
- stainless steel cleaning agents,
- dishwasher cleaner,
- glass cleaning agents,
- cleaning agents for ceramic hobs,
- hard, abrasive brushes or sponges, e. g. pot scourers, brushes or sponges which have been previously used with abrasive cleaning agents,
- melamine eraser blocks,
- sharp metal scrapers or tools,
- wire wool or metal scourers,
- stainless steel spiral pads,
- spot cleaning,
- oven cleaner*.

* these can, however, be used to remove very heavy soiling from PerfectClean treated surfaces.

Soiling might become impossible to remove if it is not dealt with.

Continued use of the oven without regular cleaning will make it much harder to keep clean.

Soiling is, therefore, best removed after each use of the oven.

Only the glass tray is dishwasher proof.

Tips

- Soiling caused by spilt juices and cake mixtures is best removed whilst the oven is still warm. Exercise caution and make sure the oven is not too hot - danger of burning.
- The top heat/grill element can be lowered to make it easier to clean the oven.
- To neutralise odours in the oven, put a container of water with some lemon juice in the oven and heat for a few minutes.

Normal soiling

Do not use too much water on the cloth or sponge and do not let water or any other liquid find its way into any openings.

- It is best to remove normal soiling immediately using a clean sponge and a solution of hot water and washing-up liquid or with a clean, damp microfibre cloth.
- After cleaning make sure all residual cleaning agent is thoroughly removed with clean water. This is particularly important when cleaning PerfectClean surfaces as cleaning agent residues can impair the non-stick properties.
- After cleaning and rinsing, wipe the surfaces dry using a soft cloth.

Food probe

- Clean the food probe with a damp cloth only.

Do not put the food probe into water or clean it in the dishwasher as this will damage it.

Stubborn soiling

Spilt fruit and roasting juices may cause lasting discolouration or matt patches on enamelled surfaces. This discolouration is permanent but will not affect the efficiency of the finish. Do not try to remove this discolouration! Clean these following the instructions given here.

- Moisten stubborn soiling with a solution of hot water and washing-up liquid and leave for a few minutes to take effect.
- You can then also use the scouring pad on the back of a washing-up sponge to remove the soiling.
- After cleaning, rinse thoroughly with clean water, and dry with a soft cloth.

■ Very stubborn soiling on PerfectClean treated enamel can be cleaned using Miele oven cleaner. It must be applied to surface when cold. Follow instructions on the packaging.

Non-Miele oven spray must only be used in a cold oven and for no longer than a maximum of 10 minutes.


- You can then also use the scouring pad on the back of a washing-up sponge to remove the soiling.
- After cleaning, remove all oven cleaning agent residues thoroughly with clean water, and dry with a soft cloth.

Lowering the top heat/grill element

If the oven interior roof is badly soiled, the top heat/grill element can be lowered to make cleaning easier.




Danger of burning.
Make sure the oven heating elements are switched off and cool.

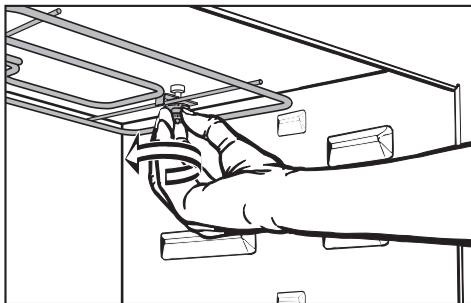

- To lower the top heat/grill element, the nut needs to be unscrewed.

Do not use force to lower it as this can cause it to break.

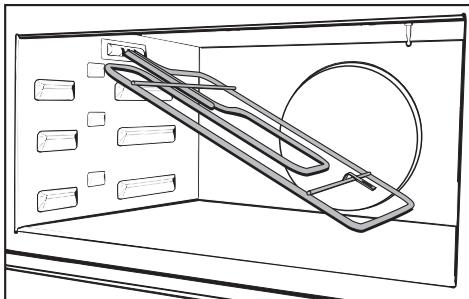

- Carefully lower the top heat/grill element.
- Clean the roof of the oven regularly with a damp cloth or a dishwashing sponge.
- After cleaning, raise the top heat/grill element gently back up again. Refit the nut and tighten to secure the element back in position.

Problem solving guide

With the aid of the following guide, minor problems can be easily corrected without contacting Miele. If having followed the suggestions below, you still cannot resolve the problem, please contact Miele (see end of manual for contact details).

Danger of injury.

Installation, maintenance and repairs may only be carried out by a suitably qualified and competent person. Repairs and other work by unqualified persons could be dangerous.

Miele cannot be held liable for unauthorised work.

Do not attempt to open the casing of the oven yourself.

Problem	Possible cause and remedy
The display is dark.	<p>The time of day is switched off. It will not appear in the display until the oven is switched on.</p> <p>The time can be displayed constantly (see "Settings - Time - Display").</p> <p>There is no power to the oven.</p> <ul style="list-style-type: none">■ Check whether the mains fuse has tripped. If it has, contact a qualified electrician or Miele.
A programme will not start.	<ul style="list-style-type: none">■ If using a programme with microwave power, make sure that you have entered a power level and a duration.■ If using a Microwave combination programme, make sure you have entered a power level and a duration for the microwave function  and a temperature for the conventional oven function.

Problem	Possible cause and remedy
When the oven is switched on "System lock  " appears in the display.	<p>The system lock  is active. It can be released for a programme to be run by touching the  symbol for at least 6 seconds. The system lock can be permanently deactivated (see "Settings – System lock ").</p>
The oven does not heat up.	<ul style="list-style-type: none"> ■ Check whether "On" has been selected for demo mode (see "Settings - Showroom programme"). <p>If demo mode has been switched on the oven can be operated but it will not heat up.</p> <ul style="list-style-type: none"> ■ Deactivate demo mode.
"Power cut - Process cancelled" appears in the display.	<p>There has been a power cut which has caused a current process to stop.</p> <ul style="list-style-type: none"> ■ Switch the oven off and then back on again. Start the cooking programme again.
12:00 appears in the display.	<p>The power supply was interrupted for longer than 200 hours.</p> <ul style="list-style-type: none"> ■ Reset the time and date.
The message "Maximum operating duration reached" appears unexpectedly in the display.	<p>The oven has been operating for an unusually long time and this has activated the safety switch-off function.</p> <ul style="list-style-type: none"> ■ Select "OK". Touch  to delete "Process finished". The oven will then be ready for use again.
"  Fault XX" appears in the display.	<p>There is a problem that you cannot resolve.</p> <ul style="list-style-type: none"> ■ Call the Miele Service Department.


Problem solving guide

Problem	Possible cause and remedy
The food probe is not recognised by the oven. You cannot set a core temperature.	<ul style="list-style-type: none">■ Check that the food probe is engaged in the socket properly. <p>If the oven still does not recognise the food probe it must be faulty.</p> <p>A replacement food probe can be ordered from Miele or from your Miele dealer.</p>
If the door is opened whilst using Microwave solo (wavy lines), the oven stops making a noise.	This is not a fault. If microwave power is being used the cooling fan will switch off when the door is opened.
A noise can be heard after a cooking process.	The fan remains switched on after a cooking programme (see "Settings - Cooling fan run-on").
An abnormal sound can be heard when the oven is operating in microwave mode.	<ul style="list-style-type: none">■ Check if there are sparks caused by using metal dishes (see "Suitable containers for microwave use").■ Check if the food is covered with aluminium foil. If it is, remove the foil.■ Check if the rack is inside the oven. Always use the glass tray when using the oven with Microwave power.
The oven has switched itself off.	<p>The oven will switch itself off automatically to save energy if no other action is taken within a certain time frame after switching it on or after the end of a cooking programme.</p> <ul style="list-style-type: none">■ Switch the oven back on.

Problem	Possible cause and remedy
Cakes and biscuits are not cooked properly after following the times given in the chart.	<p>A different temperature from the one given in the recipe was used.</p> <ul style="list-style-type: none">■ Select the temperature required for the recipe. <p>The ingredient quantities are different from those given in the recipe.</p> <ul style="list-style-type: none">■ Double check the recipe. The addition of more liquid or more eggs makes a moister mix which would take longer to cook.
Browning is uneven.	<p>The wrong temperature or shelf level was selected.</p> <ul style="list-style-type: none">■ There will always be a slight unevenness. If the unevenness is pronounced, check that the correct temperature and shelf level have been selected. <p>The material or colour of the baking tin is not suitable for the oven function.</p> <p>Bright shiny tins are not very suitable. Try using a different tin next time. These reflect heat, which means that the heat does not penetrate to the food effectively, resulting in uneven or poor browning.</p> <ul style="list-style-type: none">■ Dark matt tins are best for baking.

Problem solving guide

Problem	Possible cause and remedy
The food is not sufficiently heated or is not cooked at the end of a set duration when using Microwave solo  .	<ul style="list-style-type: none">■ Check that you remembered to restart the programme after interrupting a cooking process using microwave power.■ Check that the correct duration was selected for the power level chosen when cooking or reheating with microwave power. The lower the power level the longer the duration.
Food has cooled down too quickly after being reheated or cooked in microwave mode.	<p>Microwaves cause food to heat from the outside first. This heat then moves towards the middle of the food. If food is cooked at a high power level it is possible that the heat may not have reached the centre of the food. Food may be hot on the outside but cool in the middle. When reheating food with different densities, such as plated meals, it is sensible to start with a low power level and select a longer reheating duration.</p>
The oven lighting switches off after a short time.	<p>The oven lighting is set to switch off after 15 seconds (default setting). You can change the default setting for this (see "Settings - Lighting").</p>

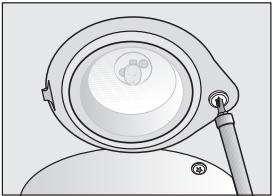Problem	Possible cause and remedy
<p>The oven lighting does not switch on.</p>  <p>The diagram shows a close-up of an oven's interior. A halogen lamp is being removed from its base. A hand is shown using a screwdriver to turn the lamp counter-clockwise. The lamp has a small circular logo with a stylized 'G' on it.</p>	<p>The halogen lamp needs replacing.</p> <p>Danger of burning. Make sure the oven heating elements are switched off and cool.</p> <ul style="list-style-type: none">■ Disconnect the appliance from the mains. <p>The lamp cover consists of two parts: a glass piece and a mounting. Hold the lamp cover securely when removing it so that it does not fall. Place a tea towel over the floor of the oven and the open door to protect them.</p> <ul style="list-style-type: none">■ Remove the screw to the lamp cover using a T20 Torx screwdriver, and take off the cover. <p>Do not touch the halogen lamp with bare fingers. Please follow the manufacturer's instructions.</p> <ul style="list-style-type: none">■ Pull the halogen lamp out.■ Replace it with a new halogen lamp (Osram 66725, 230 V, 25 W, G9). It must be thermally stable up to 300 °C.■ Replace the glass piece in the mounting, and refit the lamp cover. Make sure that the lug on the mounting is correctly located in the notch in the roof of the oven, then screw the mounting back into place.■ Reconnect the oven to the electricity supply.

After Sales / Guarantee

After sales service

In the event of any faults which you cannot remedy yourself, or if the appliance is under guarantee, please contact

- your Miele Dealer
- or
- The Miele service department.

See end of manual for contact details.

When contacting your Dealer or Miele, please quote the model and serial number of your appliance.

This information is given on the data plate, visible on the front frame of the oven, with the door fully open.

Please note that telephone calls may be monitored and recorded for training purposes.

N.B. A call-out charge will be applied to service visits where the problem could have been resolved as described in these instructions.

Guarantee

For further information on the appliance guarantee specific to your country please contact Miele. See end of manual for contact details.

All electrical work should be carried out by a suitably qualified and competent Miele approved service technician in strict accordance with local and national safety regulations.

This appliance is supplied with a power cord without plug for fixed connection to a 220 V, 60 Hz power system.


Fuse rating of branch circuit should be 20 A.

The voltage and connected load are given on the data plate situated at the front of the oven interior. Please ensure that these match the household mains supply.

For extra safety it is advisable to install a suitable residual current device (RCD) / ground fault interrupter (GFI). Contact a qualified electrician for advice.

If the cord is damaged a new cord must be fitted by a Miele approved service technician.

Power Supply Cord

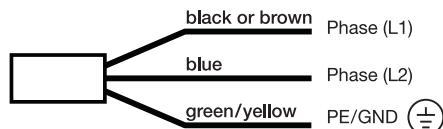

2~220 V 60 Hz


WARNING
THIS APPLIANCE MUST BE
GROUNDED

Building-in diagrams

Appliance and niche dimensions

Dimensions are given in mm.

Installation in a tall unit

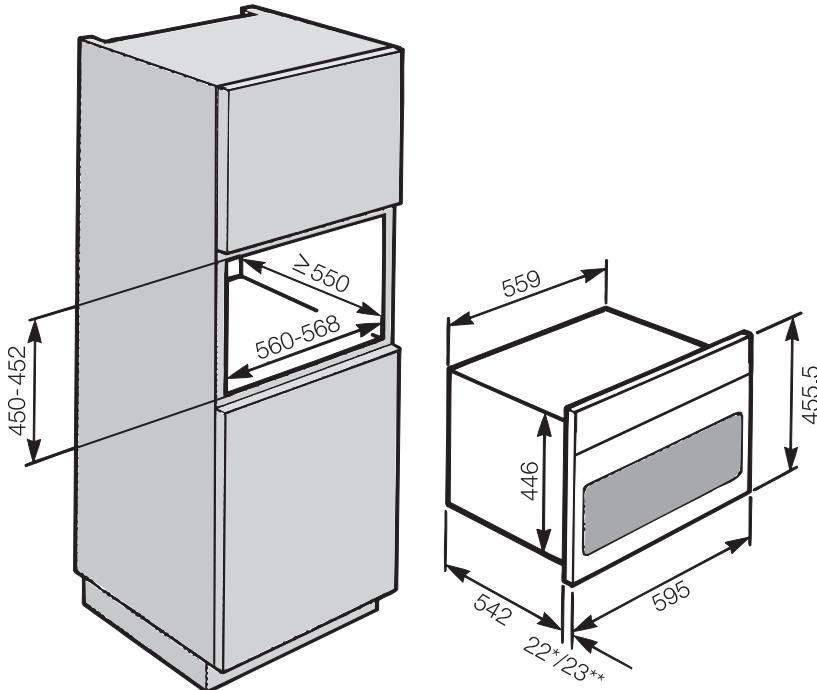


* Ovens with glass front

** Ovens with metal front

Installation in a base unit

If fitted underneath a hob, the installation instructions for the hob must also be taken into account.

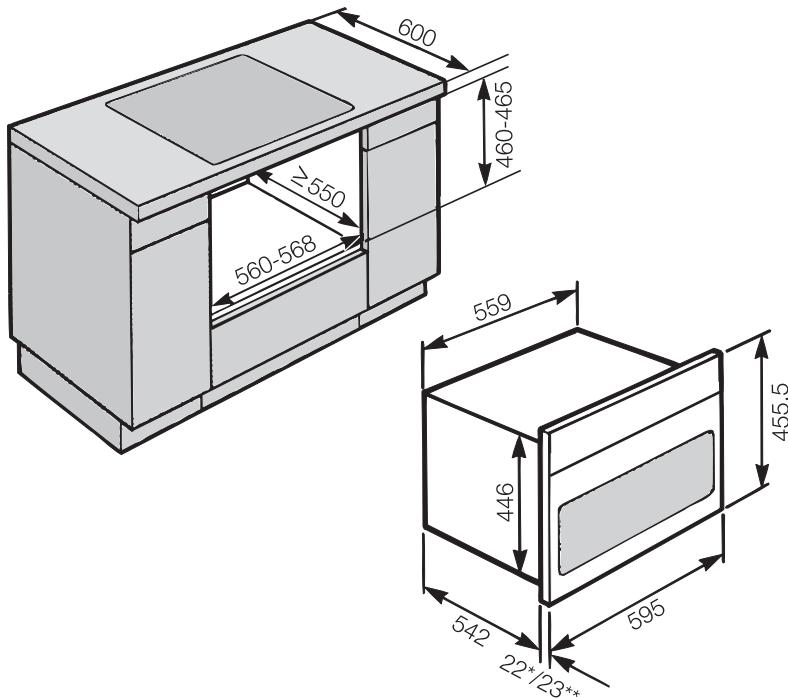


* Ovens with glass front

** Ovens with metal front

Building-in diagrams

Front dimensions

Dimensions are given in mm.

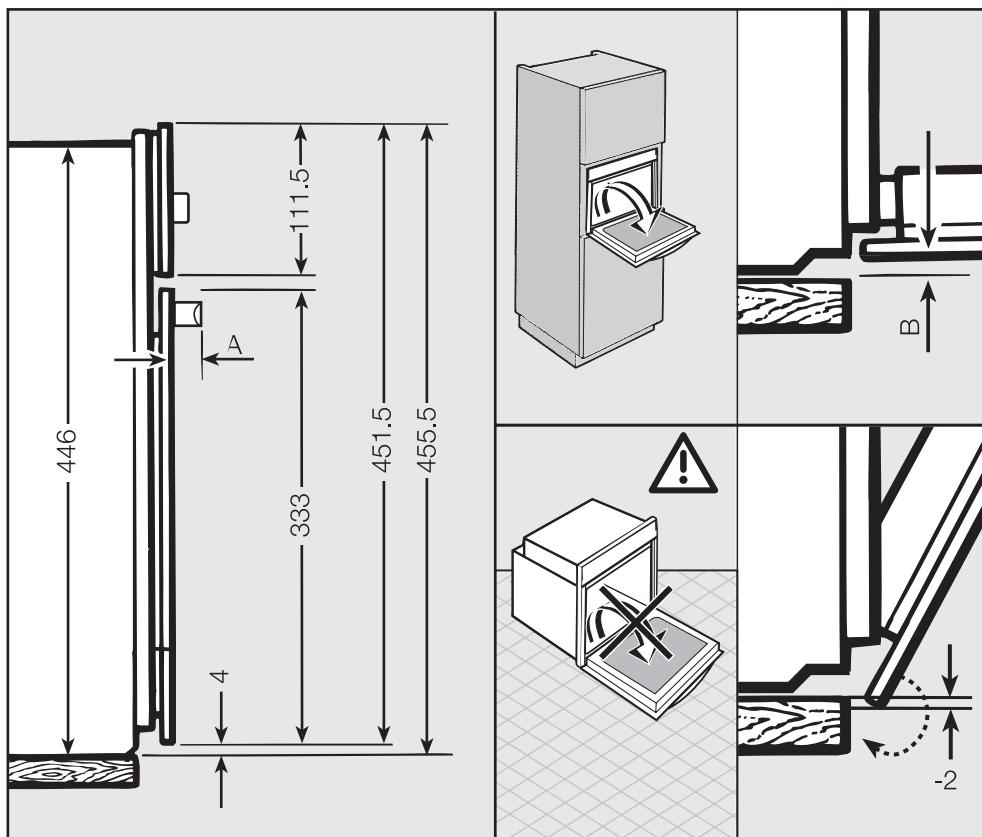


A H6800BM: 42 mm

B Ovens with glass front: 2.2 mm
Ovens with metal front: 1.2 mm

⚠ The oven must not be operated until it has been correctly installed in its housing unit.


- Connect the mains cable from the oven to the isolator.
- Push the oven into the housing unit up to the oven trim and align it.

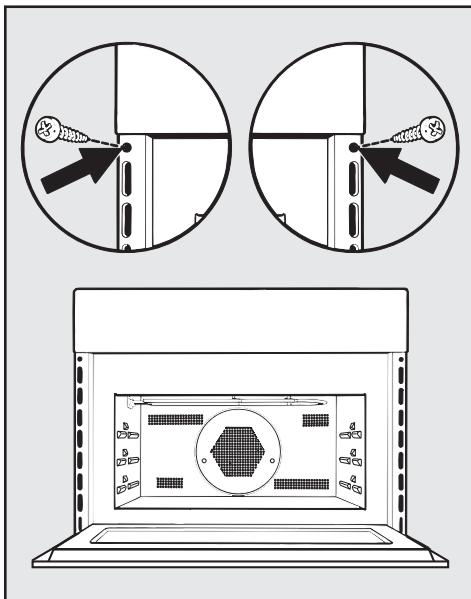

- Open the door and use the screws supplied to secure the oven to the side walls of the housing unit through the holes in the oven trim.

Miele@home

(depending on country)

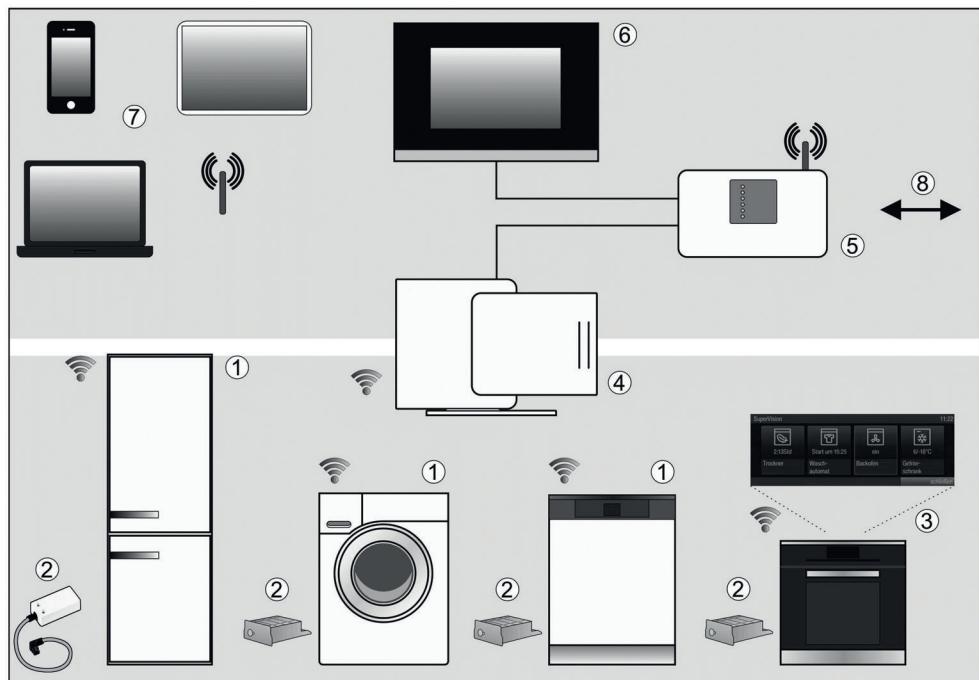

- ① Miele@home communication enabled appliance
- ② Miele@home communication stick XKS3000Z or communication module XKM3000Z
- ③ Miele@home communication enabled Master appliance with SuperVision functionality
- ④ Miele@home Gateway XGW3000
- ⑤ WiFi router
- ⑥ Connection to a Home automation system
- ⑦ Smartphone, Tablet PC, Laptop
- ⑧ Internet connection

Please note that the Miele@home and SuperVision system is currently only available in selected countries.

This appliance ①/③ is network enabled and can be connected to the Miele@home system via a communication module or communication stick ② and a conversion kit where required.

The Miele@home enables network enabled appliances to send information via the household wiring network to a master appliance ③ such as an oven with SuperVision functionality, about their operational status, as well as information about the progress of the programme.

Displaying information and controlling appliances

- SuperVision master appliance ③
The status of other signed on appliances can be shown in the display of some communication enabled appliances.
- Mobile appliance ⑦
A PC, Notebook, Tablet PC or a Smartphone can be used within the reception area of a household WLAN ⑤ to display status information about signed on appliances and carry out certain functions.
- Household network ⑥
The Miele@home system enables smart living. The Miele@home Gateway ④ allows other network enabled appliances to integrate into the household bus system.

In Germany, network enabled appliances can be integrated into

the QIVICON Smart Home Platform instead of the Miele@home Gateway (www.qivicon.de).

SmartStart (depending on household appliance)

Smart grid enabled appliances can be started automatically at a time when electricity costs are favourable or when a sufficient supply of electricity is available (e.g. from a solar power system).

Optional accessories (depending on household appliance)

- Communication module XKM3000Z or communication stick XKS3000Z
- Conversion kit for communication system XKV
- Miele@home Gateway XGW3000

These accessories are supplied with their own installation and operating instructions.

Further information

Further information regarding Miele@home is available on the internet and in the instruction manuals of the various Miele@home components.

Copyright and licences

Miele uses software to operate and control the appliance.

The copyright authorisation from Miele and other relevant software suppliers (e.g. Adobe) must be respected.

Miele and their suppliers reserve any rights to the software components.

In particular the following are prohibited:

- Copying and distribution,
- Modifications and derivations,
- Decompilation, reverse engineering, disassembling and other such reductions of the software.

This product contains Adobe® Flash® Player software under licence from Adobe Systems Incorporated, Adobe Macromedia Software LLC. Adobe and Flash are registered trademarks of Adobe Systems Incorporated.

Components which fall under GNU General Public Licence and further Open Source licences are integrated into the software.

An overview of the integrated Open Source components and a copy of the current licence can be obtained at www.miele.com/device-software-licences. You will need to enter the specific product name.

Miele will provide the source code for all components of software licensed under the GNU General Public Licence and comparable Open Source licences.

For source code requests please email info@miele.com.



Miele Saudi Arabia
AWAD BADI NAHAS TRADING CO. LTD

Head Office:
Jeddah

P.O. Box 11529 Jeddah 21463
Tel. +966 12 2560888, Fax. +966 12 2560555
Hotline for customer care: 920003240
Website: www.awadnahas.com

Branches:

Jeddah

Madina Road
Tel. +966 12 6970060, Fax. +966 12 6970012
Jeddah
Sitteen Street
Tel. +966 12 6611675, Fax. +966 12 6606852

Jeddah

Miele Gallery
Al Thanyan Group Building, Al-Madina Road,
Near, Al Rowdah District, Jeddah
Tel. +966 12 6989339 Ext. 100

Fax. +966 12 6989339 Ext. 200

Riyadh

Olaya Street
Tel. +966 11 2013501, Fax. +966 11 2013502

Taif

Hadiya Street
Tel. +966 12 7327001, Fax. +966 12 7369596
Khobar
Al Zahran Road
Tel. +966 13 8646150, Fax. +966 13 8646190

Miele United Arab Emirates

Miele Appliances Ltd.
Gold & Diamond Park
Office No. 6-217
Sheikh Zayed Road
P.O. Box 114782 - Dubai
United Arab Emirates

Tel. +971 4 3044 999
Fax. +971 4 3418 852
800-MIELE (64353)
E-Mail: info@miele.ae
Website: www.miele.ae
Webshop: www.shop.miele.ae

Miele Gallery Dubai

Sama Tower (Ground Floor)
Dubai World Trade Center
Roundabout
Dubai

Miele Service Centre

Shed No. 9, Block B,
Jamal Al Ghurair Warehouses
Al Quoz Industrial III
Dubai

Manufacturer: Miele & Cie. KG, Carl-Miele-Straße 29, 33332 Gütersloh, Germany



Miele

H6800BM

CE

en-AE, SA

M.-Nr. 10 231 151 / 00