

Bosch Hob instructions

1. To use any of the rings, press down and turn the gas control anti-clockwise for that ring to the highest setting (9 o'clock position) and the ring should light.
2. If the ring does not spark, check the extreme right hand ignition button. The button should be raised, if this is not the case press down and twist clockwise which should make it pop up and stay up. The rings should then spark.
3. If there is no gas coming out of the burners:
 - a. Check if the gas supply to the lodge is working – turn on the kitchen sink hot water tap and listen for the boiler igniting
 - b. If the boiler does not light, there may be a problem with the gas supply – please contact Retallack reception
 - c. If there is gas to the boiler but not to the hob, depress the ignition button (point 2 above), then press and turn it to release. It may be necessary to do this twice to activate the gas supply